

ODP 100 PPS 10,000 Lb Drum Puller

Pulling Control

The Following instructions explain how to properly set up the unit.

1. Release the hydraulic over spin brake.
2. Set Job Pull Settings on the Pull Computer.
3. Return computer to Main Screen.
4. Increase Throttle to 1500 RPM or desired setting.
5. Squeeze trigger and move Joystick to take up.
6. Adjust line speed with joystick.
7. Return joystick to neutral to stop pull and set holding brake.

System Brakes

The internal braking system is spring applied / hydraulic release on the drive motors. When the joystick is in neutral, the brakes are automatically applied

Level wind

This unit is equipped with manual post style level wind. Operator must control during pull as needed for even take up of rope on reel.

LUBRICATION AND MAINTENANCE

This unit has no set PM schedule beyond that of the engine manufacturers suggested maintenance schedule. This unit should be visually inspected prior to each use while repairing any and all discrepancies prior to use.

