

**ODP60 XS
6,000 Lb Drum Puller**

Rope Payout Procedure (Free Wheel)

When beginning the rope payout feature, be sure that the engine is turned off. Ensure that all tension is removed from the pulling rope before attempting to remove drive pin.

Adjust reel brake to provide tension to the reel of rope. Disengage the drive dog from the sprocket drive. Begin to pull rope through the blocks while continuing to adjust the over spin brake. When the rope install is completed, engage the drive dog to the sprocket drive. Manual rotation of the rope reel may be needed to properly engage drive dog. Replace retaining pin.

Performance Chart

Refer to the performance chart for proper hydraulic pressure as it directly relates to conductor tension. ***This chart is located on the control panel of the unit.***