

ODP 40-4 HRC



HOGG & DAVIS, Inc.

The information, specifications, and illustrations in this manual are on the basis of information available at the time it was written. The specifications, torque values, pressures of operation, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service of the given product.

For the complete and most current information, contact:

Hogg & Davis, Inc
P.O. Box 405 / 3800 Eagle Loop
Odell, OR 97044-0405
541-354-1001
541-354-1080 Fax

**For most recent manual
version please visit:**

www.hoggdavis.com

**ODP 40-4 HRC
High Rope Capacity
4,000 Lb Four Drum Puller**





Table of Contents

| | |
|--|--------|
| Table of Contents | - 2 - |
| Product Warnings..... | - 3 - |
| General Specifications | - 4 - |
| Setup on the Job | - 8 - |
| Setup of the unit | - 8 - |
| Position of unit..... | - 8 - |
| Jack Stands / Outriggers..... | - 8 - |
| Tie Down/ Brake/ Chock | - 8 - |
| Rope Payout Procedure (Free Wheel)..... | - 9 - |
| Pulling Control..... | - 10 - |
| Pulling Control..... | - 11 - |
| Level wind | - 11 - |
| LUBRICATION AND MAINTENANCE | - 13 - |
| Drawbar inspection | - 14 - |
| 15-15 Warranty | - 15 - |
| Parts and other manufacturer manuals | - 16 - |



ODP 40-4 HRC High Rope Capacity 4,000 Lb Four Drum Puller

Product Warnings

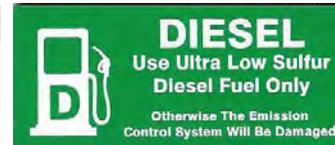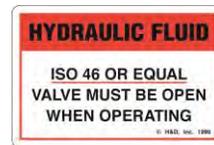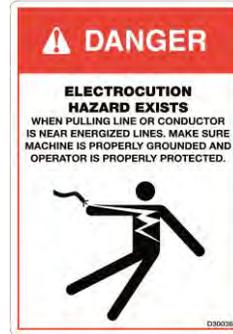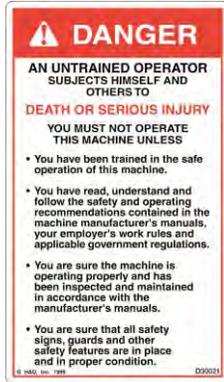

These warning labels and others like it are placed in critical areas of the machine. The warnings are to be read and fully understood prior to operation of the unit.

**ODP 40-4 HRC
High Rope Capacity
4,000 Lb Four Drum Puller**

General Specifications

This unit is designed to install overhead cable/conductor.

- Four Drum Puller
- 4,000 lbs Maximum Line Pull – Single Reel
- 54" Rope Reel Diameter
- Rope Capacity 15,000 ft of 5/8" per reel
- Manual Jack stands (2) Rear – (1) Tongue
- Hydraulic Jack stands (optional)
- Maximum Line Speed 0-4 mph
- Tandem Axle Electric Brakes

ODP 40-4 HRC High Rope Capacity 4,000 Lb Four Drum Puller

YANMAR

INDUSTRIAL / ENGINES / TNV SERIES




Dimensions, Performance Data & Quick Specs

| | |
|---|------------------|
| NET INTERMITTENT POWER (kW/hp) Potencia Neta Intermitente | 34 / 45.6 |
| RATED SPEED (RPM) Velocidad de Regimen | 3000 |
| LENGTH (w/fan) (in/mm) Longitud | 28.6 / 726 w/DFP |
| WIDTH (in/mm) Ancho | 21.9 / 556 w/DFP |
| HEIGHT (in/mm) Altura | 34.0 / 863 w/DFP |

4TNV88C-DYEM

| | |
|--|--|
| SPECIFICATION Especificacion | DYEM |
| CYLINDERS Cilindros | 4 |
| BORE X STROKE Diametro x Carrera | 88 x 90 (mm) 3.46 x 3.54 (in) |
| DISPLACEMENT Cilindrada | 2190 (cc) 133.6 (ci) |
| COMBUSTION TYPE Tipo de Combustion | Common Rail Direct Injection Common Rail de Inyección Directa |
| ASPIRATION Aspiracion | Naturally Aspirated Aspiracion Natural |
| GOVERNOR TYPE Tipo de Gobernador | Electronic Control Electrónico |

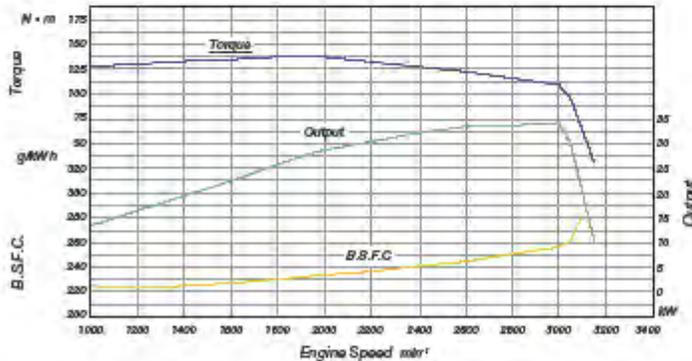


- Lubrication System**
7.4L Capacity Deep Oil Pan
- Electrical System**
12V, 55A Alternator
- Fuel System**
Common Rail System
- Cooling System**
Water Pump, Belt-driven
- Power Take Off**
FWH: SAE #5 t-124
FW: SAE 7.5"

©2014 Yanmar America Corp.
Engine specifications may vary without actual specifications.
IE-4TNV88C-DYEM-500114



**ODP 40-4 HRC
High Rope Capacity
4,000 Lb Four Drum Puller**

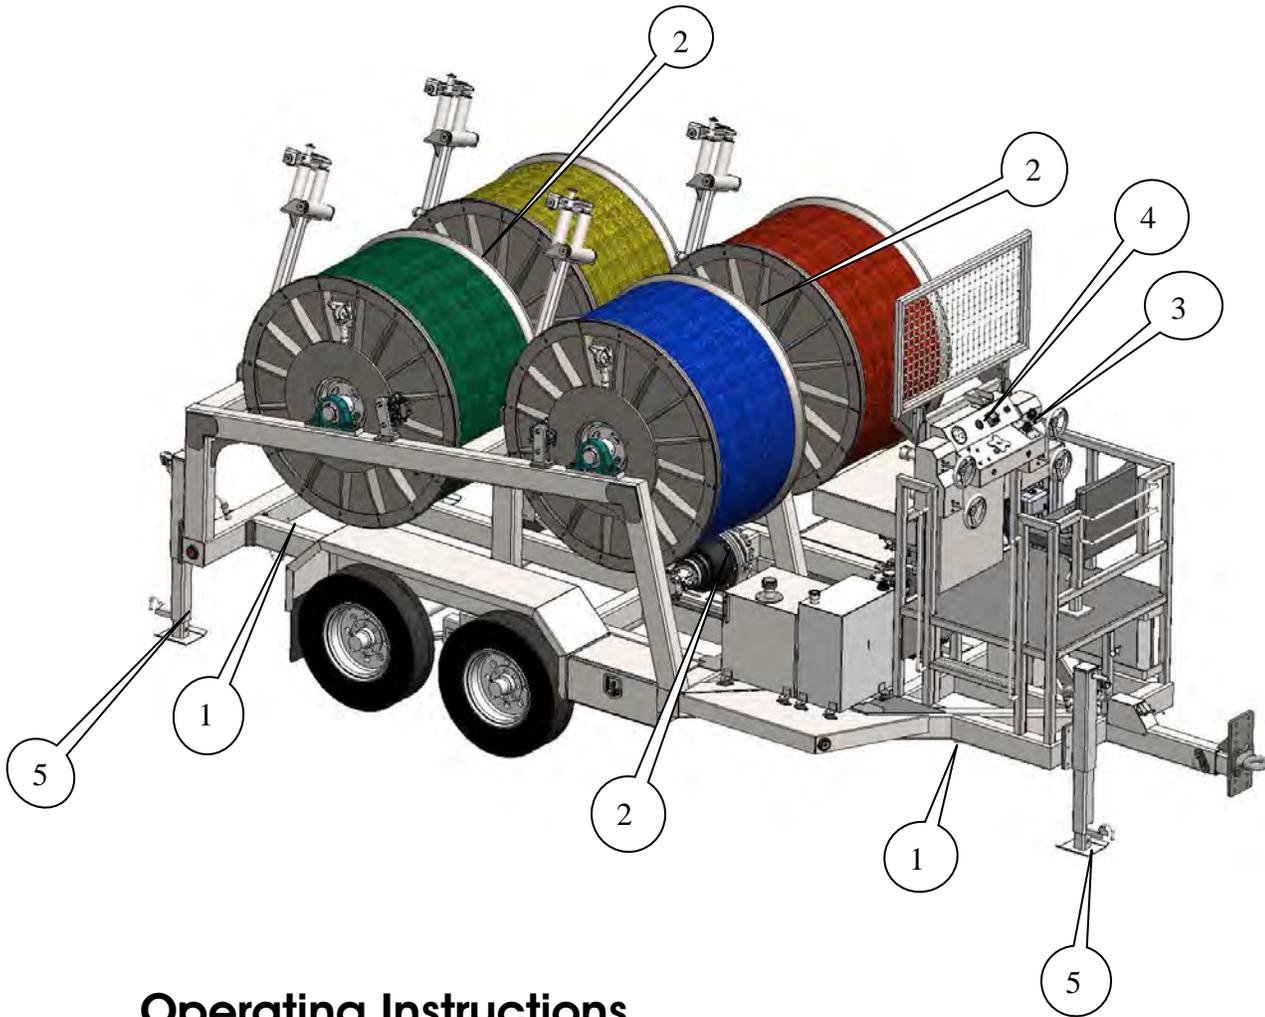


Operating Instructions

All persons operating this machine must read and understand this manual as well as the operating, danger, and warning decals placed on the machine. Failure to read and understand these items subjects the operator and others to DEATH or SERIOUS INJURY.

**ODP 40-4 HRC
High Rope Capacity
4,000 Lb Four Drum Puller**

Operators shall make themselves familiar with the placement of the following operating and safety features of the machine.

1. Grounding Lugs and their placement on Machine
2. Drive Chains and Sprockets
3. Take Up / Pay-Out / Control
4. Engine Controls and Gauges
5. Manual Jack stands (standard)
6. Hydraulic Jack stands (optional)
7. Level wind
8. Tie Down Locations Under frame

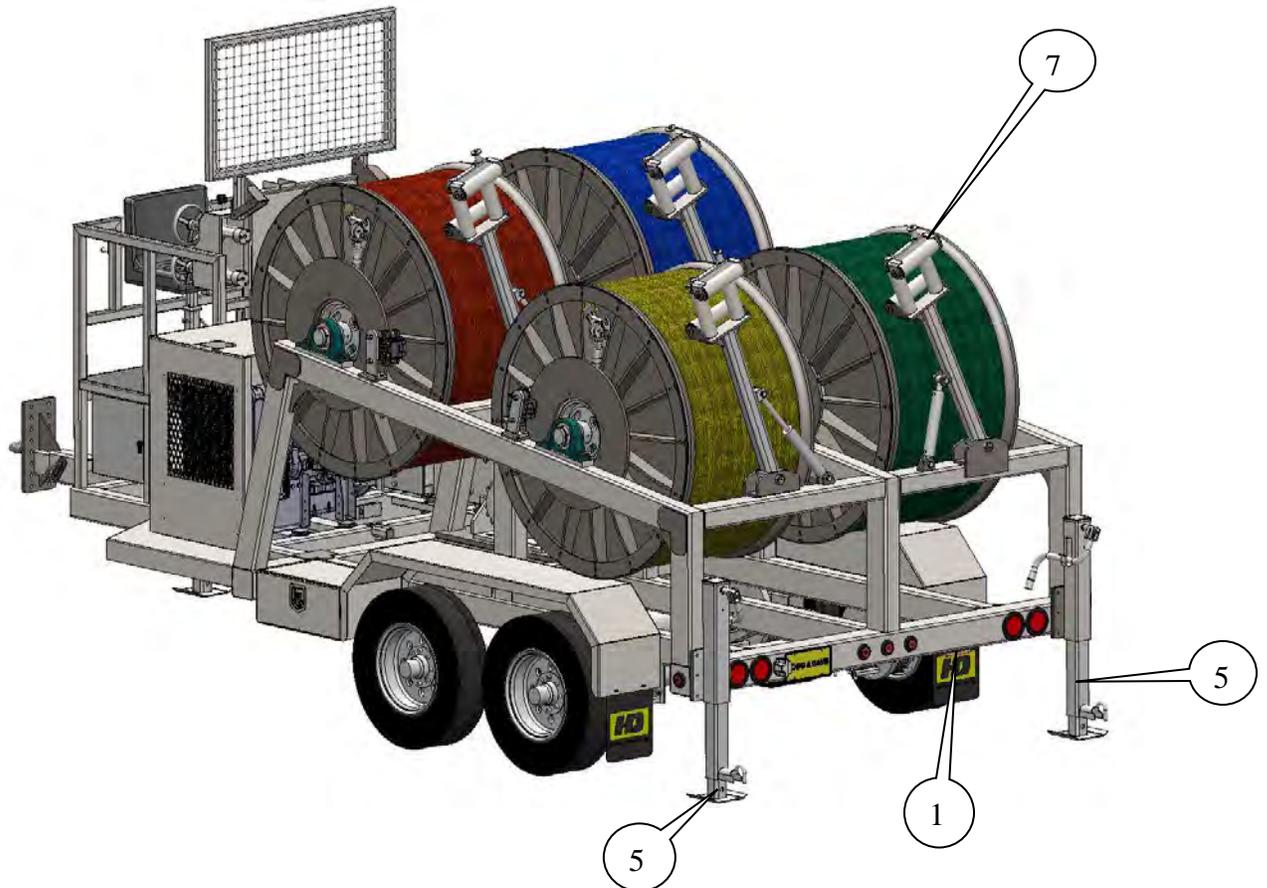

**ODP 40-4 HRC
High Rope Capacity
4,000 Lb Four Drum Puller**

Setup on the Job

Setup of the unit



Position of unit

Position the trailer with the centerline of the trailer in line with the pull. Place the unit at a minimum distance of two times the height of the first block.

Jack Stands / Outriggers

Actuate the rear outriggers to stabilize the trailer. Attempt to level the trailer as much as possible. The outriggers have the ability to raise the tires from the ground, but as a rule they should be used to stabilize the load across all contact points on the ground, i.e. Jack stands, tires, front tongue jack stand.

Tie Down/ Brake/ Chock

Chock all wheels and set brakes (if applicable). It should be noted that a fully loaded trailer may exceed the tension desired during the pull. As the pull progresses, the weight of the trailer may increase or decrease, therefore proper securing procedures should be followed during operation. This unit is equipped with tie – down eyes for staking to the ground and it is recommended that the unit stay secured to the tow vehicle whenever possible.

**ODP 40-4 HRC
High Rope Capacity
4,000 Lb Four Drum Puller**

Rope Payout Procedure (Free Wheel)

When beginning the rope payout feature, be sure that the engine is turned off. Ensure that all tension is removed from the pulling rope before attempting to remove drive pin.

Adjust reel brake to provide tension to the reel of rope. Disengage the drive pin from reel to be free wheeled. Begin to pull rope through the blocks while continuing to adjust the over spin brake. When the rope install is completed, re-apply over spin brake to maximum pressure. Rotation of the rope reel shaft may be needed to properly install drive pin. With engine at idle slowly operate in take-up mode to engage the drive pin of reel to be pulled.

Refer to the performance chart for proper hydraulic pressure as it directly relates to conductor tension. ***This chart is located on the control panel of the unit.***

******These instructions assume that the operator has set the proper drive pin for the reel to be pulled in. All other reels are to be disengaged with the over spin brake fully applied.***

**ODP 40-4 HRC
High Rope Capacity
4,000 Lb Four Drum Puller**

Pulling Control

The following instructions explain how to properly set up the unit when it is to be used as a puller and have a pulling rope with **NO TENSION. DO NOT FOLLOW THESE INSTRUCTIONS WHEN YOU HAVE A ROPE UNDER TENSION!!**

1. Apply the brake.
2. Turn the Hydraulic Pressure knob CCW to release pressure
3. Increase to approximately full throttle.
4. Begin to actuate the joystick to take up.
5. Turn the Hydraulic Pressure Control knob and set to 800 psi.
6. Release the joystick into the neutral position.
7. Wait for confirmation from the tension side of the job for readiness.
8. Release the brake.
9. Increase throttle to full.
10. As the rope reel begins to take up, increase the hydraulic to the maximum line pull desired. As the rope diameter increases on the reel, it might be necessary to adjust the Hydraulic Control Knob to keep the pull moving.
11. Adjust joystick for line speed as also desired.
12. Operate level wind as needed.
13. To stop the pull, place control into neutral while applying the brake.

**ODP 40-4 HRC
High Rope Capacity
4,000 Lb Four Drum Puller**

Pulling Control

The following instructions explain how to properly set up the unit when it is to be used as a puller and have a pulling rope UNDER TENSION. Use of these instructions assumes that all controls are at the same setting when the pulled previously stopped.


1. Begin to slightly actuate the joystick to take up.
2. Release the brake.
3. Actuate the joystick to take up as desired. (if reel does not begin to move, slightly increase the Hydraulic Pressure Control until it does.)

Level wind

This unit is equipped with individual hydraulic level wind arms. Operation is by individual switch to corresponding reel.

IF MACHINE IS TO BE USED FOR FIBRE OPTIC INSTALLATION, REFER TO THE CABLE MANUFACTURER FOR PROPER TENSIONING TECHNIQUES. FAILURE TO CONSULT MANUFACTURER MAY DAMAGE CABLE AND VOID WARRANTY.

**ODP 40-4 HRC
High Rope Capacity
4,000 Lb Four Drum Puller**

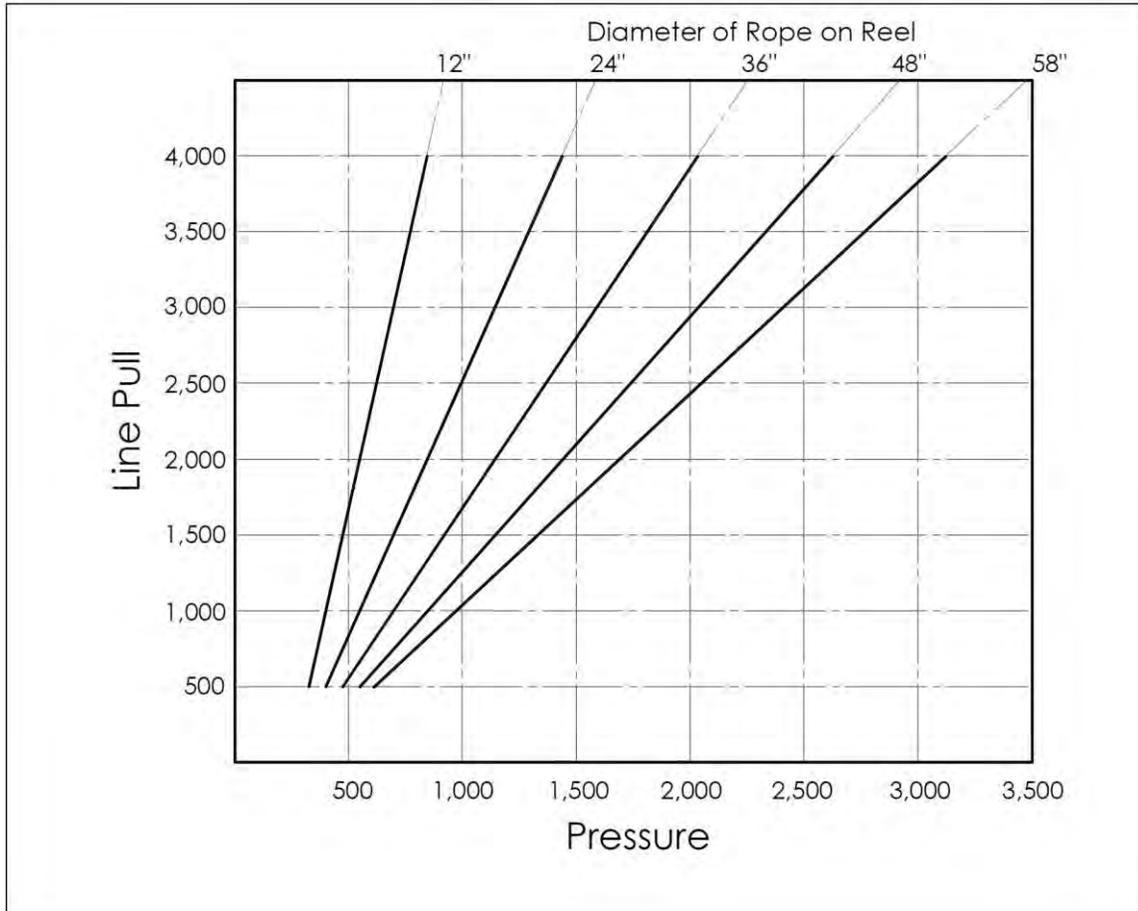

WARNING

Failure to understand and follow the line pull graph can result in failure of reels and other major components.

**ODP 40-4 HRC
High Rope Capacity
4,000 Lb Four Drum Puller**

LUBRICATION AND MAINTENANCE

This unit has no set PM schedule beyond that of the engine manufacturers suggested maintenance schedule. This unit should be visually inspected prior to each use while repairing any and all discrepancies prior to use.

Items to be inspected prior to use are:

- Drive Chains and sprockets for wear and slack
- Pintle eye (excessive wear)
- Safety Chains (wear / damage)
- All welds and seams
- Loose or missing fasteners (bolts, nuts, set screws)
- Loose or leaking hydraulic hoses
- Damaged or worn hydraulic hoses
- Brake calipers (loose fittings, hoses, worn linings)
- Brake Pads
- Brake rotors
- Tires and trailer brakes
- Engine and hydraulic system fluid levels.

Lubrication Schedule

- Drive chain and sprockets (daily)
- Reel Shaft Bearings (as needed)
- Reel Bearings (as needed)
- Engine oil as per manufacturers recommendation
- Idler sprocket (daily)
- Axle Bearings (as needed)

ODP 40-4 HRC
High Rope Capacity
4,000 Lb Four Drum Puller

Drawbar inspection

- Regularly inspect the drawbar for wear and damage. If wear exceeds 1/8", replace the drawbar eye.
- Check all drawbar mounting fasteners for proper torque.
- Do not modify or add to the product.
- Do not weld on this product without written permission from the factory.
- Be sure the drawbar size is compatible with the coupling device on the tow vehicle.
- Do not damage the coupling components. Be particularly careful during coupling and uncoupling.
- Inspect the coupling device on the tow vehicle for proper locking prior to use.
- Consult OSHA and DOT regulations and American Trucking Association guidelines for complete operating procedures.



**ODP 40-4 HRC
High Rope Capacity
4,000 Lb Four Drum Puller**

15-15 Warranty

Hogg and Davis, Inc. warrants its trailers against defects in material or workmanship for period of 15 months from the date of shipment from Hogg and Davis, Inc. (see General Conditions & Exceptions). Hogg and Davis, Inc. will replace, free of charge, F.O.B. Hogg and Davis, Inc. factory, such parts or parts thereof, that in their judgment have proven defective. Additionally, Hogg and Davis, Inc. will pay reasonable and customary labor charges when defective part is replaced, installed or repaired by a fully authorized Hogg and Davis, Inc. trailer dealer at his facility.

Warranty credit will be issued only upon receipt and inspection of defective parts of at the Hogg and Davis, Inc. factory.

Hogg and Davis, Inc. warrants its trailer main frame assemblies (except pintle eyes or other towing attachments, spindles and axles) against defects in material or workmanship for a period of **15 years** from the date of shipment from Hogg and Davis, Inc. (see General Conditions & Exceptions). Hogg and Davis, Inc. shall replace or repair, in a manner as it shall determine, free of charge, F.O.B. factory, any parts or parts thereof, that in its judgment have proven defective. Additionally, Hogg and Davis, Inc. will pay reasonable and customary labor charges when defective part is replaced, installed or repaired by a fully authorized Hogg and Davis, Inc. trailer dealer at his facility

General Conditions & Exceptions

All warranties, options and representations made herein shall apply only provide such equipment shall not have been subject to misuse, negligence or accident and has been operated in accordance with factory approved procedures. This warranty does not obligate Hogg and Davis, Inc. or its authorized dealers to bear the cost of parts obtained from or labor performed by unauthorized sources. Nor does it obligate Hogg and Davis, Inc. **or its** authorized dealers to bear the cost of transportation of parts or equipment for repair or **replacement purposes**. This warranty is in lieu of any other warranty, expressed **or implied**, or any other obligation or liability on the part of Hogg and Davis, Inc and no persons or entity is authorized to make any representation beyond those stated herein.

Hogg and Davis, Inc. shall not be held liable for consequential damage of any kind. Hogg and Davis, Inc. also reserves the right to make changes and improvements in its products without incurring any obligation to install any such changes or improvements upon its products previously manufactured.

The above warranty shall not be misconstrued to mean warranty of tires, clutch, transmission assemblies or customer requested accessory equipment other than the warranty extended by their respective manufactures to Hogg and Davis, Inc. In addition, friction, drive rollers are warranted only to extent of bonding failure. All warranties, options and representations made herein are applicable to the original end-user of the product and are not sellable or transferable in any manner.

Section 2

YANMAR WARRANTIES

| | Page |
|--|------|
| YANMAR Limited Warranty | 2-3 |
| What is Covered by this Warranty? | 2-3 |
| How Long is the Warranty Period? | 2-3 |
| What the Engine Owner must Do: | 2-3 |
| To Locate an Authorized YANMAR Industrial Engine Dealer or Distributor: | 2-4 |
| What YANMAR will Do: | 2-4 |
| What is not Covered by this Warranty? | 2-4 |
| Warranty Limitations: | 2-5 |
| Warranty Modifications: | 2-5 |
| Questions: | 2-5 |
| Emission System Warranty | 2-6 |
| YANMAR Co., Ltd. Limited Emission Control System Warranty - USA Only | 2-6 |
| Your Warranty Rights and Obligations: | 2-6 |
| Manufacturer's Warranty Period:..... | 2-6 |
| Warranty Coverage: | 2-7 |
| Warranted Parts: | 2-7 |
| Exclusions: | 2-8 |
| Owner's Warranty Responsibilities:..... | 2-8 |

YANMAR LIMITED WARRANTY

What is Covered by this Warranty?

YANMAR warrants to the original retail purchaser that a new YANMAR TNV series industrial engine will be free from defects in material and/or workmanship for the duration of the warranty period.

Note: YANMAR engines may be equipped with external components including, but not limited to: wiring harnesses, electrical devices, control panels, radiators, air filters, fuel filters, and/or exhaust systems that are supplied and/or installed by manufacturers other than YANMAR. For warranty information on such external components, please contact the machine or component manufacturer directly or see your authorized YANMAR dealer or distributor.

This warranty is provided in lieu of all other warranties, express or implied. YANMAR specifically disclaims any implied warranties of merchantability or fitness for a particular purpose, except where such disclaimer is prohibited by law. If such disclaimer is prohibited by law, then implied warranties shall be limited in duration to the life of the express warranty.

How Long is the Warranty Period?

The YANMAR standard limited warranty period runs for a period of **twenty-four (24) months or two-thousand (2000) engine operation hours**, whichever occurs first. An extended limited warranty of thirty-six (36) months or three thousand (3000) engine operating hours, whichever occurs first, is provided for these specific parts only: the cylinder block, cylinder head, crankshaft forging, connecting rods, flywheel, flywheel housing, camshaft, timing gear, and gear case. The warranty period for both the standard limited warranty and the extended limited warranty (by duration or operation hours) begins on the date of delivery to the original retail purchaser and is valid only until the applicable warranted duration has passed or the operation hours are exceeded, whichever comes first.

What the Engine Owner must Do:

If you believe your YANMAR engine has experienced a failure due to a defect in material and/or workmanship, you must contact an authorized YANMAR industrial engine dealer or distributor within thirty (30) days of discovering the failure. You must provide proof of ownership of the engine, proof of the date of the engine purchase and delivery, and documentation of the engine operation hours. Acceptable forms of proof of delivery date include, but are not limited to: the original warranty registration or sales receipts or other documents maintained in the ordinary course of business by YANMAR dealers and/or distributors, indicating the date of delivery of the YANMAR product to the original retail purchaser. This information is necessary to establish whether the YANMAR product is still within the warranty period. Thus, YANMAR strongly recommends you register your engine as soon as possible after purchase in order to facilitate any future warranty matters.

You are responsible for the transportation of the engine to and from the repair location as designated by YANMAR.

YANMAR limited warranty - continued**To Locate an Authorized YANMAR Industrial Engine Dealer or Distributor:**

You can locate your nearest authorized YANMAR industrial engine dealer or distributor by visiting the YANMAR Co., Ltd. website at:

<http://www.yanmar.co.jp> (The Japanese language page will be displayed.) For English language “click” on “English Page.”)

- “Click” on “Network” in the website heading to view the “Yanmar Worldwide Network.”
- Choose and “Click” on the desired product group.
- “Click” on the Icon closest to your region.
- “Click” on the desired country or associate company to locate your nearest authorized YANMAR industrial engine dealer or distributor.
- You may also contact YANMAR by clicking on “Inquiry” in the website heading and typing in your question or comment.

What YANMAR will Do:

YANMAR warrants to the original retail purchaser of a new YANMAR engine that YANMAR will make such repairs and/or replacements at YANMAR’s option, of any part(s) of the YANMAR product covered by this warranty found to be defective in material and/or workmanship. Such repairs and/or replacements will be made at a location designated by YANMAR at no cost to the purchaser for parts or labor.

What is not Covered by this Warranty?

This warranty does not cover parts affected by or damaged by any reason other than defective materials or workmanship including, but not limited to, accident, misuse, abuse, “Acts of God,” neglect, improper installation, improper maintenance, improper storage, the use of unsuitable attachments or parts, the use of contaminated fuels, the use of fuels, oils, lubricants, or fluids other than those recommended in your YANMAR Operation Manual, unauthorized alterations or modifications, ordinary wear and tear, and rust or corrosion. This warranty does not cover the cost of parts and/or labor required to perform normal/scheduled maintenance on your YANMAR engine. This warranty does not cover consumable parts such as, but not limited to, filters, belts, hoses, fuel injector nozzles, lubricants and cleaning fluids. This warranty does not cover the cost of shipping the product to or from the warranty repair facility.

*YANMAR limited warranty - continued***Warranty Limitations:**

The foregoing is YANMAR's only obligation to you and your exclusive remedy for breach of warranty. Failure to follow the requirements for submitting a claim under this warranty may result in a waiver of all claims for damages and other relief. **In no event shall YANMAR or any authorized industrial engine dealer or distributor be liable for incidental, special or consequential damages.** Such consequential damages may include, but not be limited to, loss of revenue, loan payments, cost of rental of substitute equipment, insurance coverage, storage, lodging, transportation, fuel, mileage, and telephone costs. The limitations in this warranty apply regardless of whether your claims are based on breach of contract, tort (including negligence and strict liability) or any other theory. Any action arising hereunder must be brought within one (1) year after the cause of action accrues or it shall be barred. Some states and countries do not allow certain limitations on warranties or for breach of warranties. **This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.** Limitations set forth in this paragraph shall not apply to the extent that they are prohibited by law.

Warranty Modifications:

Except as modified in writing and signed by the parties, this warranty is and shall remain the complete and exclusive agreement between the parties with respect to warranties, superseding all prior agreements, written and oral, and all other communications between the parties relating to warranties. **No person or entity is authorized to give any other warranty or to assume any other obligation on behalf of YANMAR, either orally or in writing.**

Questions:

If you have any questions or concerns regarding this warranty, please call or write to the nearest authorized YANMAR industrial engine dealer or distributor or other authorized facility.

EMISSION SYSTEM WARRANTY

YANMAR CO., LTD. LIMITED EMISSION CONTROL SYSTEM WARRANTY - USA ONLY

Your Warranty Rights and Obligations:

■ **California**

The California Air Resources Board (CARB), the Environmental Protection Agency (EPA) and YANMAR Co., Ltd. hereafter referred to as YANMAR, are pleased to explain the **emission control system warranty** on your industrial compression-ignition engine. In California, model year 2000 or later off-road compression-ignition engines must be designed, built and equipped to meet the state’s stringent anti-smog standards. In all states, 1998 and later non-road compression-ignition engines must be designed, built and equipped to meet the United States EPA emissions standards. YANMAR warrants the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system, Electronic Control Unit, Exhaust Gas Recirculation (EGR) system, after treatment system (DPF) and the air induction system. Also included may be hoses, belts, connectors and other emission-related assemblies.

Where a warrantable condition exists, YANMAR will repair your non-road compression-ignition engine at no charge to you including diagnosis, parts and labor.

Manufacturer’s Warranty Period:

The model year 1998 or later certified and labeled non-road compression-ignition engines are warranted for the periods listed below. If any emission-related part on your engine is found to be defective during the applicable warranty period, the part will be replaced by YANMAR.

| If your engine is certified as | And its maximum power is | And its rated speed is | Then its warranty period is |
|----------------------------------|--------------------------|------------------------|--|
| Variable speed or constant speed | kW < 19 | Any speed | 1,500 hours or two (2) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of two (2) years. |
| Constant speed | 19 ≤ kW < 37 | 3,000 rpm or higher | 1,500 hours or two (2) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of two (2) years. |
| Constant speed | 19 ≤ kW < 37 | Less than 3,000 rpm | 3,000 hours or five (5) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of five (5) years. |
| Variable speed | 19 ≤ kW < 37 | Any speed | 3,000 hours or five (5) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of five (5) years. |
| Variable speed or constant speed | kW ≥ 37 | Any speed | 3,000 hours or five (5) years whichever comes first. In the absence of a device to measure the hours of use, the engine has a warranty period of five (5) years. |

Limited emission control system warranty - USA only - continued**Warranty Coverage:**

This warranty is transferable to each subsequent purchaser for the duration of the warranty period. Repair or replacement of any warranted part will be performed at an authorized YANMAR industrial engine dealer or distributor.

Warranted parts not scheduled for replacement as required maintenance in the operation manual shall be warranted for the warranty period. Warranted parts scheduled for replacement as required maintenance in the operation manual are warranted for the period of time prior to the first scheduled replacement. Any part repaired or replaced under warranty shall be warranted for the remaining warranty period.

During the warranty period, YANMAR is liable for damages to other engine components caused by the failure of any warranted part during the warranty period.

Any replacement part which is functionally identical to the original equipment part in all respects may be used in the maintenance or repair of your engine, and shall not reduce YANMAR's warranty obligations. Add-on or modified parts that are not exempted may not be used. The use of any non-exempted add-on or modified parts shall be grounds for disallowing a warranty.

Warranted Parts:

This warranty covers engine components that are a part of the emission control system of the engine as delivered by YANMAR to the original retail purchaser. Such components may include the following:

- Fuel injection system
- Electronic control system
- Cold start enrichment system
- Intake manifold
- Turbocharger systems
- Exhaust manifold
- EGR system
- Positive crankcase ventilation system
- After treatment system (Diesel Particulate Filter)
- Hoses, belts, connectors and assemblies associated with emission control systems

Since emissions-related parts may vary slightly between models, certain models may not contain all of these parts and other models may contain the functional equivalents.

Limited emission control system warranty - USA only - continued**Exclusions:**

Failures other than those arising from defects in material and/or workmanship are not covered by this warranty. The warranty does not extend to the following: malfunctions caused by abuse, misuse, improper adjustment, modification, alteration, tampering, disconnection, improper or inadequate maintenance or use of non-recommended fuels and lubricating oils; accident-caused damage, and replacement of expendable items made in connection with scheduled maintenance. YANMAR disclaims any responsibility for incidental or consequential damages such as loss of time, inconvenience, loss of use of equipment/engine or commercial loss.

Owner's Warranty Responsibilities:

As the engine owner, you are responsible for the performance of the required maintenance listed in your owner's manual. YANMAR recommends that you retain all documentation, including receipts, covering maintenance on your non-road compression-ignition engine, but YANMAR cannot deny warranty solely for the lack of receipts, or for your failure to ensure the performance of all scheduled maintenance.

YANMAR may deny your warranty coverage of your non-road compression-ignition engine if a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

Your engine is designed to operate on diesel fuel only. Use of any other fuel may result in your engine no longer operating in compliance with applicable emissions requirements.

You are responsible for initiating the warranty process. You must present your engine to a YANMAR dealer as soon as a problem exists. The warranty repairs should be completed by the dealer as expeditiously as possible. If you have any questions regarding your warranty rights and responsibilities, or would like information on the nearest YANMAR dealer or authorized service center, you should contact YANMAR America Corporation.

Website: www.yanmar.com

E-mail: CS_support@yanmar.com

Toll free telephone number: 1-800-872-2867, 1-855-416-7091

| SPN | FMI | TEXT TRANSLATION |
|-----|-----|---|
| 28 | 3 | % Accelerator Position #3 (Throttle 2) Voltage Above Normal or Shorted to High Source H |
| 28 | 4 | Percent Accelerator Position #3 (Throttle 2) Voltage Below Normal or Shorted to Low Source |
| 29 | 3 | Percent Accelerator Position #2 (Throttle 1) Voltage Above Normal or Shorted to High Source |
| 29 | 4 | Percent Accelerator Position #2 (Throttle 1) Voltage Below Normal or Shorted to Low Source |
| 91 | 3 | Accelerator Pedal Position (Multi-State Throttle) Voltage Above Normal, or Shorted to High Source |
| 91 | 4 | Accelerator Pedal Position (Multi-State Throttle) Voltage Below Normal or Shorted to Low Source |
| 91 | 9 | Accelerator Pedal Position A valid throttle message is not being received or is late |
| 91 | 14 | Accelerator Pedal Position Throttle signal voltage is or has been out of range |
| 94 | 1 | Fuel Delivery Pressure Pressure Very low |
| 94 | 3 | Fuel Delivery Pressure Fuel Rail Pressure Voltage out of range high |
| 94 | 4 | Fuel Delivery Pressure Fuel Rail Pressure Voltage out of range low |
| 94 | 10 | Fuel Delivery Pressure Pressure dropping too fast |
| 94 | 13 | Fuel Delivery Pressure Out of calibration |
| 94 | 16 | Fuel Delivery Pressure High fuel pressure |
| 94 | 17 | Fuel Delivery Pressure No rail fuel pressure |
| 94 | 18 | Fuel Delivery Pressure Low fuel pressure |
| 97 | 0 | Water In Fuel Indicator Water In Fuel Detected |
| 97 | 3 | Water In Fuel Indicator Water In Fuel Voltage out of range high |
| 97 | 4 | Water In Fuel Indicator Water In Fuel Voltage out of range low |
| 97 | 16 | Water In Fuel Indicator Water In Fuel Detected |
| 97 | 31 | Water In Fuel Indicator Water In Fuel Detected |
| 100 | 1 | Engine Oil Pressure Low oil pressure |
| 100 | 3 | Engine Oil Pressure Voltage Above Normal or Shorted to High Source |
| 100 | 4 | Engine Oil Pressure Voltage Below Normal or Shorted to Low Source |
| 100 | 16 | Engine Oil Pressure Oil pressure reading incorrect |
| 100 | 18 | Engine Oil Pressure Low oil pressure |
| 105 | 0 | Intake Manifold 1 Temperature High manifold air temperature |
| 105 | 3 | Intake Manifold 1 Temperature Voltage Above Normal or Shorted to High Source |
| 105 | 4 | Intake Manifold 1 Temperature Voltage Below Normal or Shorted to Low Source |
| 105 | 16 | Intake Manifold 1 Temperature High manifold air temperature |
| 107 | 0 | Air Filter Differential Pressure Plugged air filter condition detected |
| 107 | 31 | Air Filter Differential Pressure Plugged air filter condition detected |
| 110 | 0 | Engine Coolant Temperature High coolant temperature |
| 110 | 3 | Engine Coolant Temperature Voltage Above Normal or Shorted to High Source |
| 110 | 4 | Engine Coolant Temperature Voltage Below Normal or Shorted to Low Source |
| 110 | 15 | Engine Coolant Temperature High coolant temperature |
| 110 | 16 | Engine Coolant Temperature High coolant temperature |
| 111 | 1 | Coolant Level Low coolant level |
| 158 | 2 | Keyswitch Intermittent |
| 158 | 17 | Keyswitch Circuit problem |
| 174 | 0 | Fuel Temperature High fuel temperature |
| 174 | 3 | Fuel Temperature Voltage Above Normal or Shorted to High Source |
| 174 | 4 | Fuel Temperature Voltage Below Normal or Shorted to Low Source |
| 174 | 15 | Fuel Temperature High fuel temperature |
| 174 | 16 | Fuel Temperature High fuel temperature |
| 174 | 31 | Fuel Temperature Voltage out of range |
| 189 | 31 | Rated Engine Speed Speed Derate Condition Exists due to fault |
| 190 | 0 | Engine Speed Engine overspeed |
| 190 | 2 | Engine Speed Data Erratic, Intermittent or Incorrect |
| 190 | 3 | Engine Speed Voltage Above Normal or Shorted to High Source |
| 190 | 4 | Engine Speed Voltage Below Normal or Shorted to Low Source |
| 190 | 5 | Engine Speed Circuit is open |
| 190 | 16 | Engine Speed Engine overspeed |

| SPN | FMI | TEXT TRANSLATION |
|------|-----|---|
| 611 | 3 | Injector Wiring Shorted to battery |
| 611 | 4 | Injector Wiring Shorted to ground |
| 620 | 3 | Sensor Supply Voltage 1 (+5V DC) Voltage Above Normal or Shorted to High Source |
| 620 | 4 | Sensor Supply Voltage 1 (+5V DC) Voltage Below Normal or Shorted to Low Source |
| 627 | 1 | Power Supply Low voltage to injectors |
| 627 | 4 | Power Supply Power interruption |
| 629 | 13 | Reprogram Controller ECU problem |
| 629 | 19 | ECU to Pump Communications Error ECU not receiving messages from Pump |
| 632 | 2 | Fuel Shutoff Valve Fuel Shutoff Error Detected |
| 632 | 5 | Fuel Shutoff Valve Fuel Shutoff Non-Functional |
| 632 | 11 | Fuel Shutoff Valve Fuel Shutoff Solenoid circuit is open or shorted |
| 636 | 2 | Engine Position Sensor Timing signal error |
| 636 | 8 | Engine Position Sensor Timing signal error |
| 636 | 10 | Engine Position Sensor Timing signal error |
| 637 | 2 | Timing (Crank) Sensor Timing signal error |
| 637 | 7 | Timing (Crank) Sensor Timing signal error |
| 637 | 8 | Timing (Crank) Sensor Timing signal error |
| 637 | 10 | Timing (Crank) Sensor Timing signal error |
| 639 | 13 | CAN Bus The CAN bus failure |
| 651 | 5 | Injector Cylinder #1 The current to the injector is less than expected |
| 651 | 6 | Injector Cylinder #1 The current to the injector increases too rapidly |
| 651 | 7 | Injector Cylinder #1 The injector fuel flow is lower than expected |
| 652 | 5 | Injector Cylinder #2 The current to the injector is less than expected |
| 652 | 6 | Injector Cylinder #2 The current to the injector increases too rapidly |
| 652 | 7 | Injector Cylinder #2 The injector fuel flow is lower than expected |
| 653 | 5 | Injector Cylinder #3 The current to the injector is less than expected |
| 653 | 6 | Injector Cylinder #3 The current to the injector increases too rapidly |
| 653 | 7 | Injector Cylinder #3 The injector fuel flow is lower than expected |
| 654 | 5 | Injector Cylinder #4 The current to the injector is less than expected |
| 654 | 6 | Injector Cylinder #4 The current to the injector increases too rapidly |
| 654 | 7 | Injector Cylinder #4 The injector fuel flow is lower than expected |
| 655 | 5 | Injector Cylinder #5 The current to the injector is less than expected |
| 655 | 6 | Injector Cylinder #5 The current to the injector increases too rapidly |
| 655 | 7 | Injector Cylinder #5 The injector fuel flow is lower than expected |
| 656 | 5 | Injector Cylinder #6 The current to the injector is less than expected |
| 656 | 6 | Injector Cylinder #6 The current to the injector increases too rapidly |
| 656 | 7 | Injector Cylinder #6 The injector fuel flow is lower than expected |
| 729 | 3 | Inlet Air Heater Driver #1 Inlet air heater stuck on |
| 729 | 5 | Inlet Air Heater Driver #1 Inlet air heater will not turn on |
| 833 | 2 | Rack Position Sensor Error |
| 833 | 3 | Rack Position Sensor Rack Position Voltage above normal |
| 833 | 4 | Rack Position Sensor Rack Position Voltage below normal |
| 834 | 2 | Rack Actuator Rack Error |
| 834 | 3 | Rack Actuator Rack Actuator Circuit voltage above normal |
| 834 | 5 | Rack Actuator Rack Actuator Circuit open |
| 834 | 6 | Rack Actuator Rack Actuator Circuit grounded |
| 834 | 7 | Rack Actuator Rack Position Error |
| 970 | 2 | Auxiliary Engine Shutdown Switch External Engine Shutdown Switch intermittent |
| 970 | 11 | External Engine Protection Shutdown External Engine Protection Shutdown active |
| 970 | 31 | Auxiliary Engine Shutdown Switch External Engine Protection Shutdown active |
| 971 | 31 | Engine Derate Switch External Derate input has been activated |
| 1041 | 2 | Start Signal Indicator Start Signal Missing |
| 1041 | 3 | Start Signal Indicator Start Signal Always Active |

| SPN | FMI | TEXT TRANSLATION |
|------|-----|---|
| 1076 | 0 | Fuel Injection Pump Fuel Control Valve Error |
| 1076 | 1 | Fuel Injection Pump Fuel Control Valve Error |
| 1076 | 2 | Fuel Injection Pump Fuel Control Valve Error |
| 1076 | 3 | Fuel Injection Pump Fuel Control Valve Error |
| 1076 | 5 | Fuel Injection Pump Fuel Control Valve Error |
| 1076 | 6 | Fuel Injection Pump Fuel Control Valve Error |
| 1076 | 7 | Fuel Injection Pump Fuel Control Valve Error |
| 1076 | 10 | Fuel Injection Pump Fuel Control Valve Error |
| 1076 | 13 | Fuel Injection Pump Fuel Control Valve Error |
| 1077 | 7 | Fuel Injection Pump Controller |
| 1077 | 11 | Fuel Injection Pump Controller |
| 1077 | 12 | Fuel Injection Pump Controller |
| 1077 | 19 | Fuel Injection Pump Controller |
| 1077 | 31 | Fuel Injection Pump Controller Power derated |
| 1078 | 7 | Fuel Injection Pump Speed/Position Sensor Error |
| 1078 | 11 | Fuel Injection Pump Speed/Position Sensor Error |
| 1078 | 31 | Fuel Injection Pump Speed/Position Sensor VP44 Unable to Achieve Desired Timing |
| 1079 | 3 | Sensor Supply Voltage 1 (+5V DC) Voltage Above Normal or Shorted to High Source |
| 1079 | 4 | Sensor Supply Voltage 1 (+5V DC) Voltage Below Normal or Shorted to Low Source |
| 1080 | 3 | Sensor Supply Voltage 2 (+5V DC) Voltage Above Normal or Shorted to High Source |
| 1080 | 4 | Sensor Supply Voltage 2 (+5V DC) Voltage Below Normal or Shorted to Low Source |
| 1109 | 31 | Engine Protection System Approaching Shutdown Approaching Shutdown |
| 1110 | 31 | Engine Protection System Engine has been shutdown |
| 1347 | 5 | Fuel Pump Assembly #1 The circuit is open, shorted to ground, or overloaded |
| 1347 | 7 | Fuel Pump Assembly #1 Rail pressure control mismatch |
| 1347 | 10 | Fuel Pump Assembly #1 Low fuel flow |
| 1348 | 5 | Fuel Pump Assembly #2 The circuit is open, shorted to ground, or overloaded |
| 1348 | 10 | Fuel Pump Assembly #2 Low fuel flow |
| 1485 | 2 | ECU Main Relay Pump power relay fault |
| 1569 | 31 | Engine Protection Torque Derate Fuel derate limit condition exists |
| 2000 | 6 | Fuel Injection Pump Fuel Control Valve Error |
| 2000 | 13 | Security Violation The proper controller has not been installed |


2G-ECO Governor Controller DTC Table

| Remark | DTC | | | Description | J1939 Lamp Status | | | |
|--------|--------------|-----------|-----|--|-------------------|---------------------|--------------------|----|
| | J1939 Format | | | | MIL | RSL | AWL | PL |
| | SPN (Hex) | SPN (DEC) | FMI | | | | | |
| | 4BA | 1210 | 4 | Engine Fuel Rack Position Sensor : Shorted to low source | | | X | |
| | | | 3 | Engine Fuel Rack Position Sensor : Shorted to high source | | X (Engine drive) | X (E-ECU start) | |
| | 5B | 91 | 4 | Accelerator Pedal Position Sensor "A" : Shorted to low source | | | X | |
| | | | 3 | Accelerator Pedal Position Sensor "A" : Shorted to high source | | | X | |
| | | | 2 | Accelerator Pedal Position Sensor "A" : Intermittent fault | | | | |
| | | | 1 | Accelerator Pedal Position Sensor "A" : Below normal operational range (SAE J1843) | | | | X |
| | | | 0 | Accelerator Pedal Position Sensor "A" : Above normal operational range (SAE J1843) | | | | X |
| | 1D | 29 | 15 | Accelerator Pedal Position Sensor "A" : Not available (SAE J1843) | | | X | |
| | | | 4 | Accelerator Pedal Position Sensor "B" : Shorted to low source | | | X | |
| | | | 3 | Accelerator Pedal Position Sensor "B" : Shorted to high source | | | X | |
| | | | 2 | Accelerator Pedal Position Sensor "B" : Intermittent fault | | | | |
| | | | 1 | Accelerator Pedal Position Sensor "B" : Below normal operational range (SAE J1843) | | | | X |
| | 6C | 108 | 0 | Accelerator Pedal Position Sensor "B" : Above normal operational range (SAE J1843) | | | X | |
| | | | 8 | Accelerator Pedal Position Sensor "B" : Communication fault | | | X | |
| | | | 15 | Accelerator Pedal Position Sensor "B" : Not available (SAE J1843) | | | X | |
| | 470 | 1136 | 4 | Barometric Pressure Sensor : Shorted to low source | X | | | |
| | | | 3 | Barometric Pressure Sensor : Shorted to high source | X | | | |
| | | | 2 | Barometric Pressure Sensor : Intermittent fault | | | | |
| | | | 0 | Barometric Pressure Sensor : Intermittent fault | | | | |
| | 6E | 110 | 4 | E-ECU Internal Temperature Sensor : Shorted to low source | | | X | |
| | | | 3 | E-ECU Internal Temperature Sensor : Shorted to high source | | | X | |
| | | | 2 | E-ECU Internal Temperature Sensor : Intermittent fault | | | | |
| | | | 0 | E-ECU Internal Temperature : Too High | | | | X |
| | 437 | 1079 | 4 | Engine Coolant Temperature Sensor : Shorted to low source | | | X | |
| | | | 3 | Engine Coolant Temperature Sensor : Shorted to high source | | | X | |
| | | | 2 | Engine Coolant Temperature Sensor : Intermittent fault | | | | |
| | 9E | 158 | 0 | Engine Coolant Temperature : Too High | | | | X |
| | | | 1 | Engine Coolant Temperature : Too Low | | | | X |
| | | | 0 | Engine Coolant Temperature : Too High | | | | X |
| | 436 | 1078 | 4 | Engine Fuel Injection Pump Speed Sensor : Shorted to low source | | X (Both) | X (Ether) | |
| * | 7F8A2 | 522402 | 4 | Auxiliary Speed Sensor : Shorted to low source | | X (Both) | X (Ether) | |
| | 7F801 | 522241 | 4 | Engine Fuel Rack Actuator Relay : Circuit fault A | | X | | |
| | | | 3 | Engine Fuel Rack Actuator Relay : Circuit fault B | | X | | |
| | | | 7 | (Reserved) | | | | |
| | | | 2 | Engine Fuel Rack Actuator Relay : Intermittent fault | | | | |
| | 7F803 | 522243 | 4 | Air Heater Relay : Circuit fault A | X | | | |
| | | | 3 | Air Heater Relay : Circuit fault B | X | | | |
| | | | 2 | Air Heater Relay : Intermittent fault | | | | |
| | 7F802 | 522242 | 4 | Cold Start Device : Circuit fault A | X | | | |
| | | | 3 | Cold Start Device : Circuit fault B | X | | | |
| | | | 2 | Cold Start Device : Intermittent fault | | | | |
| | 7F80B | 522251 | 4 | EGR Stepping Motor "A" : Circuit fault A | X | | | |
| | | | 3 | EGR Stepping Motor "A" : Circuit fault B | X | | | |
| | 7F80C | 522252 | 4 | EGR Stepping Motor "B" : Circuit fault A | X | | | |
| | | | 3 | EGR Stepping Motor "B" : Circuit fault B | X | | | |
| | 7F80D | 522253 | 4 | EGR Stepping Motor "C" : Circuit fault A | X | | | |
| | | | 3 | EGR Stepping Motor "C" : Circuit fault B | X | | | |
| | 7F80E | 522254 | 4 | EGR Stepping Motor "D" : Circuit fault A | X | | | |
| | | | 3 | EGR Stepping Motor "D" : Circuit fault B | X | | | |
| | 64 | 100 | 4 | Oil Pressure Switch : Shorted to low source | | | X | |
| | | | 1 | Oil Pressure : Too Low | | | | X |
| | A7 | 167 | 4 | Battery Charge Switch : Shorted to low source | | | X | |
| | | | 1 | Charge warning | | | | X |
| * | 7F84A | 522314 | 0 | Engine Coolant Temperature : Abnormal temperature | | | | X |
| * | 7F853 | 522323 | 0 | Air Cleaner : Mechanical Malfunction | | | | X |
| * | 7F859 | 522329 | 0 | Oily Water Separator : Mechanical Malfunction | | | | X |
| | BE | 190 | 0 | Engine speed : Over speed Condition | | X | | |
| | 27E | 638 | 4 | Engine Fuel Rack Actuator : Shorted to low source | | X | | |
| | | | 3 | Engine Fuel Rack Actuator : Shorted to high source | | X | | |
| | | | 7 | Engine Fuel Rack Actuator : Mechanical Malfunction | | X | | |
| | | | 2 | Engine : Malfunction | | X | | |
| | 27F | 639 | 12 | High Speed CAN Communication : Communication fault | | | X | |
| | 276 | 630 | 2 | E-ECU internal fault : EEPROM Check Sum Error (Data Set 2) | | X | | |
| | | | 12 | E-ECU internal fault : EEPROM ReadWrite fault | | | X | |
| | 274 | 628 | 12 | E-ECU internal fault : FlashROM Check Sum Error (Main Software) | | X | | |
| | | | 2 | E-ECU internal fault : FlashROM Check Sum Error (Data Set 1) | | X | | |
| | | | 2 | E-ECU internal fault : FlashROM Check Sum Error (Data Set 2) | | X | | |
| | 5CD | 1485 | 4 | E-ECU Main Relay : Shorted to low source | | | X | |
| | 7F9E7 | 522727 | 12 | E-ECU internal fault : Sub-CPU Error A | | | X | |
| | | | 12 | E-ECU internal fault : Sub-CPU Error B | | | X | |
| | | | 12 | E-ECU internal fault : Sub-CPU Error C | | | X | |
| | | | 12 | E-ECU internal fault : Sub-CPU Error C | | | X | |
| * | 7F9E8 | 522728 | 12 | E-ECU internal fault : Engine Map Data Version Error | | X | | |
| * | 7F9EA | 522730 | 12 | Immobilizer : CAN Communication fault | | | X | |
| | | | 8 | Immobilizer : Pulse Communication fault | | | X | |
| | 4B2 | 1202 | 2 | Immobilizer : System fault | | | X | |

Remark : Yanmar original DTC

ODP 40-4 HRC

PARTS MANUAL

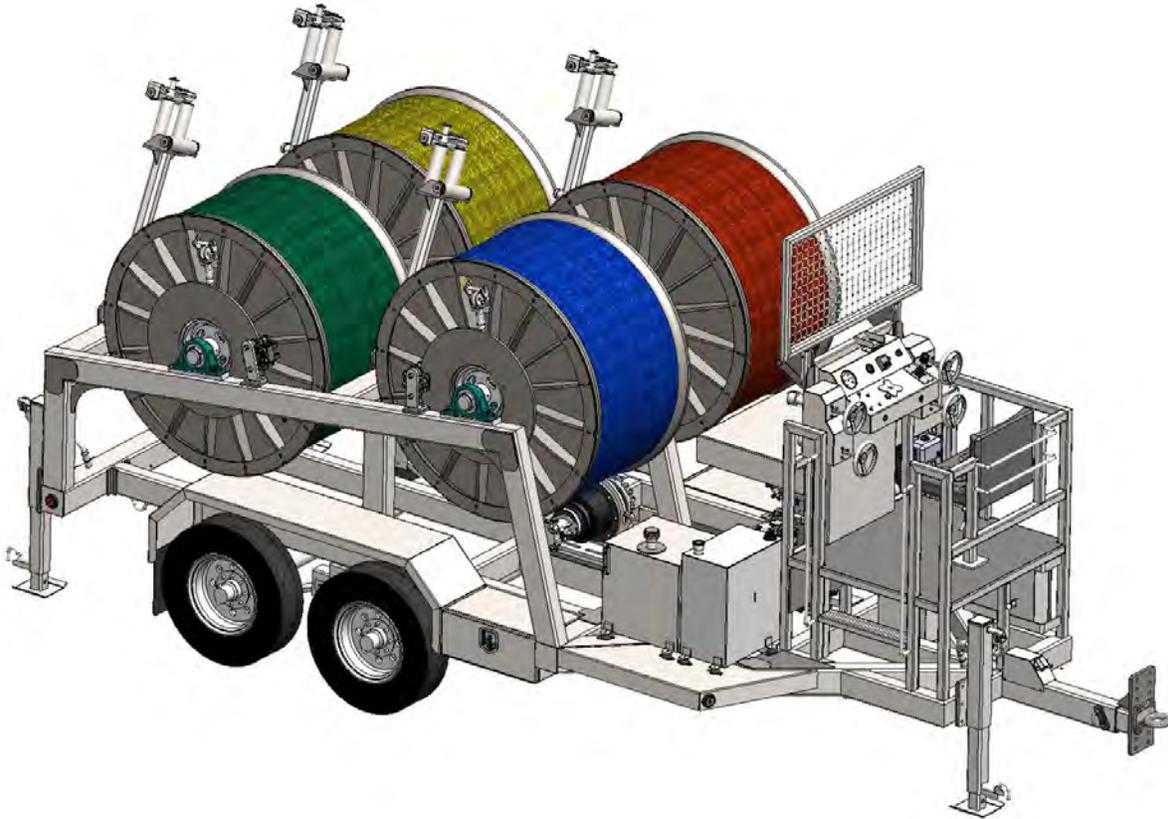

The information, specifications, and illustrations in this manual are on the basis of information available at the time it was written. The specifications, torque values, pressures of operation, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service of the given product.

For the complete and most current information, contact:

Hogg & Davis, Inc
P.O. Box 405 / 3800 Eagle Loop
Odell, OR 97044-0405
541-354-1001
541-354-1080 Fax

For most recent manual
version please visit:
www.hoggdavis.com



"Rugged Dependability."

© COPYRIGHT 2016 HOGG & DAVIS, INC



ver. 2.0

Table of Contents

| | |
|--------------------------------------|--------------|
| <i>Isometric View</i> | 1 |
| <i>Curbside View</i> | 2 |
| <i>Rear View</i> | 3 |
| <i>Full Reel Assembly</i> | 4 |
| <i>Overspin Brakes</i> | 5 |
| <i>HD Brake Cylinder</i> | 6 |
| <i>Reel Assembly</i> | 7 |
| <i>Reel Lock Pin (Old)</i> | 8 |
| <i>Reel Lock Pin (New)</i> | 9 |
| <i>Levelwind Assembly</i> | 10 |
| <i>Levelwind Manifold</i> | 11 |
| <i>Planetary Drive (Old)</i> | 12 |
| <i>Planetary Drive (New)</i> | 13 |
| <i>Engine/Pumps</i> | 14 |
| <i>Engine/Pumps Tier 4</i> | 15 |
| <i>Control Panel</i> | 16 |
| <i>Control Panel Tier 4</i> | 17 |
| <i>Hyd/Fuel Tanks</i> | 18 |
| <i>Operator Seat</i> | 19 |
| <i>Jackstands</i> | 20 |
| <i>Electrical Hood</i> | 21 |
| <i>Std. Trailer Lights</i> | 22 |
| <i>LED Trailer Lights</i> | 23 |
| <i>Electrical Schematics</i> | 24-26 |
| <i>Hydraulic Schematics</i> | 27-28 |
| <i>Wheel Torque Req.</i> | 29-30 |
| <i>Decals/Decal Locations</i> | 31-35 |
| <i>Brake Bleeding Inst.</i> | 36 |


If items look different than the parts breakdown please call for assistance. (541)354-1001




"Rugged Dependability."

© COPYRIGHT 2016 HOGG & DAVIS, INC




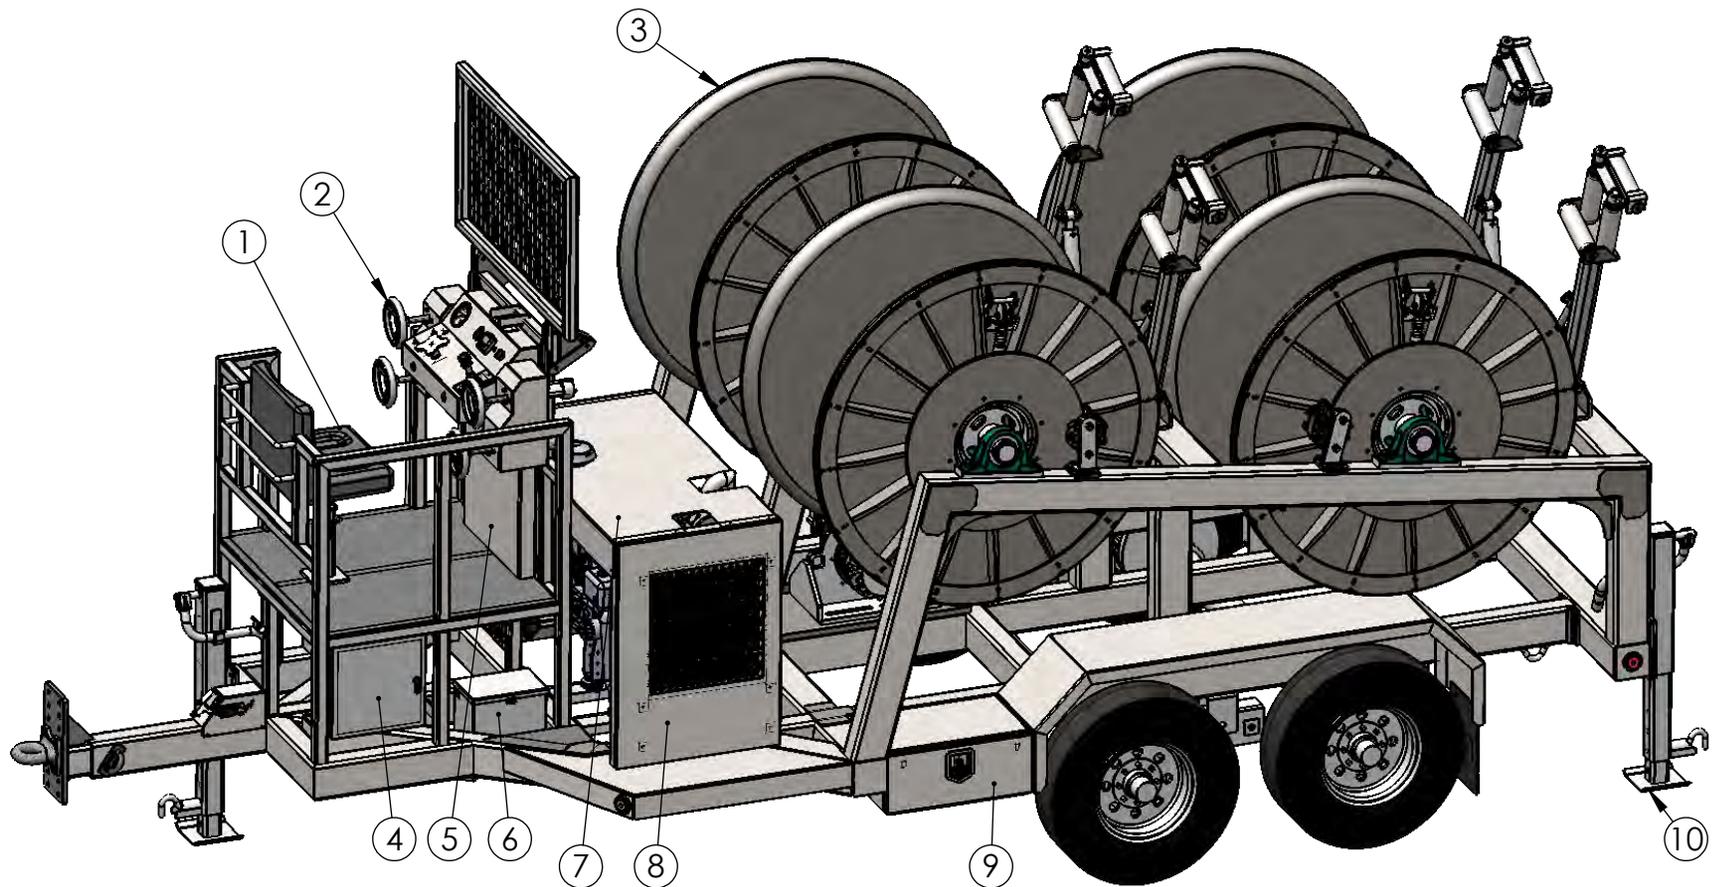

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|---------------|-------------------------|------|
| 1 | Seat Assembly | See Seat Sheet | 1 |
| 2 | Controls | See Controls Sheet | 1 |
| 3 | Reel Assembly | See Reel Assembly Sheet | 1 |
| 4 | B13103 | Electrical Box | 1 |
| 5 | C29229 | Cover, Control | 1 |
| 6 | B13911 | Battery Box | 1 |
| 7 | C29237 | Cover, Engine | 1 |
| 8 | C29014 | Radiator Cover | 1 |
| 9 | D05152 | Toolbox Door | 2 |
| 10 | J04041 | 12k Dropleg Jack | 2 |

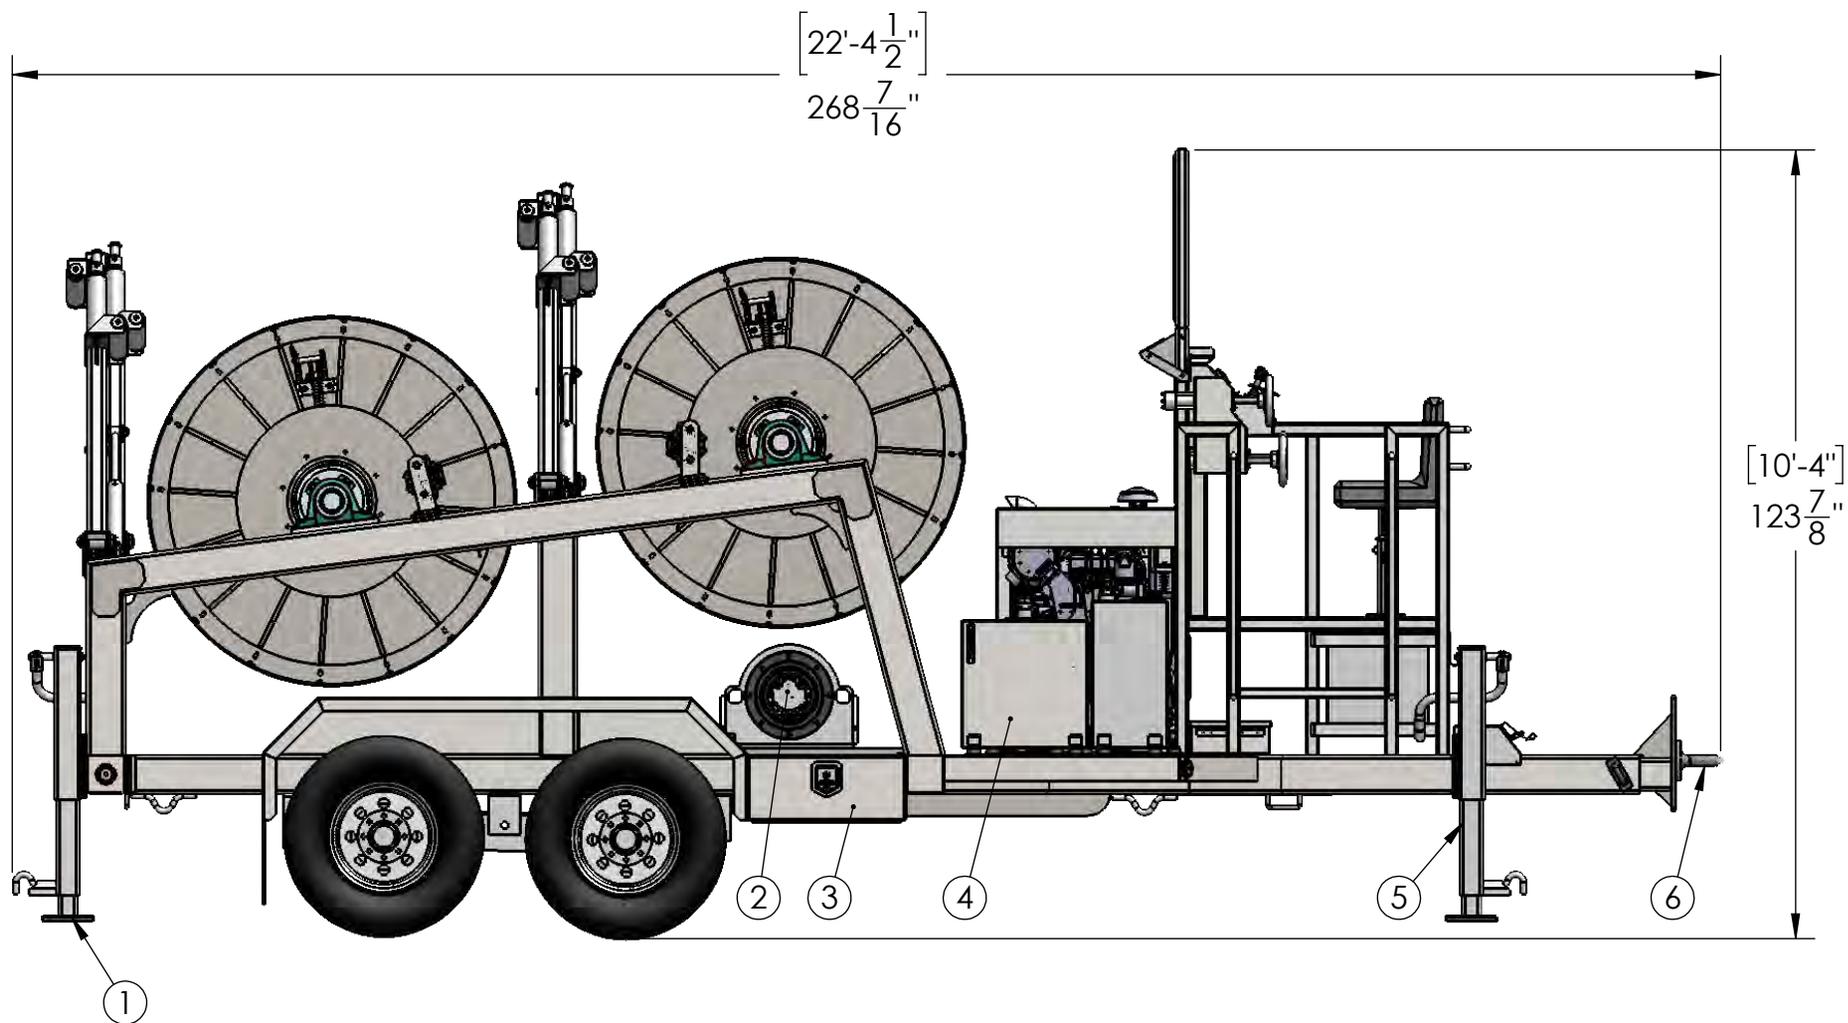


| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|----------------|------------------|------|
| 1 | J04044 | 12k Dropleg Jack | 1 |
| 2 | Drive Assembly | See Drive Sheet | 1 |
| 3 | D05152 | Toolbox Door | 2 |
| 4 | Tank Assembly | See Tanks Sheet | 1 |
| 5 | J04041 | Jackstands | 2 |
| 6 | E04017 | Eye, Pintle | 1 |

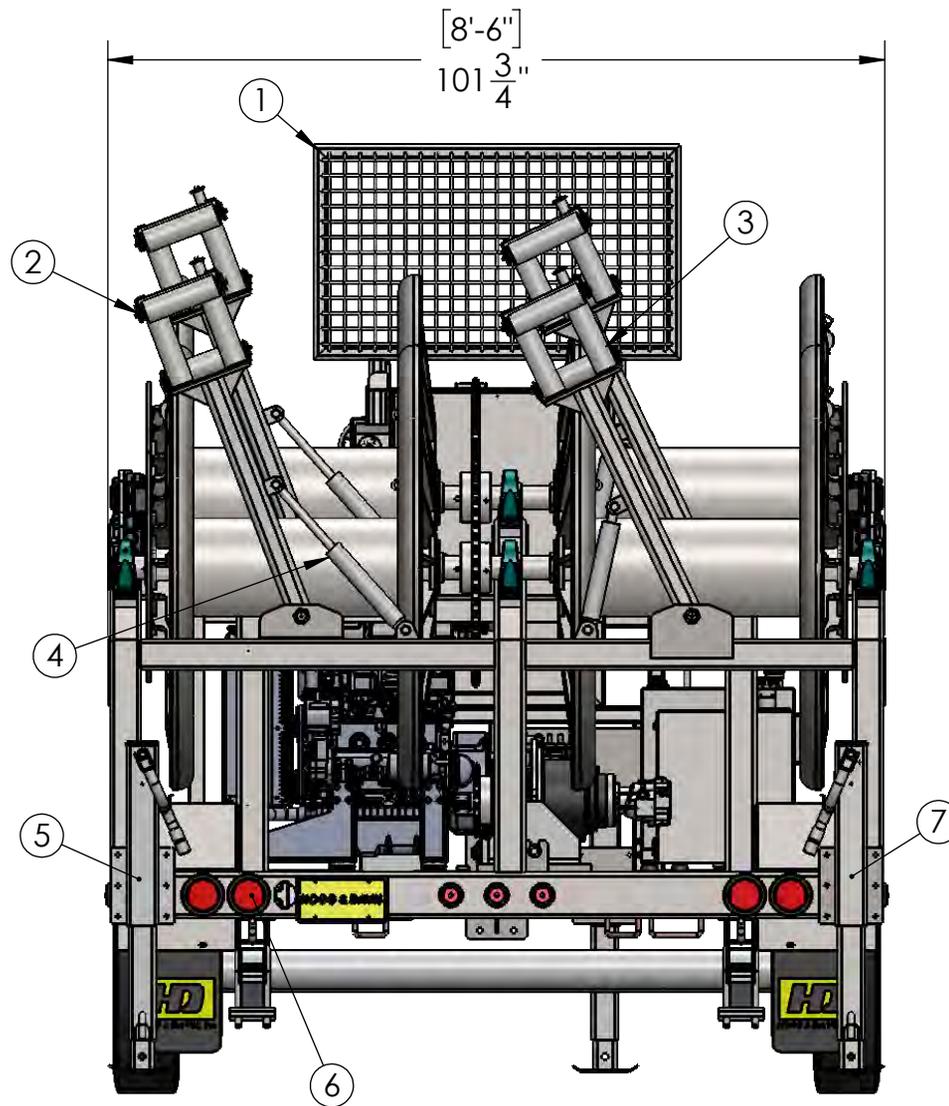



| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|--------------|--------------------|------|
| 1 | S08059 | Screen Assembly | 1 |
| 2 | Levelwind LH | Levelwind LH | 2 |
| 3 | Levelwind RH | Levelwind RH | 2 |
| 4 | C32070 | Levelwind Cylinder | 2 |
| 5 | J04041 | 12k Dropleg Jack | 2 |
| 6 | Lights | See Lighting Sheet | 1 |
| 7 | J04044 | 12k Dropleg Jack | 1 |

IF items look different than the parts breakdown please call for assistance. (541)354-1001

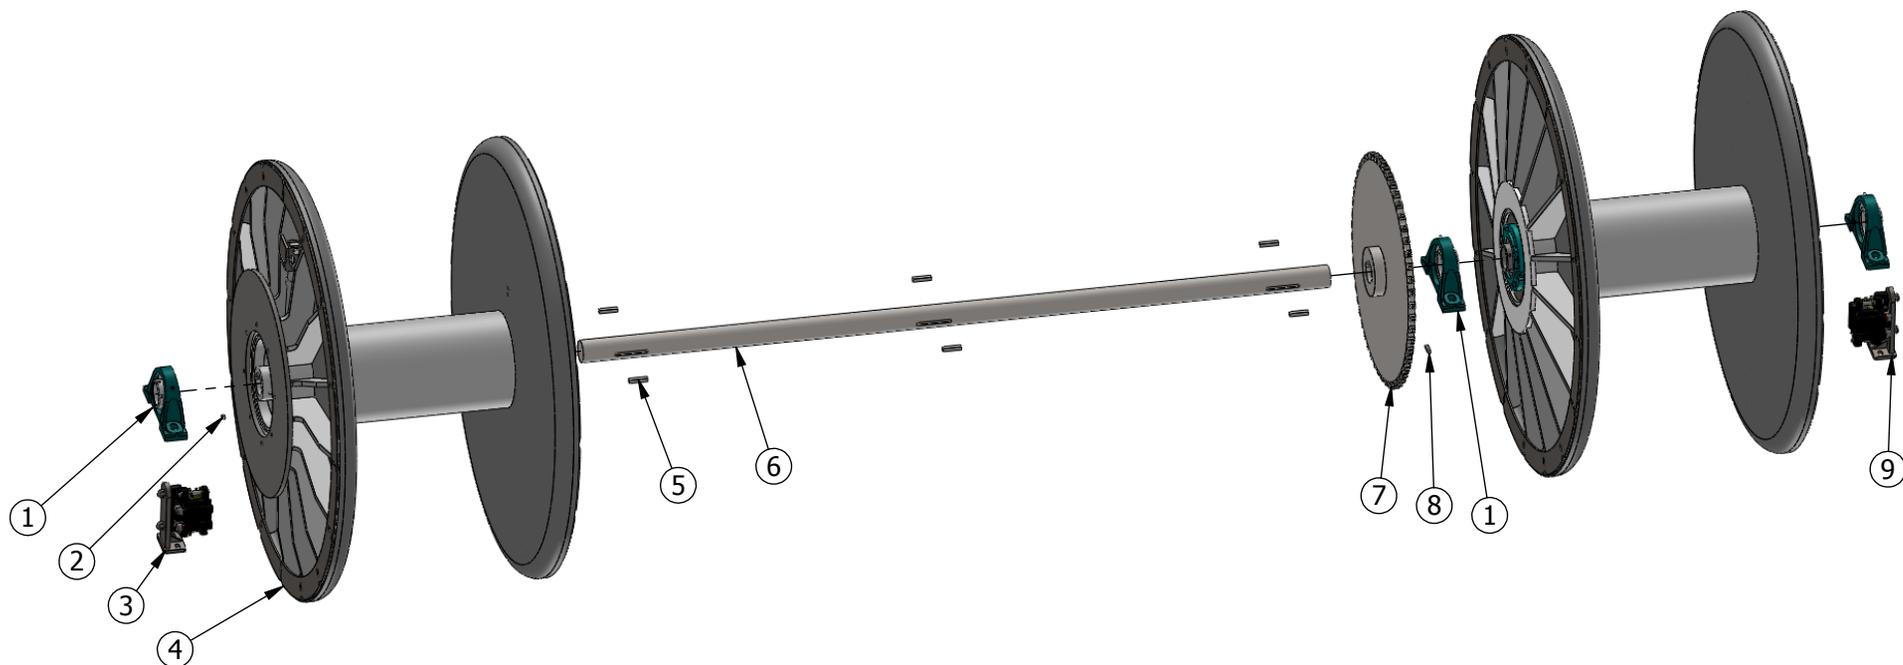



| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------------|--------------------------|------|
| 1 | B07404 | Bearing, 3" Pillow Block | 3 |
| 2 | S04032 | Screw, Set 1/2-13x1/2 | 4 |
| 3 | Brake Assembly LH | See Brake Assembly Sheet | 1 |
| 4 | R07008 | Reel | 2 |
| 5 | K01010 | Keystock | 6 |
| 6 | S43044 | Shaft | 1 |
| 7 | S29028 | Drive Sprocket | 1 |
| 8 | S04476 | Screw, Set 1/2-13x1-1/2 | 2 |
| 9 | Brake Assembly RH | See Brake Assembly Sheet | 1 |

If items look different than the parts breakdown please call for assistance. (541)354-1001

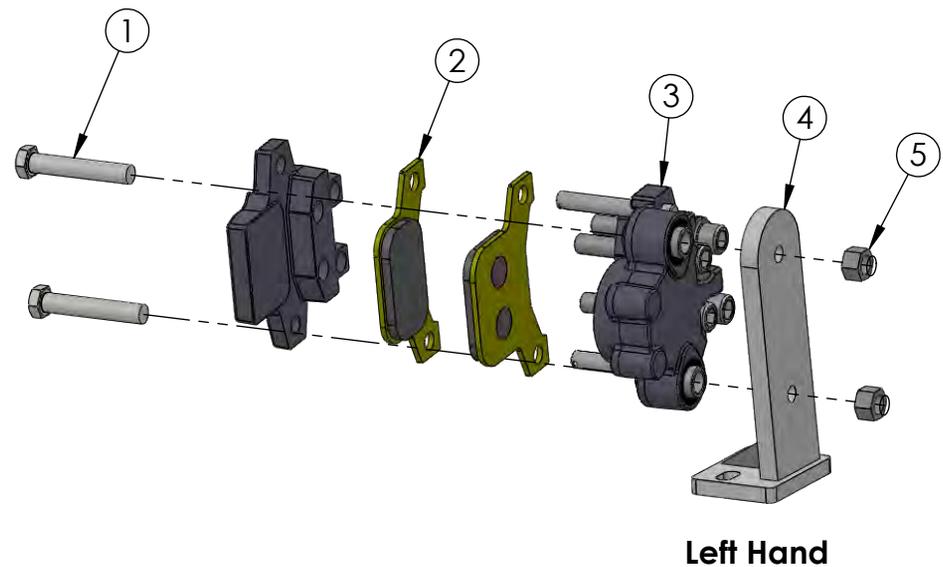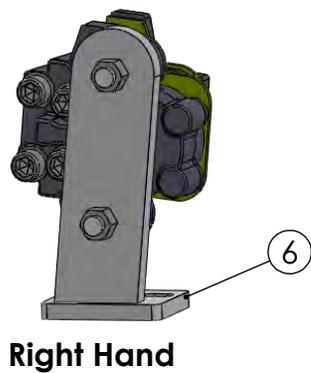


| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|-----------------------------------|------|
| 1 | B11484 | Bolt, Hx Head 5/8"-11 x 3-1/2" Z8 | 2 |
| 2 | P01052 | Brake Pads (Set of 2) | 1 |
| 3 | C04913 | Caliper Ausco | 1 |
| 4 | B15916 | Bracket, Caliper Mount LH | 1 |
| 5 | N04049 | Nut, Hx 5/8"-11 | 2 |
| 6 | B15896 | Bracket, Caliper Mount RH | 1 |

If items look different than the parts breakdown please call for assistance. (541)354-1001

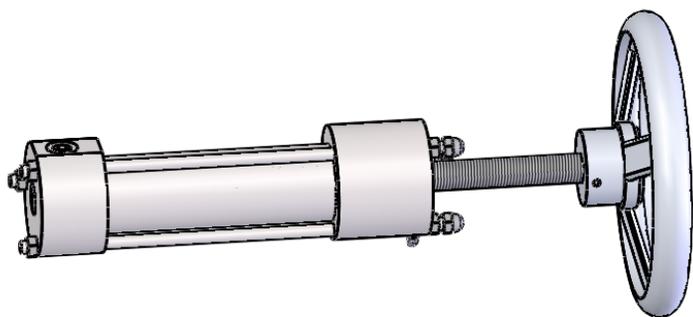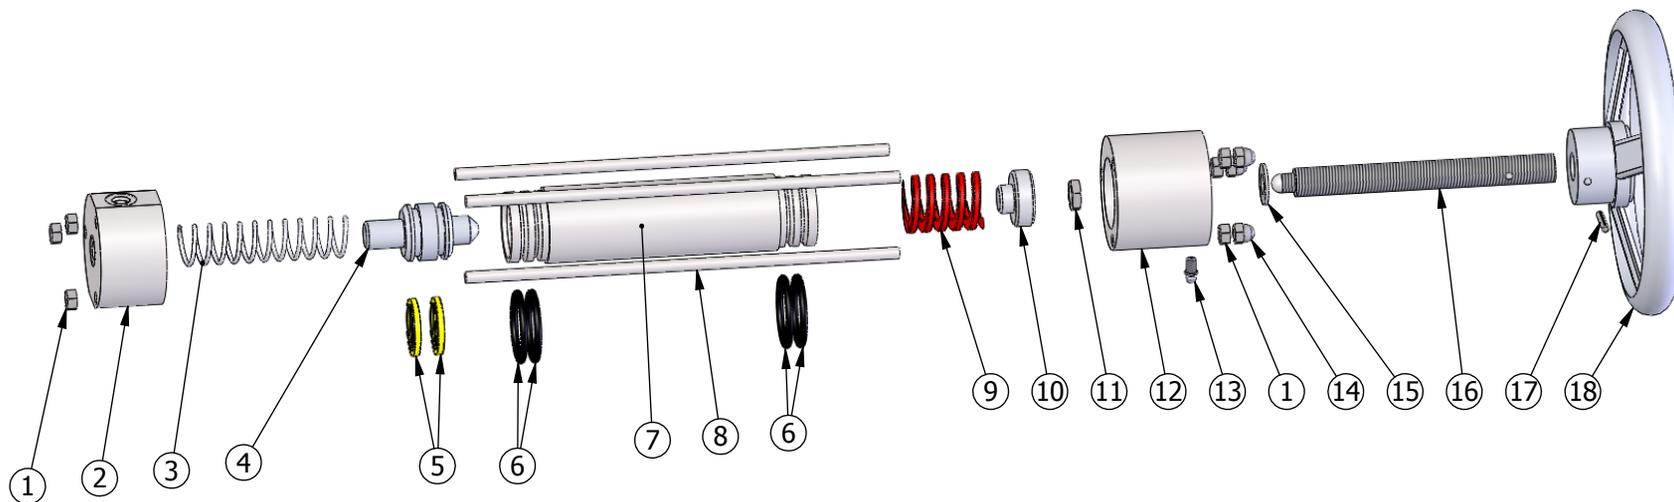

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|-----------------------------|------|
| 1 | N04107 | Nut Hex 5/16"-18 | 6 |
| 2 | C06009 | Bar round 3" 1018 | 1 |
| 3 | S28022 | Return Spring | 1 |
| 4 | P08017 | Piston, Aluminum two groove | 1 |
| 5 | O01061 | Seal | 2 |
| 6 | O01060 | O-Ring | 4 |
| 7 | H08003 | Cylinder Tube | 1 |
| 8 | R19007 | Bar round 5/16" 1018 | 3 |
| 9 | S28021 | Spring | 1 |
| 10 | P08016 | 2" Aluminum RB | 1 |
| 11 | N04039 | Nut Hex Jam 1/2-20 | 1 |
| 12 | C06012 | Bar round 3" 1018 | 1 |
| 13 | F05630 | Fitting, 1/4"-28 Zerk | 1 |
| 14 | N04103 | Nut Hex 5/16"-18 Acorn | 3 |
| 15 | W01005 | Washer, Flat SAE 1/2" | 1 |
| 16 | S04006-001 | Bar 3/4"-8 acme thread | 1 |
| 17 | P06186 | Pin, Roll 3/16 "x 1" | 1 |
| 18 | H02060 | Handle, 8" Dia. | 1 |




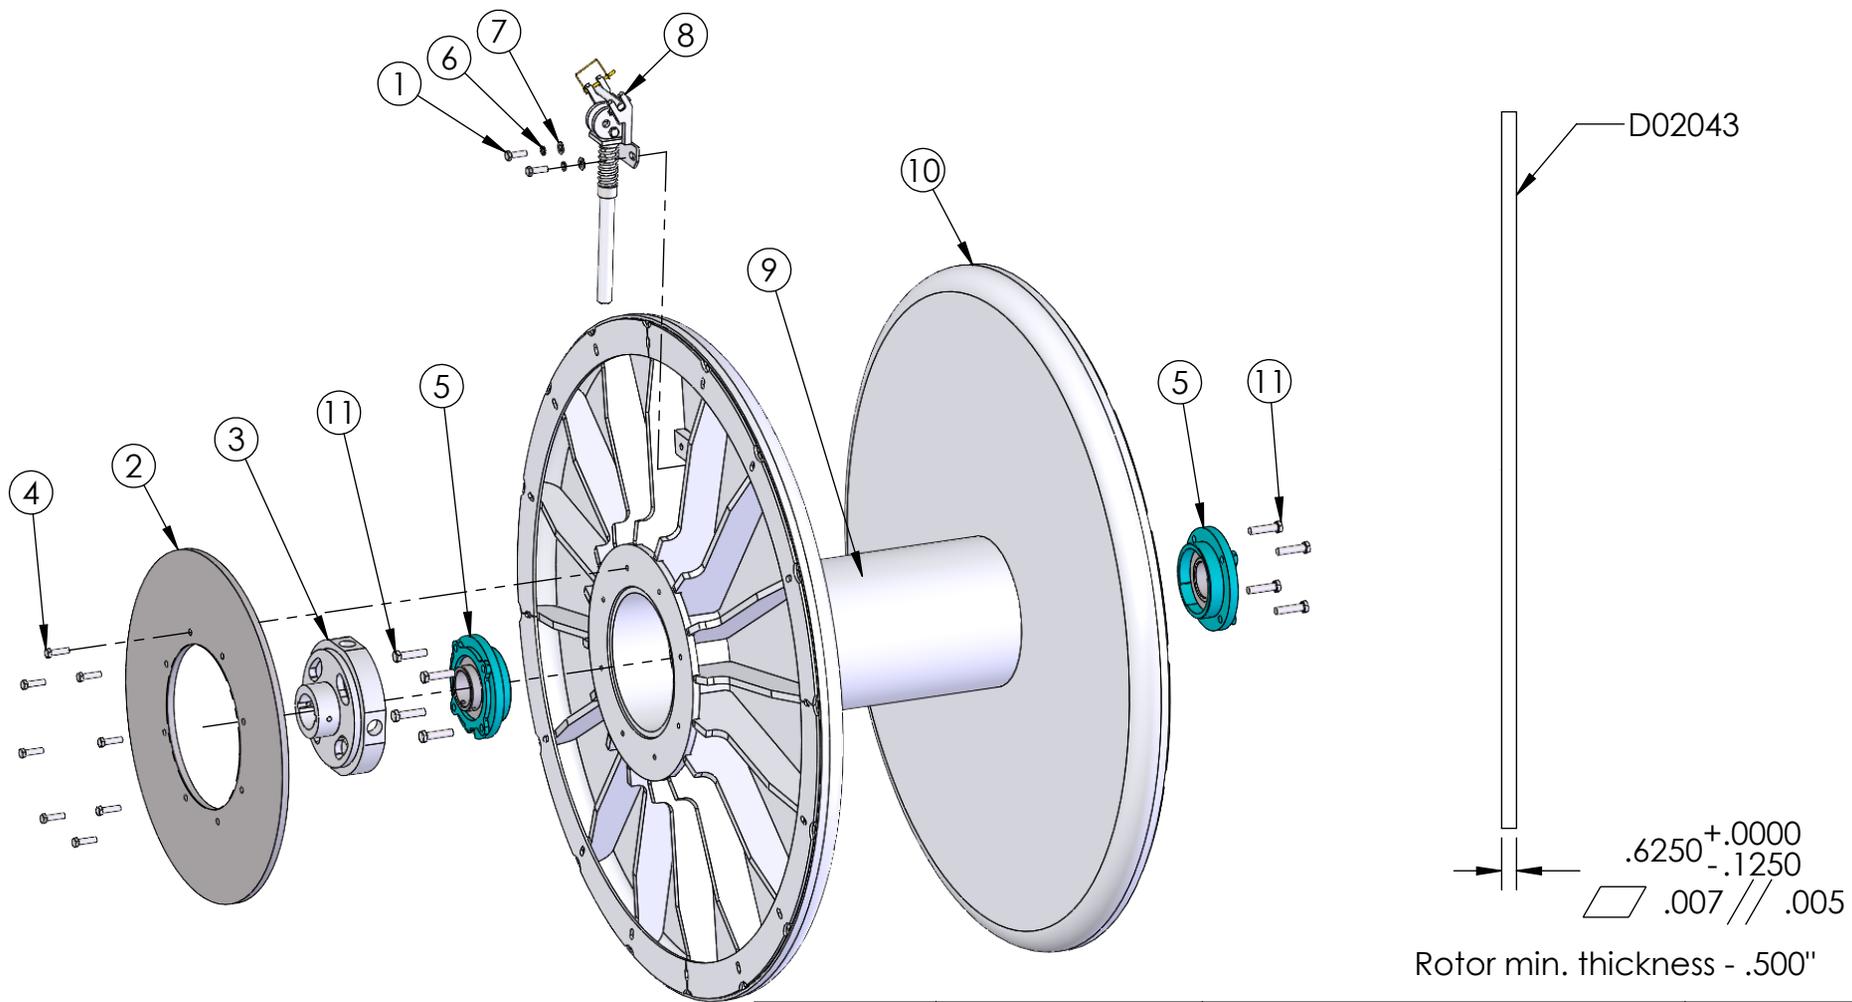

Rotor min. thickness - .500"



| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|--------------------------------|------|
| 1 | B11368 | Bolt, Hx Head 1/2"-13 x 1-1/2" | 2 |
| 2 | D02043 | Disc, Brake 30" | 1 |
| 3 | H09019 | Hub, Locking | 1 |
| 4 | B11364 | Bolt, Hx Head 1/2"-13 x 1-3/4" | 8 |
| 5 | B07006 | Bearing, Flange 3" | 2 |
| 6 | W01565 | Washer, Split Lock 1/2"zinc | 2 |
| 7 | W01005 | Washer, Flat SAE 1/2"zinc | 2 |
| 8 | L08031A | Pin Assy, Long Cam-Lock | 1 |
| 9 | H06035 | Holder, Rope | 1 |
| 10 | R07008 | 27" x 58" x 12-3/4" | 1 |
| 11 | B11377 | Bolt, Hx Head 5/8"-11 x 2-1/2" | 8 |

If items look different than the parts breakdown please call for assistance. (541)354-1001

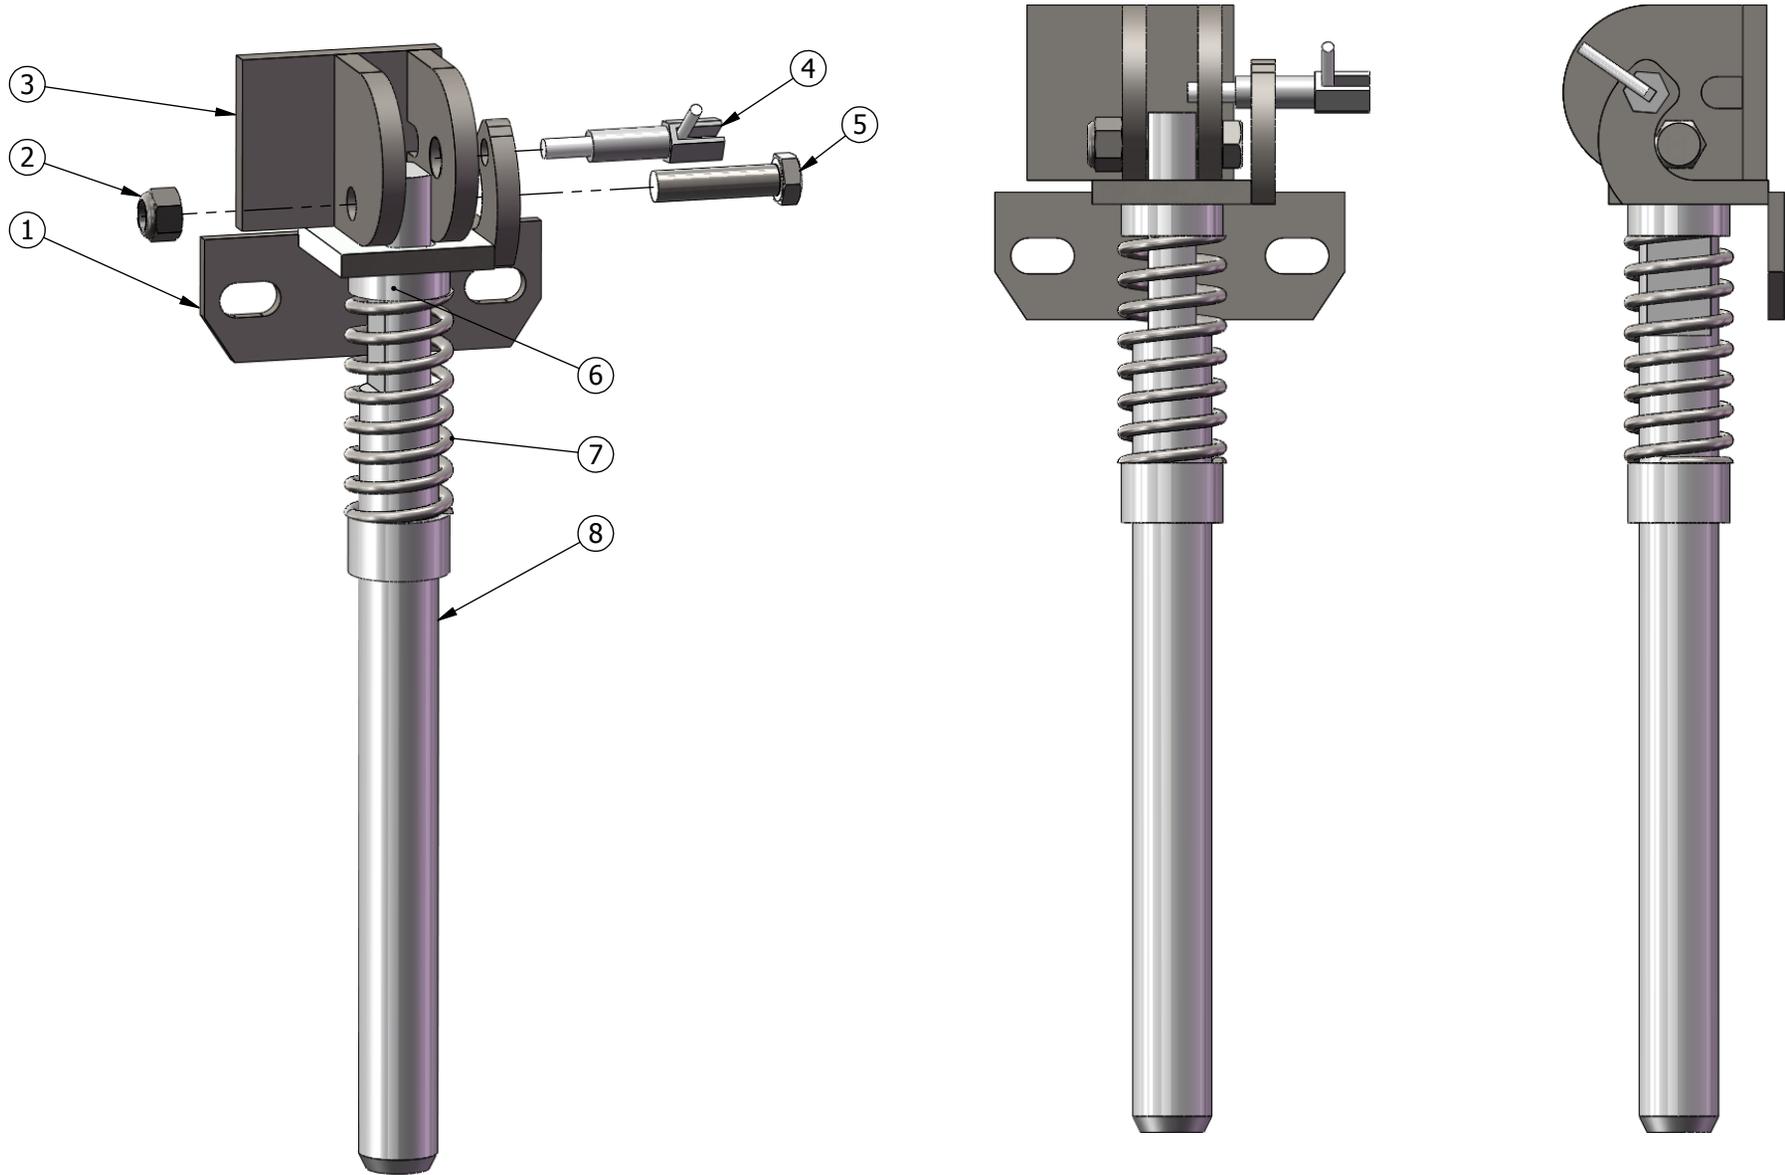


| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|--------------------------|------|
| 1 | B15117 | Mounting bracket | 1 |
| 2 | N04555 | Nut, Hex Nylock® 1/2"-13 | 1 |
| 3 | H02042 | Cam handle assy | 1 |
| 4 | L08004 | Locking pin | 1 |
| 5 | B11366 | Bolt Hx head 1/2-13x2 | 1 |
| 6 | S24021 | Spacer, Reel Locking pin | 1 |
| 7 | S28026 | Spring, 1-1/4 x 4 | 1 |
| 8 | P06061 | Reel Locking Pin | 1 |

If items look different than the parts breakdown please call for assistance. (541)354-1001

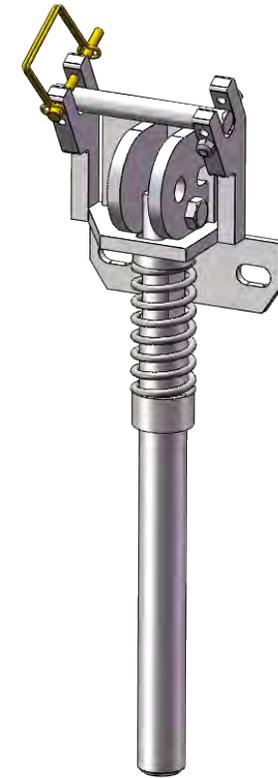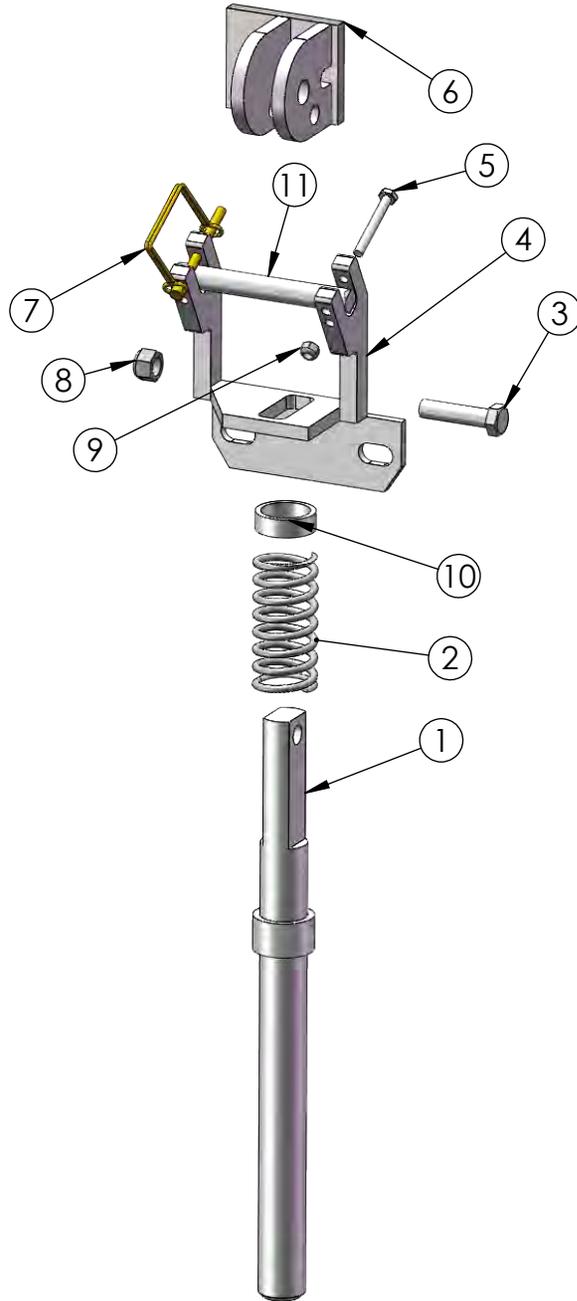

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|-----------------------------|------|
| 1 | P06061 | Pin, Reel Locking | 1 |
| 2 | S28026 | Spring, 1-1/4" x 4" | 1 |
| 3 | B11366 | Bolt, Hx Head 1/2"-13 x 2" | 1 |
| 4 | B15126 | Bracket, Locking Pin | 1 |
| 5 | B11008 | Bolt, Hx Head 1/4"-20 x 2" | 1 |
| 6 | H02042 | Handle, Cam Assy | 1 |
| 7 | P06988 | Pin, Round Retainer Locking | 1 |
| 8 | N04555 | Nut, Hx Nylock® 1/2"-13 | 1 |
| 9 | N04523 | Nut, Hx Nylock® 1/4"-20 | 1 |
| 10 | S24022 | 1-1/4" sch80 Seamless Pipe | 1 |
| 11 | P06084 | Pin, Reel Lock | 1 |


If items look different than the parts breakdown please call for assistance. (541)354-1001

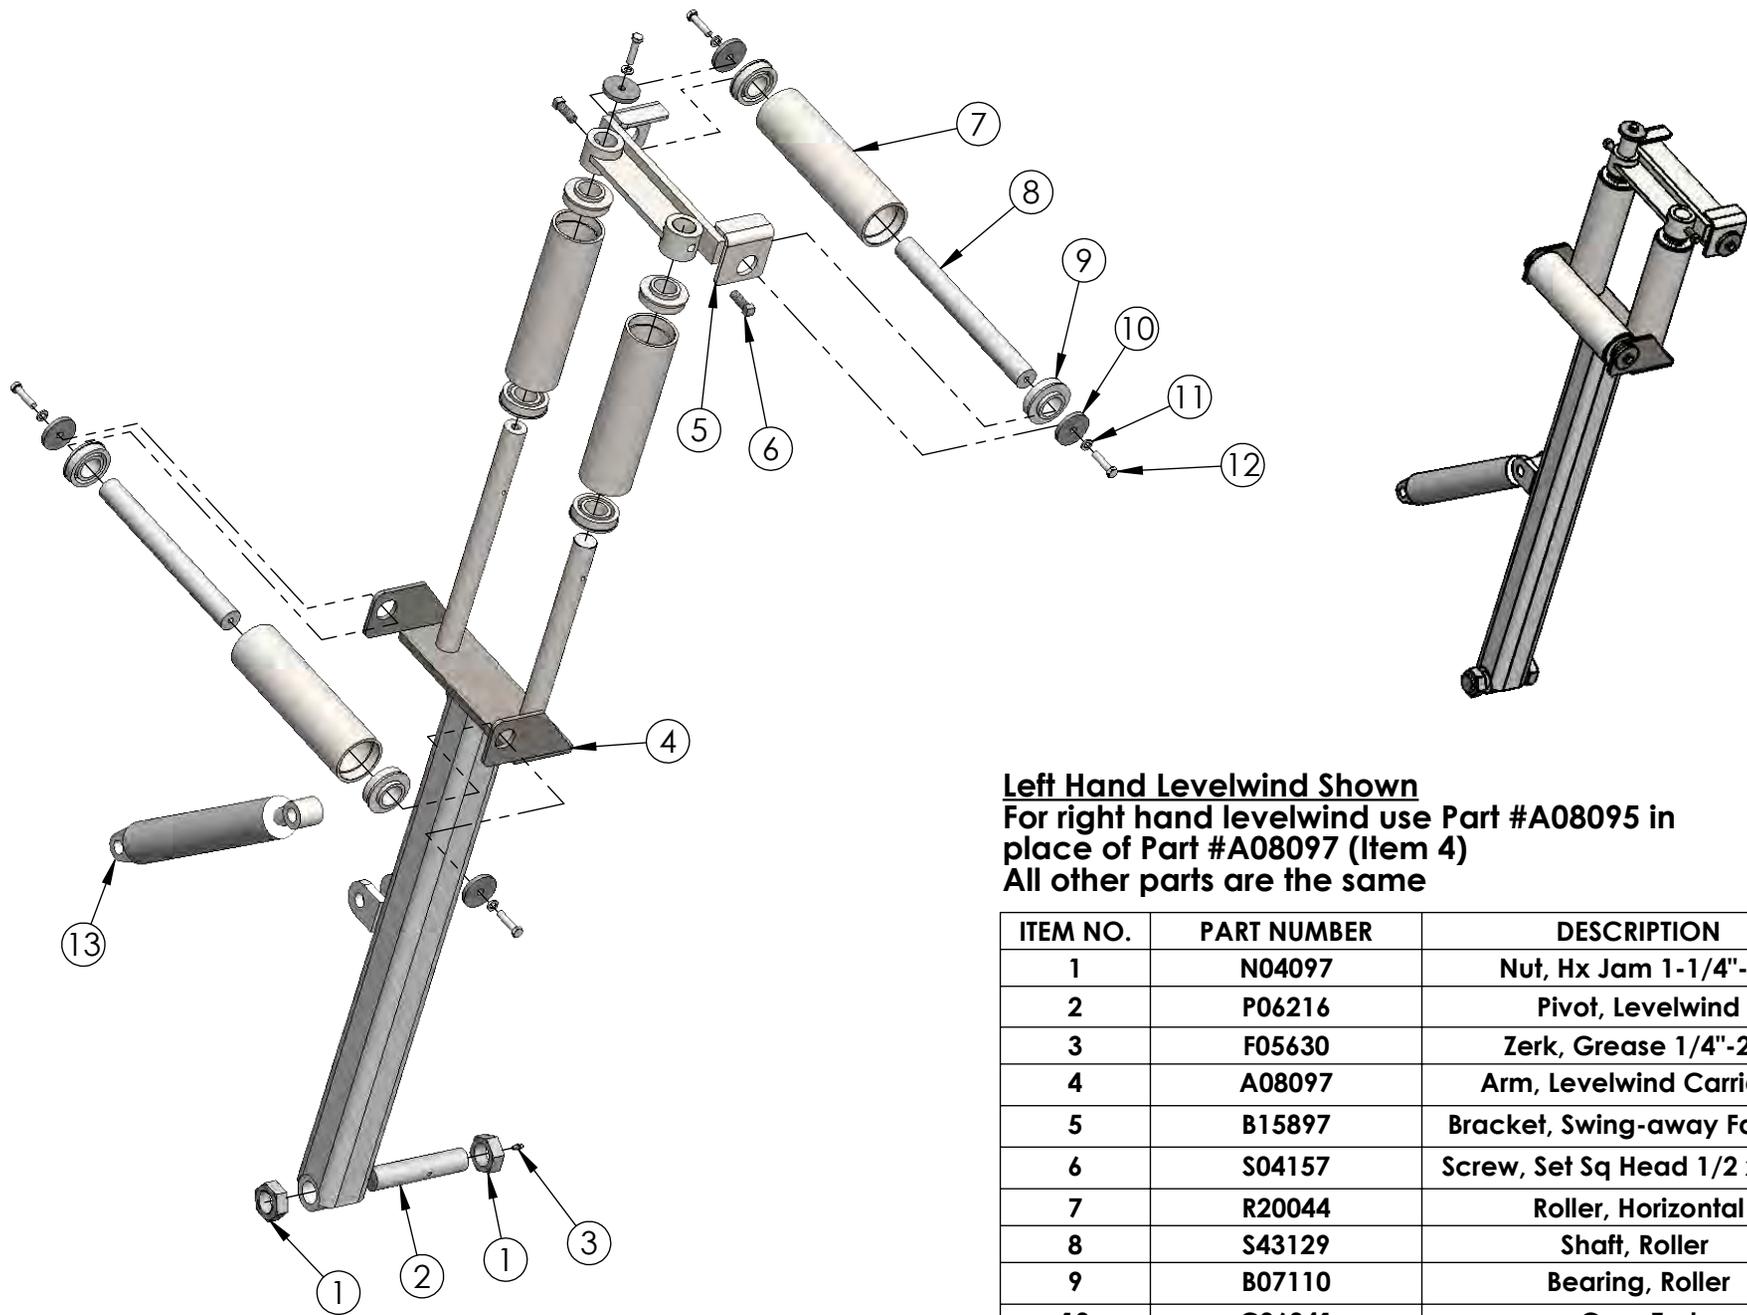

Left Hand Levelwind Shown
For right hand levelwind use Part #A08095 in
place of Part #A08097 (Item 4)
All other parts are the same

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|--------------------------------|------|
| 1 | N04097 | Nut, Hx Jam 1-1/4"-12 | 2 |
| 2 | P06216 | Pivot, Levelwind | 1 |
| 3 | F05630 | Zerk, Grease 1/4"-28 | 1 |
| 4 | A08097 | Arm, Levelwind Carriage | 1 |
| 5 | B15897 | Bracket, Swing-away Fairlead | 1 |
| 6 | S04157 | Screw, Set Sq Head 1/2 x 1-1/4 | 2 |
| 7 | R20044 | Roller, Horizontal | 4 |
| 8 | S43129 | Shaft, Roller | 2 |
| 9 | B07110 | Bearing, Roller | 8 |
| 10 | C06041 | Cap, End | 5 |
| 11 | W01545 | Washer, Split Lock 3/8"zinc | 5 |
| 12 | B11344 | Bolt, Hx Head 3/8"-16 x 1-1/2" | 5 |
| 13 | C32070 | Levelwind Cylinder | 1 |

If items look different than the parts breakdown please call for assistance. (541)354-1001

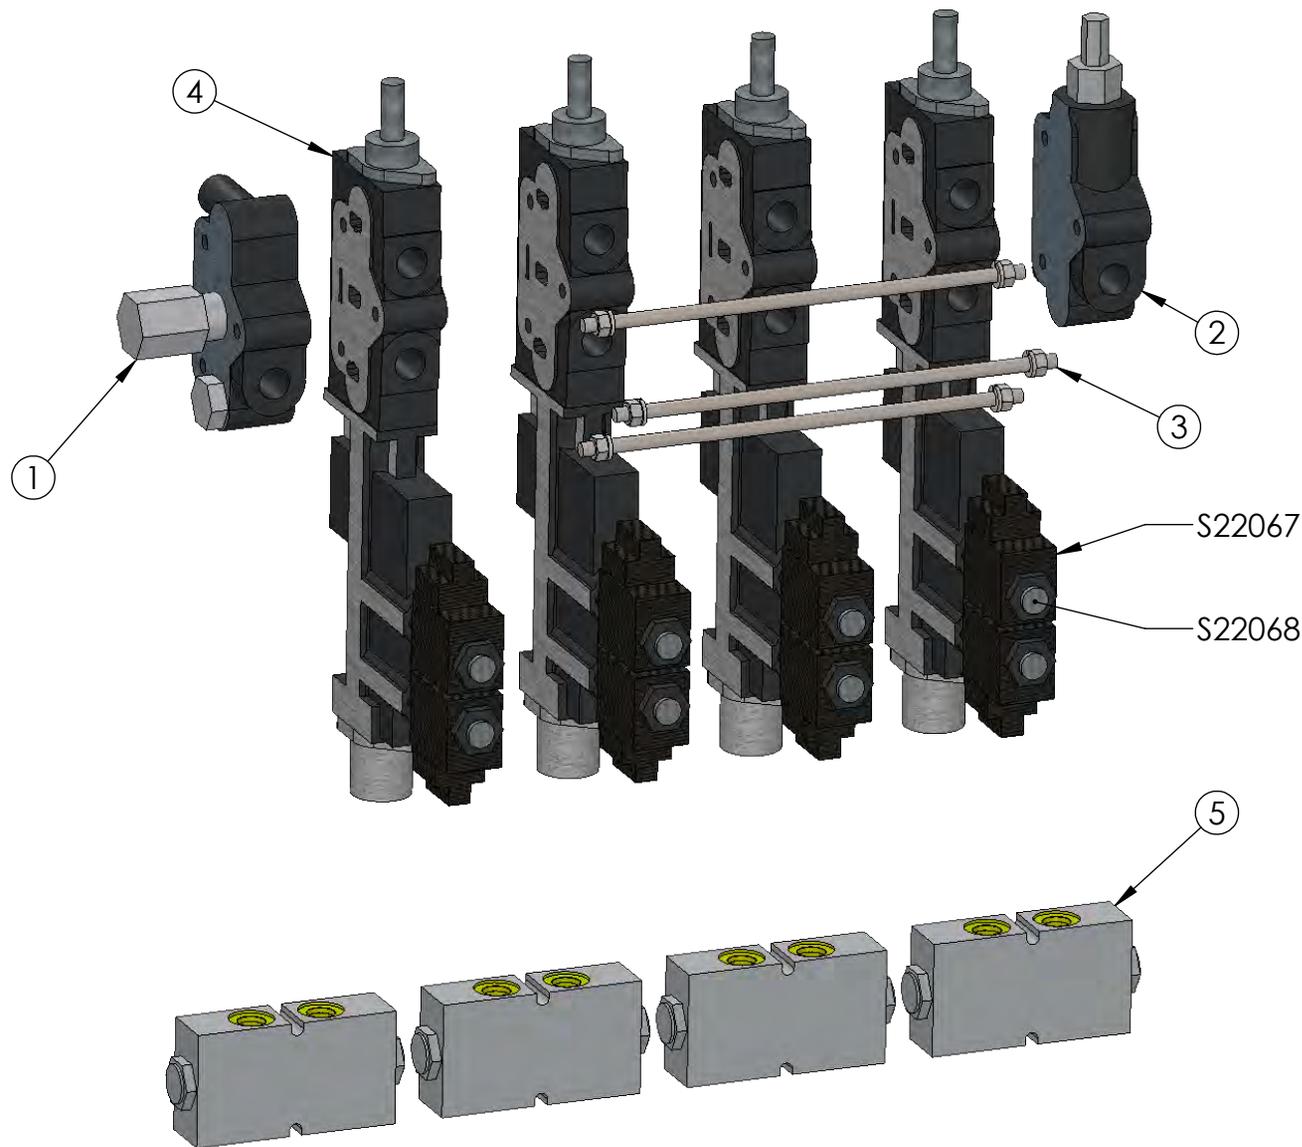


Parts available for replacement:

- S22067 - Coil only for V02103**
- S22068 - Cartridge only for V02103**
- K02073 - Seal kir for S22068**

For Complete assembly of part numbers 1,2,3,4 order part number V02121



| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|---------------------|------|
| 1 | V02104 | Valve, Outlet | 1 |
| 2 | V02100 | Valve, Inlet | 1 |
| 3 | K02321 | Kit, 4 Bank Tie Rod | 1 |
| 4 | V02103 | Valve, 4-way | 4 |
| 5 | V02075 | Valve, Loadlock | 4 |

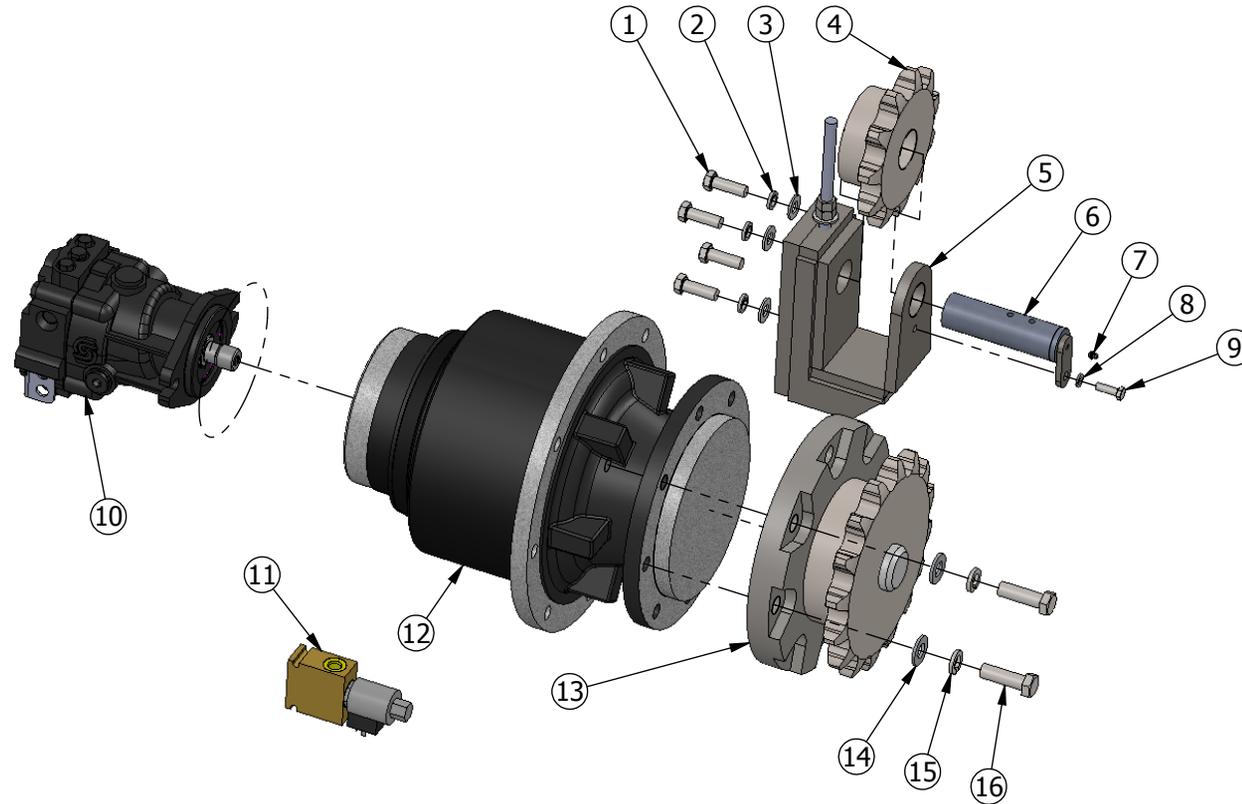

Drive Chain Slack Range: 1-1/2"-3"


| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|-----------------------------------|------|
| 1 | B11433 | Bolt Hx head 1/2-13x1-1/2 Z8 | 4 |
| 2 | W01565 | Washer, Split Lock 1/2" | 4 |
| 3 | W01005 | Washer, Flat SAE 1/2" | 4 |
| 4 | S29017 | Idler Sprocket | 1 |
| 5 | I02100 | Idler sprocket mount - adjustable | 1 |
| 6 | S43062 | Shaft, Idler Sprocket | 1 |
| 7 | F05071 | Grease Zerk 1/4"-28 tap | 1 |
| 8 | W01048 | Washer, Split Lock 5/16" | 1 |
| 9 | B11020 | Bolt Hx head 5/16-18x1 | 1 |
| 10 | M08043 | Motor, Sauer | 1 |
| 11 | V02006 | Valve, 12V Single Solenoid | 1 |
| 12 | G12008 | Auburn Planetary | 1 |
| 13 | S43037 | ODP40-4 Reel Drive | 1 |
| 14 | W01053 | Washer, Flat 5/8 | 8 |
| 15 | W01040 | Washer, Split Lock 5/8" | 8 |
| 16 | B11105 | Bolt Hx head 5/8-11x2 Z8 | 8 |

If items look different than the parts breakdown please call for assistance. (541)354-1001

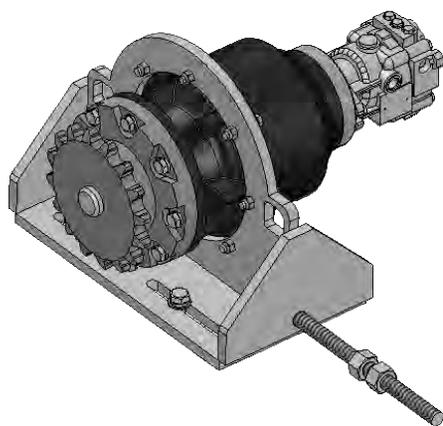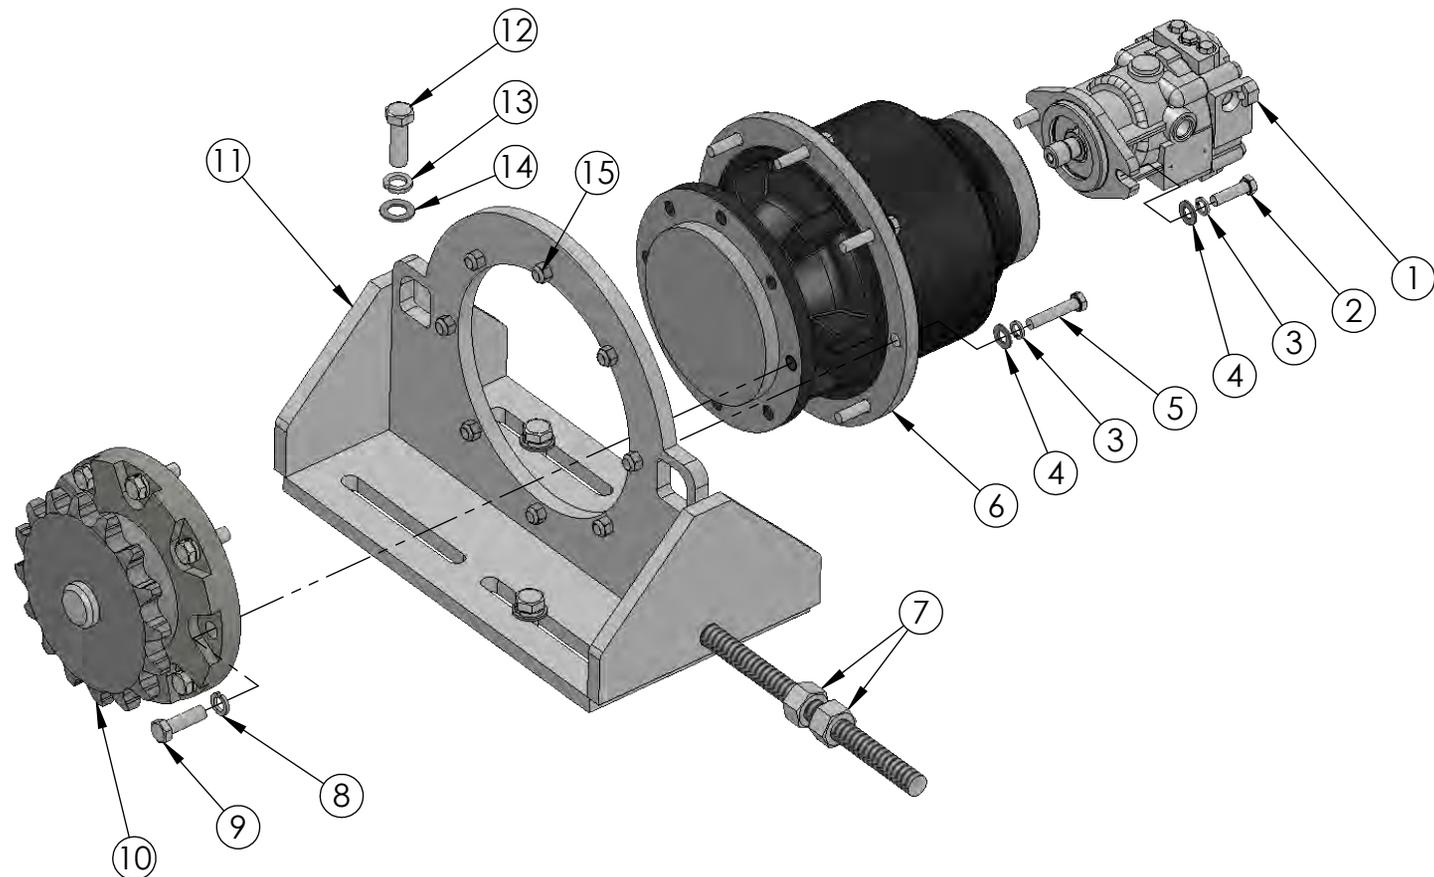


NOTE: July 2014 to Present

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|-----------------------------------|------|
| 1 | M08043 | Motor, Sauer MMF035D | 1 |
| 2 | B11445 | Bolt, Hx Head 1/2"-13 x 1-3/4" Z8 | 2 |
| 3 | W01565 | Washer, Split Lock 1/2"zinc | 10 |
| 4 | W01005 | Washer, Flat SAE 1/2"zinc | 10 |
| 5 | B11359 | Bolt, Hx Head 1/2"-20 x 2-1/2" Z8 | 8 |
| 6 | G12008 | Auburn Planetary | 1 |
| 7 | N06267 | Nut, 1-8 Z | 2 |
| 8 | W01040 | Washer, Split Lock 5/8"zinc | 8 |
| 9 | B11105 | Bolt, Hx Head 5/8"-11 x 2" Z8 | 8 |
| 10 | S43037 | ODP40-4 Reel Drive | 1 |
| 11 | M09047 | Mount, Planetary | 1 |
| 12 | B11460 | Bolt, Hx Head 3/4"-16 x 2-1/4" Z8 | 4 |
| 13 | W01585 | Washer, Split Lock 3/4"zinc | 4 |
| 14 | W01285 | Washer, Flat SAE 3/4"zinc | 4 |
| 15 | N04003 | Nut, Hx Nylock® 1/2"-20 | 8 |

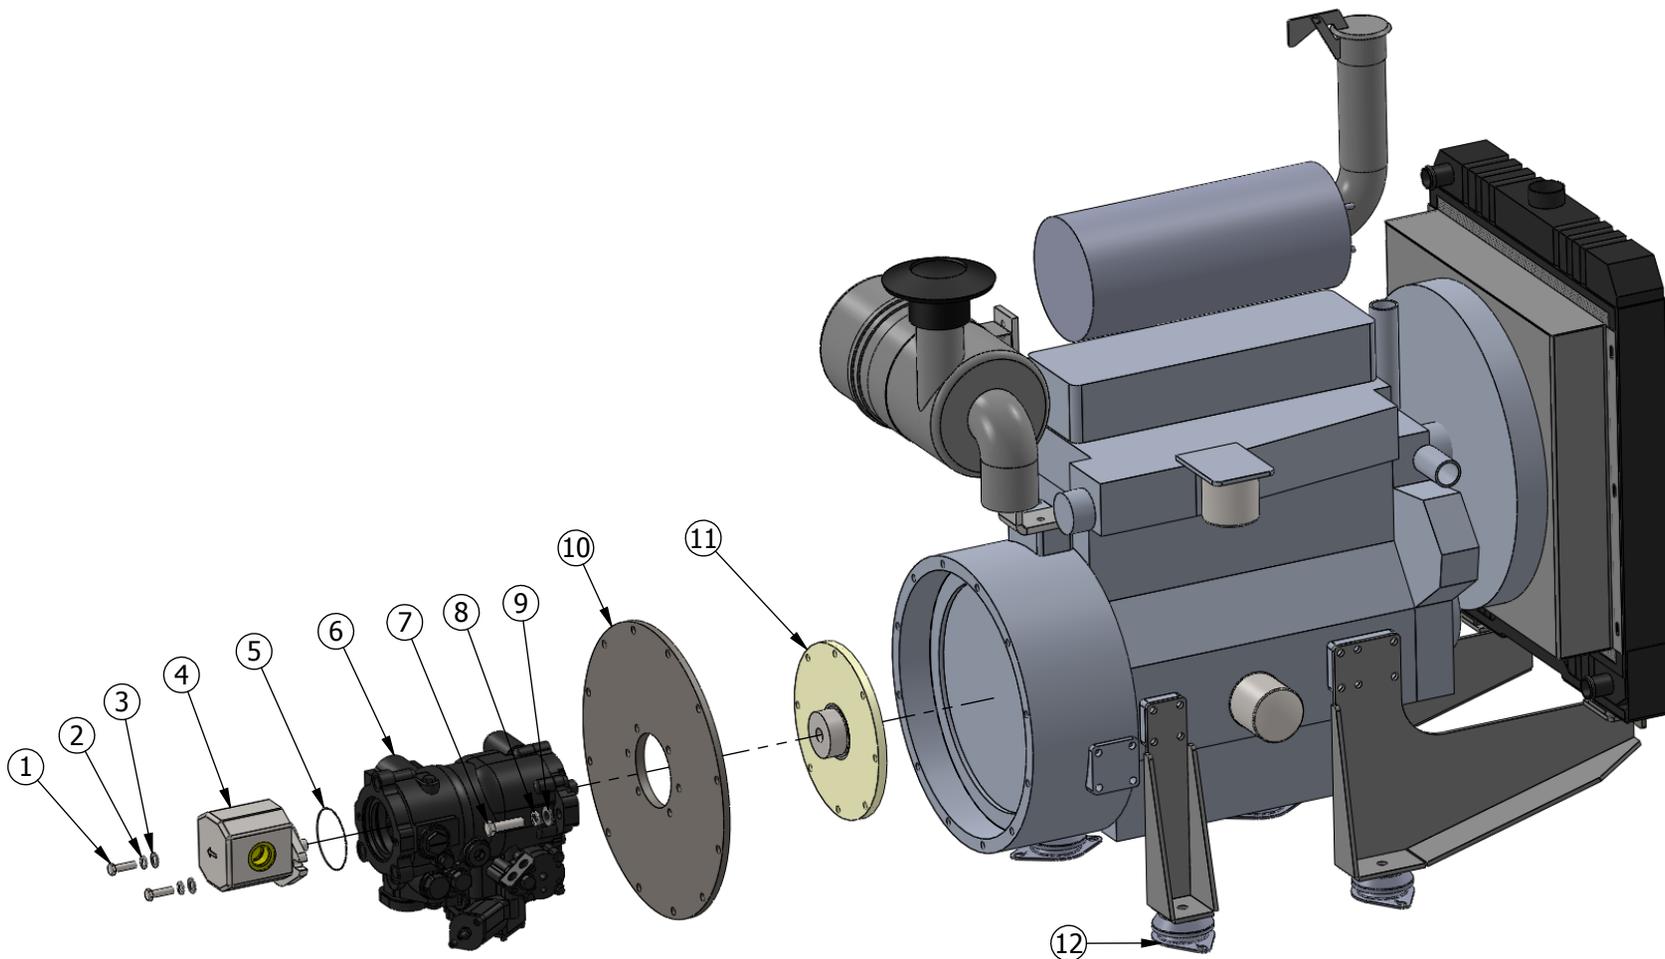


| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|---------------------------|------|
| 1 | B11343 | Bolt Hx head 3/8-16x1-1/4 | 2 |
| 2 | W01545 | Washer, Split Lock 3/8" | 2 |
| 3 | W01002 | Washer Flat SAE 3/8 | 2 |
| 4 | P20103 | Pump, 10gpm | 1 |
| 5 | O01111 | O-ring Small Gear Pump | 1 |
| 6 | P20070 | Pump, Hydraulic | 1 |
| 7 | B11364 | Bolt Hx head 1/2-13x1-3/4 | 2 |
| 8 | W01565 | Washer, Split Lock 1/2" | 2 |
| 9 | W01005 | Washer Flat SAE 1/2" | 2 |
| 10 | P09024 | Pump Adapter Plate | 1 |
| 11 | C28026 | Pump Coupler/ Flywheel | 1 |
| 12 | I04010 | Spring Isolator 176# | 4 |

If items look different than the parts breakdown please call for assistance. (541)354-1001


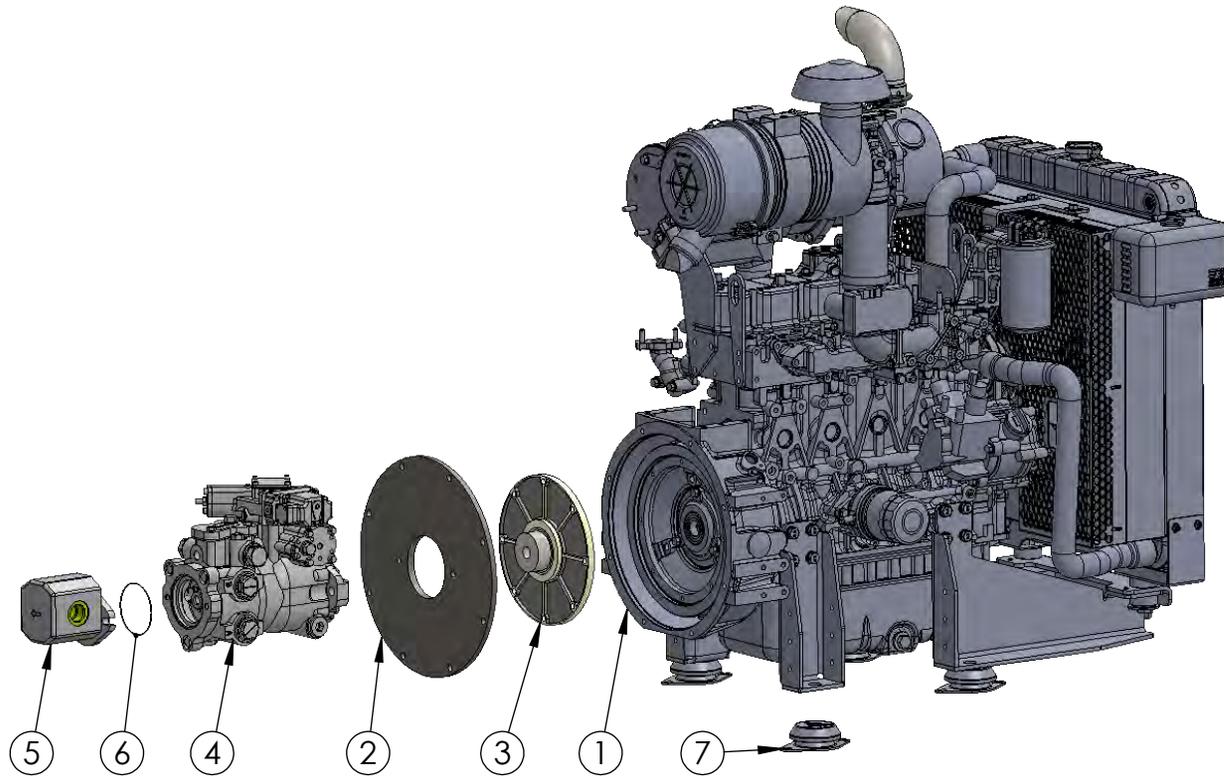


| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|------------------------|------|
| 1 | E02034 | Engine | 1 |
| 2 | P09097 | Pump Adapter Plate | 1 |
| 3 | C28026 | Pump Coupler/ Flywheel | 1 |
| 4 | P20070 | Pump, Hydraulic | 1 |
| 5 | P20103 | Pump, 10gpm | 1 |
| 6 | O01111 | O-ring Small Gear Pump | 1 |
| 7 | I04010 | Spring Isolator 176# | 4 |

If items look different than the parts breakdown please call for assistance. (541)354-1001

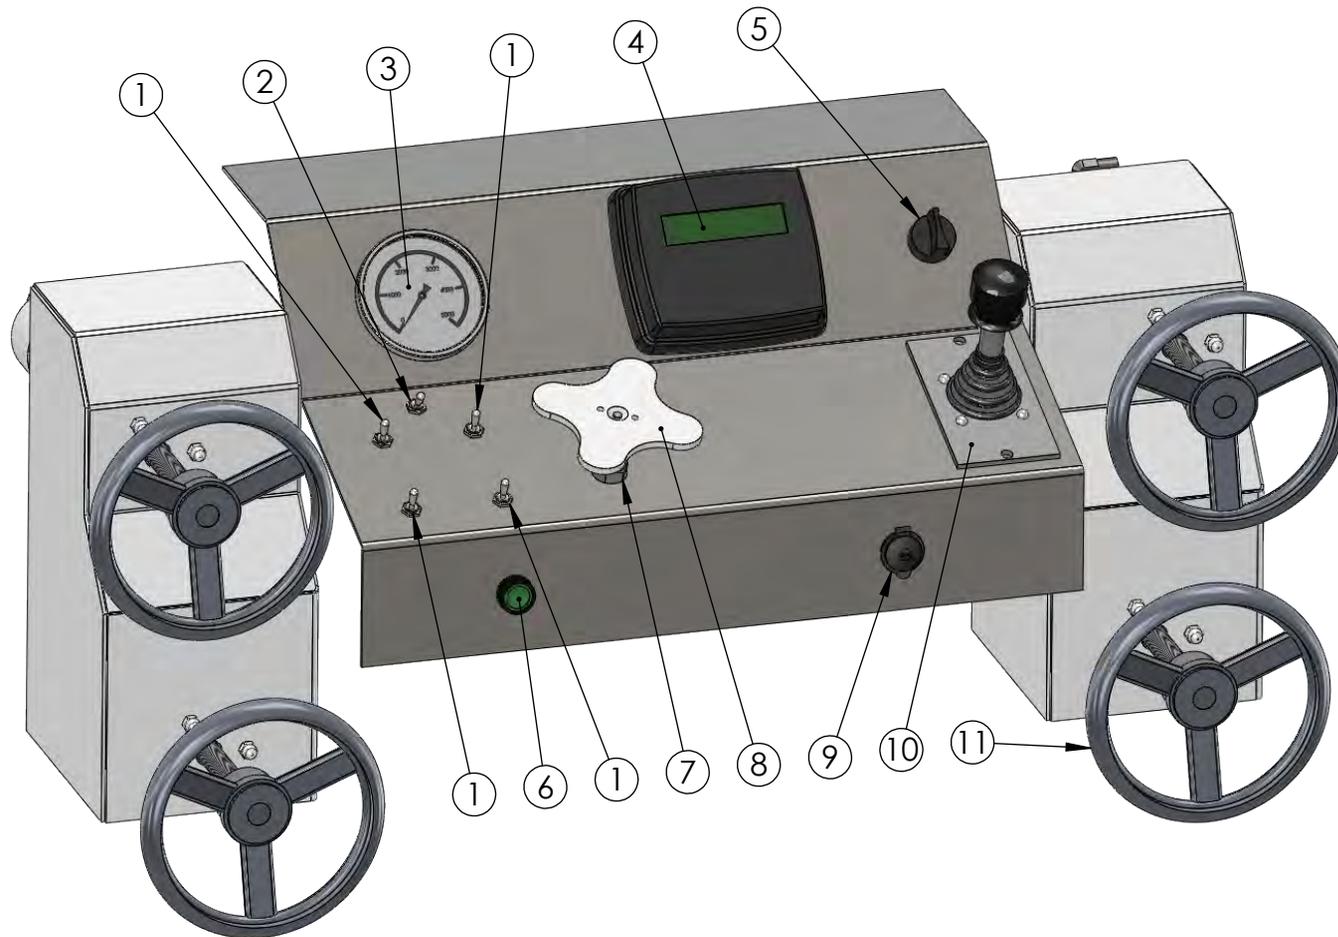


| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|--------------------------|------|
| 1 | S40100 | Switch, SP/DT Momentary | 4 |
| 2 | S40035 | Switch, SP/ST Toggle | 1 |
| 3 | G02076 | Gauge, 600PSI | 1 |
| 4 | D09030 | Display, Controls Inc. | 1 |
| 5 | S40070 | Switch, Key Cole Hersee | 1 |
| 6 | S40169 | Switch, Payout Lock-Out | 1 |
| 7 | M04061 | Manifold Tension Control | 1 |
| 8 | H02063 | Handle CP210 relief | 1 |
| 9 | R12005 | 12v Socket | 1 |
| 10 | C34031 | Joystick Controller | 1 |
| 11 | C32004 | Brake Cylinder | 4 |

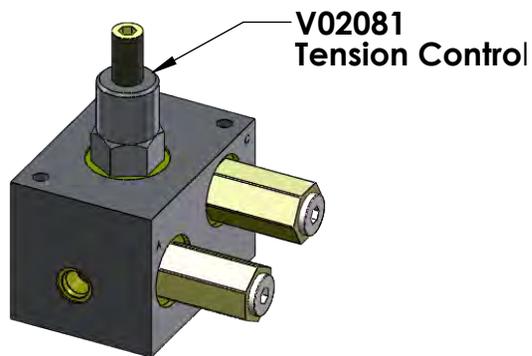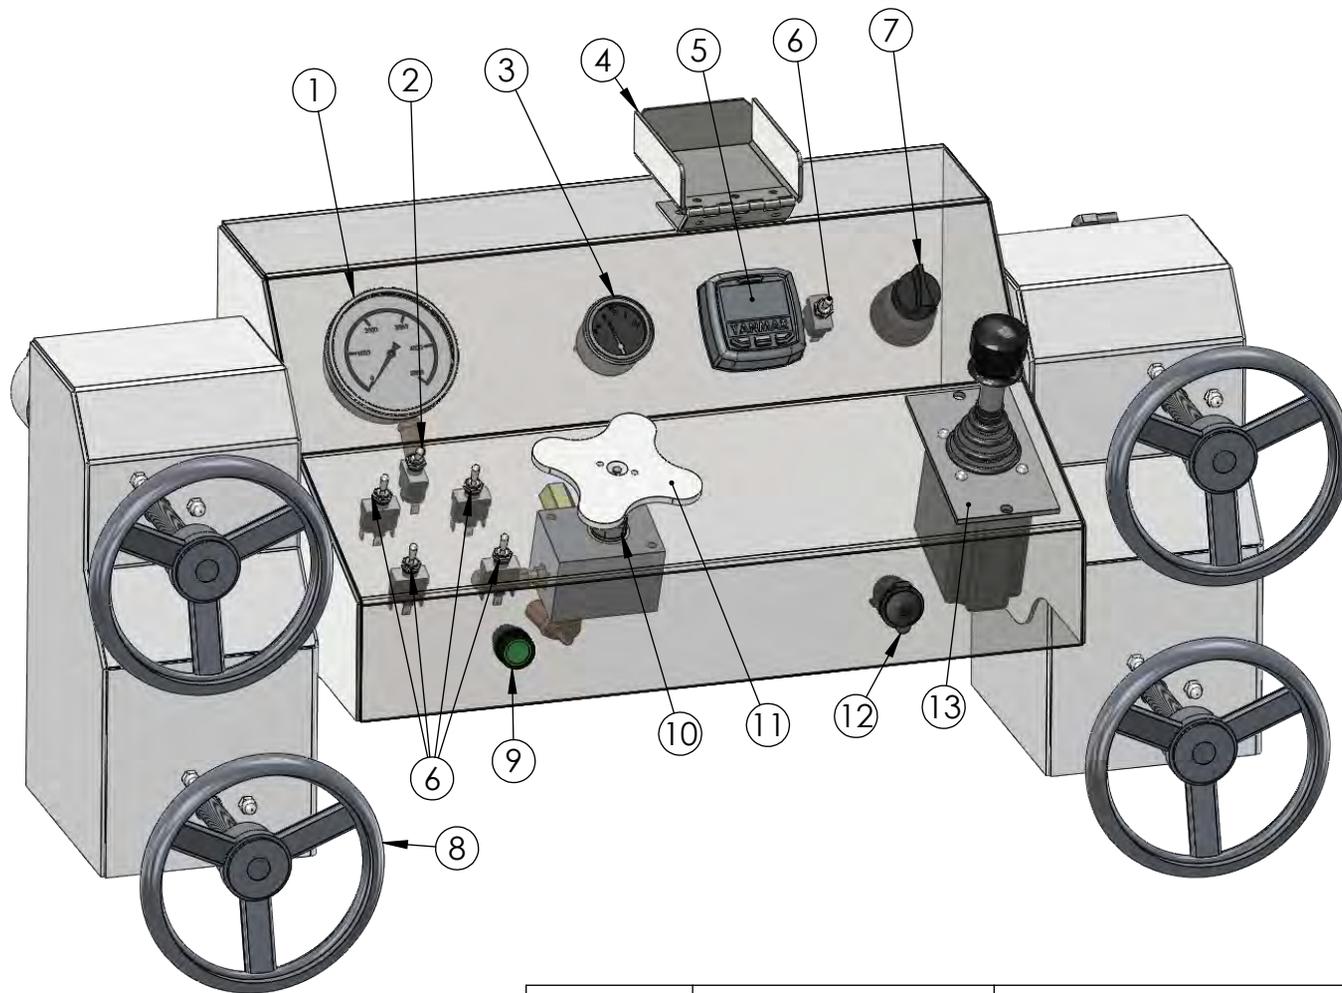


| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|---------------------------------|------|
| 1 | G02076 | Gauge, 600PSI | 1 |
| 2 | S40035 | Switch, SP/ST Toggle | 1 |
| 3 | G02005 | Gauge, Fuel Level | 1 |
| 4 | C29034 | Cover, Display Yanmar T4f | 1 |
| 5 | K02707 | Display, Yanmar T4 w/ Keyswitch | 1 |
| 6 | S40100 | Switch, SP/DT Momentary | 5 |
| 7 | S40070 | Switch, Key Cole Hersee | 1 |
| 8 | C32004 | Brake Cylinder | 4 |
| 9 | S40169 | Switch, Payout Lock-Out | 1 |
| 10 | M04061 | Manifold Tension Control | 1 |
| 11 | H02063 | Handle CP210 relief | 1 |
| 12 | R12005 | 12v Socket | 1 |
| 13 | C34031 | Joystick Controller | 1 |

IF items look different than the parts breakdown please call for assistance. (541)354-1001

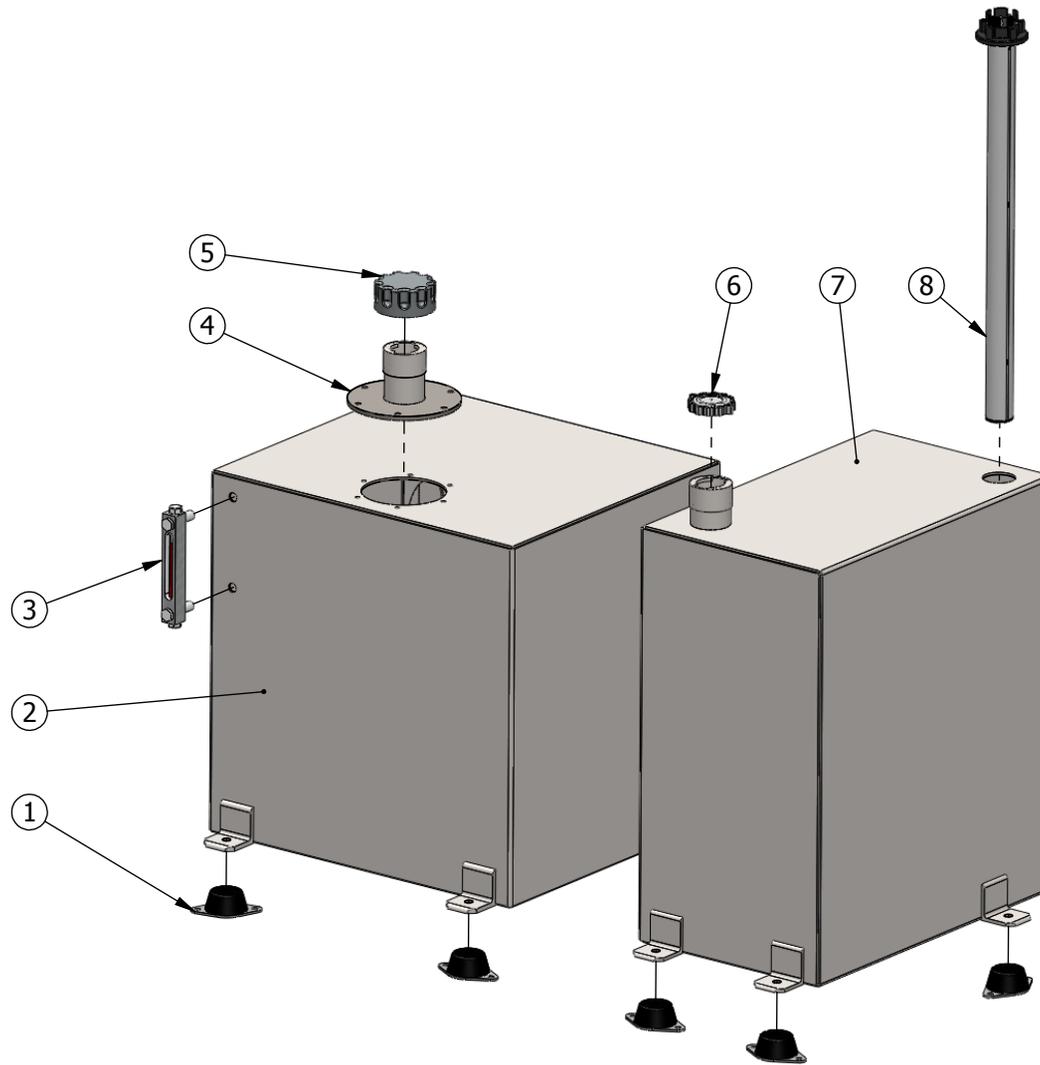


| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|---------------------------|------|
| 1 | I04003 | Insulator, Small | 8 |
| 2 | T01100 | Tank, Hydraulic 31 gallon | 1 |
| 3 | G02046 | Gauge, Hyd oil level | 1 |
| 4 | N07002 | Neck, Hydraulic fill | 1 |
| 5 | C06155A | Cap, Hydraulic | 1 |
| 6 | C06205 | Cap, Fuel | 1 |
| 7 | T01103 | Tank, Fuel 23.8 gallon | 1 |
| 8 | S46006 | Fuel Sender | 1 |

If items look different than the parts breakdown please call for assistance. (541)354-1001

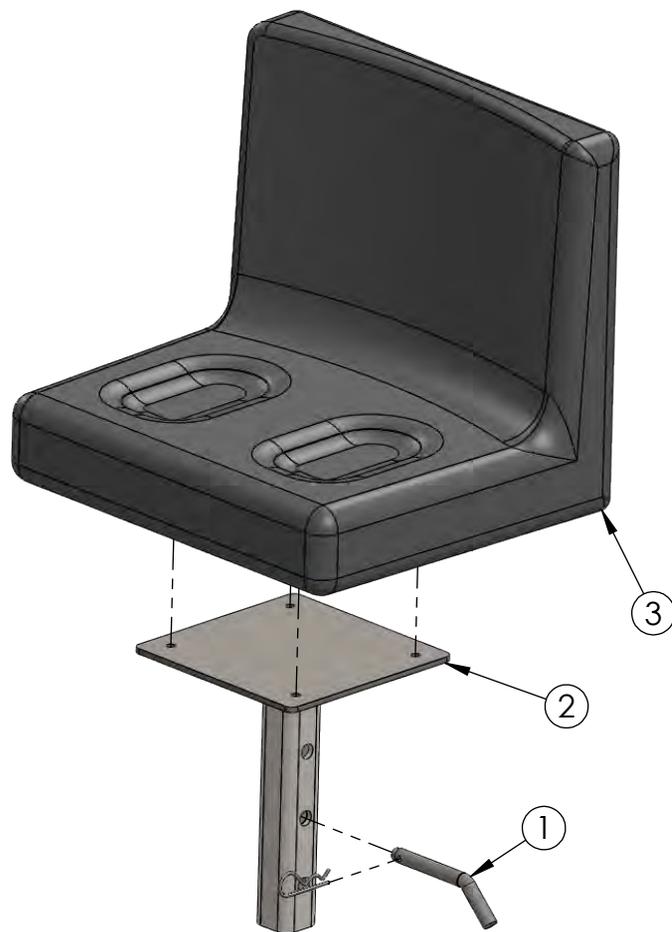


| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|--------------------------|------|
| 1 | P06999 | Pin, Bent Hitch 5/8 x 3" | 1 |
| 2 | P14051 | Post, Seat Mount | 1 |
| 3 | S03040 | Seat, Operator JD | 1 |

If items look different than the parts breakdown please call for assistance. (541)354-1001

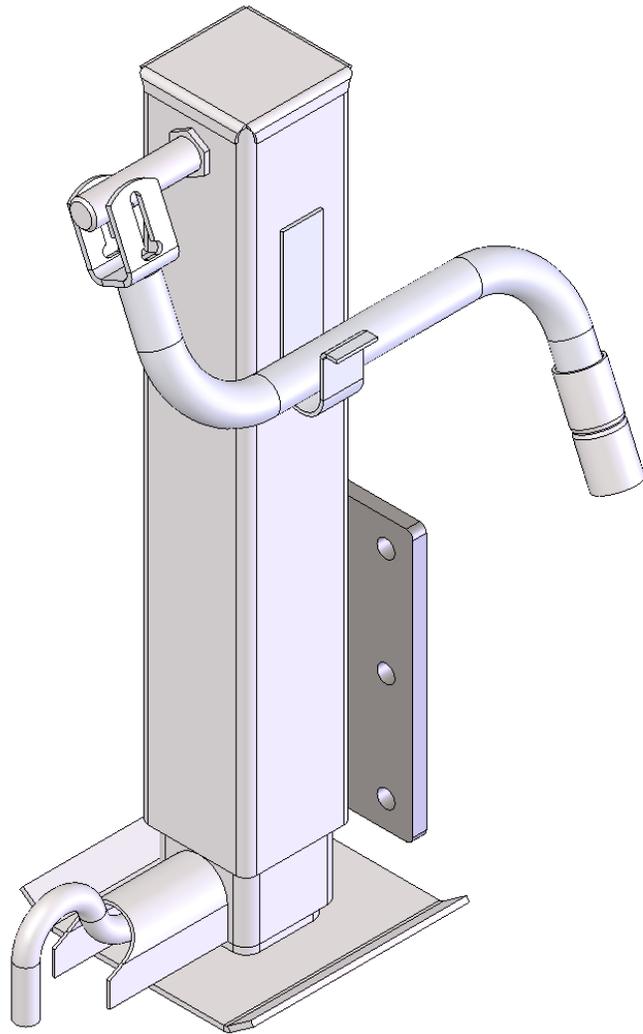


**J04041
REAR STREETSIDE/FRONT
JACKSTAND**

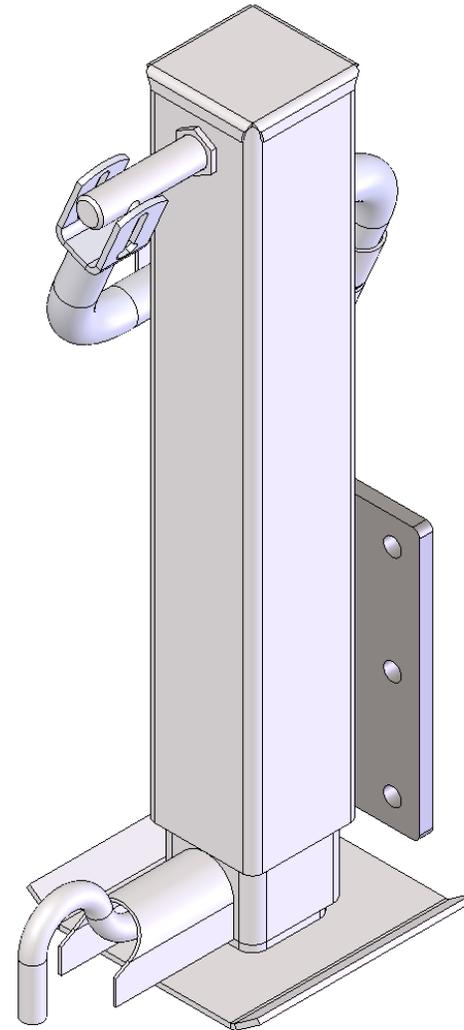


**J04044
REAR CURBSIDE
JACKSTAND**

If items look different than the parts breakdown please call for assistance. (541)354-1001

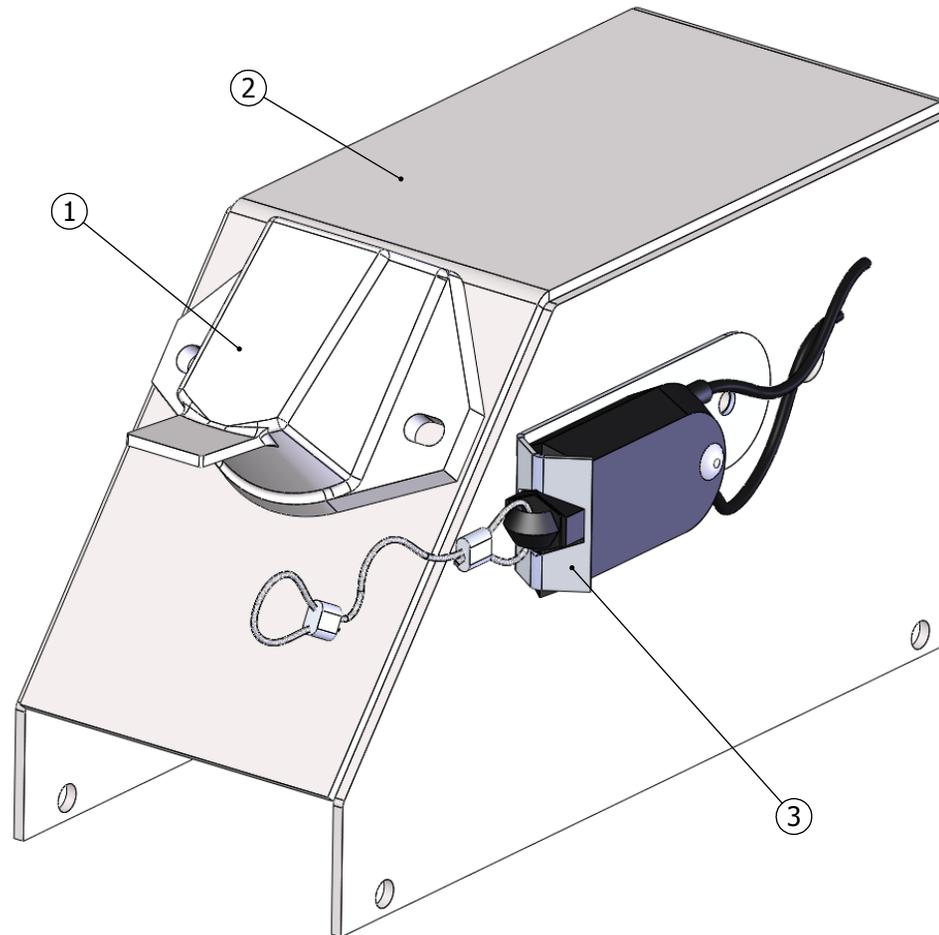


| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|----------------------|------|
| 1 | S21035 | Socket 7-wire Pollak | 1 |
| 2 | H05072 | Hood, Electrical | 1 |
| 3 | S40003 | Switch, Breakaway | 1 |


If items look different than the parts breakdown please call for assistance. (541)354-1001

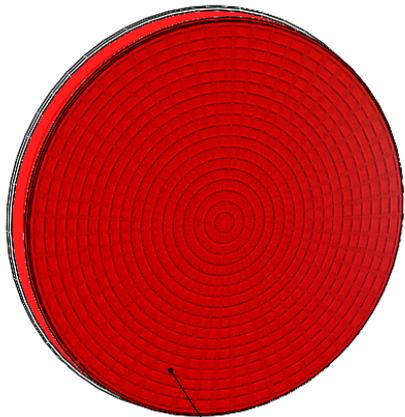


L04030
Light, 4" Tail Stop Turn

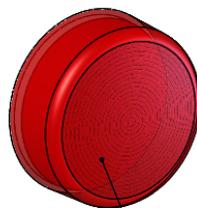


L04070
Light, 2" Red

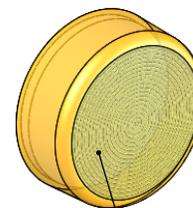


L04035
Light, 2" Amber

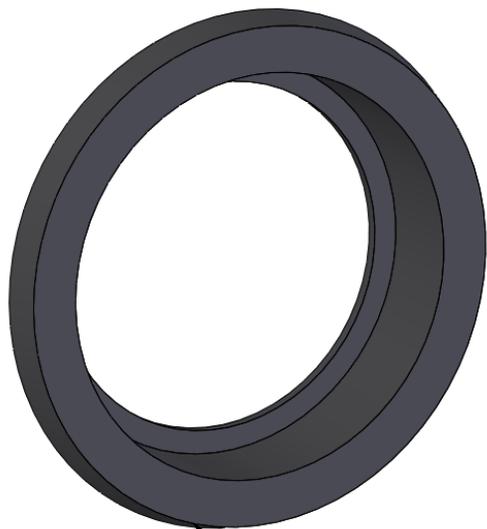

G08010
Grommet, 4" Tail/Stop/Turn

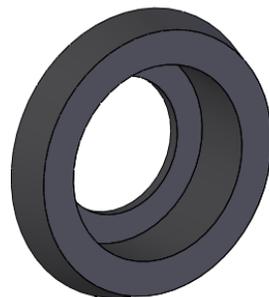


G08005
Grommet 2" Light

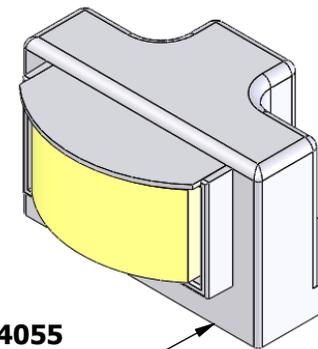


L04055
Light, License plate


If items look different than the parts breakdown please call for assistance. (541)354-1001

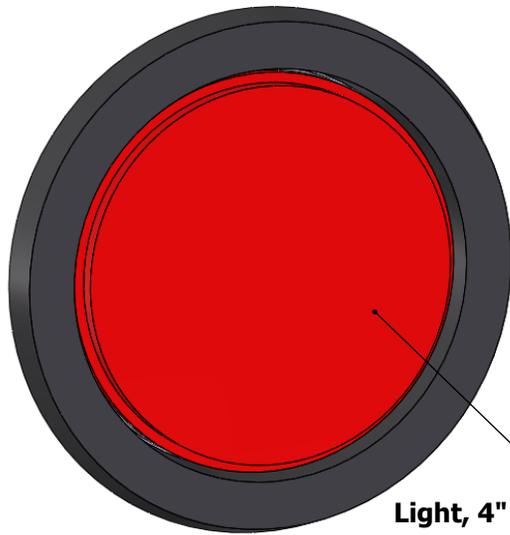


L04032
Light, 4" Tail/Stop/Turn Kit LED

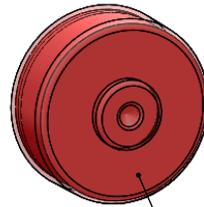

L04310
Light Red 2" LED

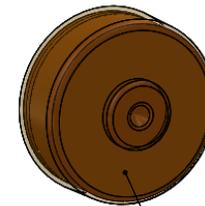

L04311
Light Amber 2" LED

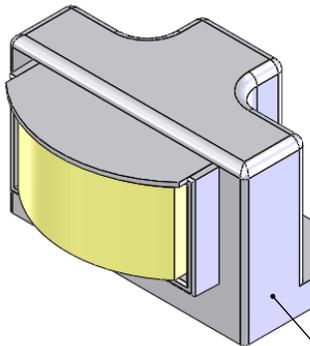


L04055
Light, License plate




G08005
Grommet 2" Light




P05025
Pigtail 2 wire

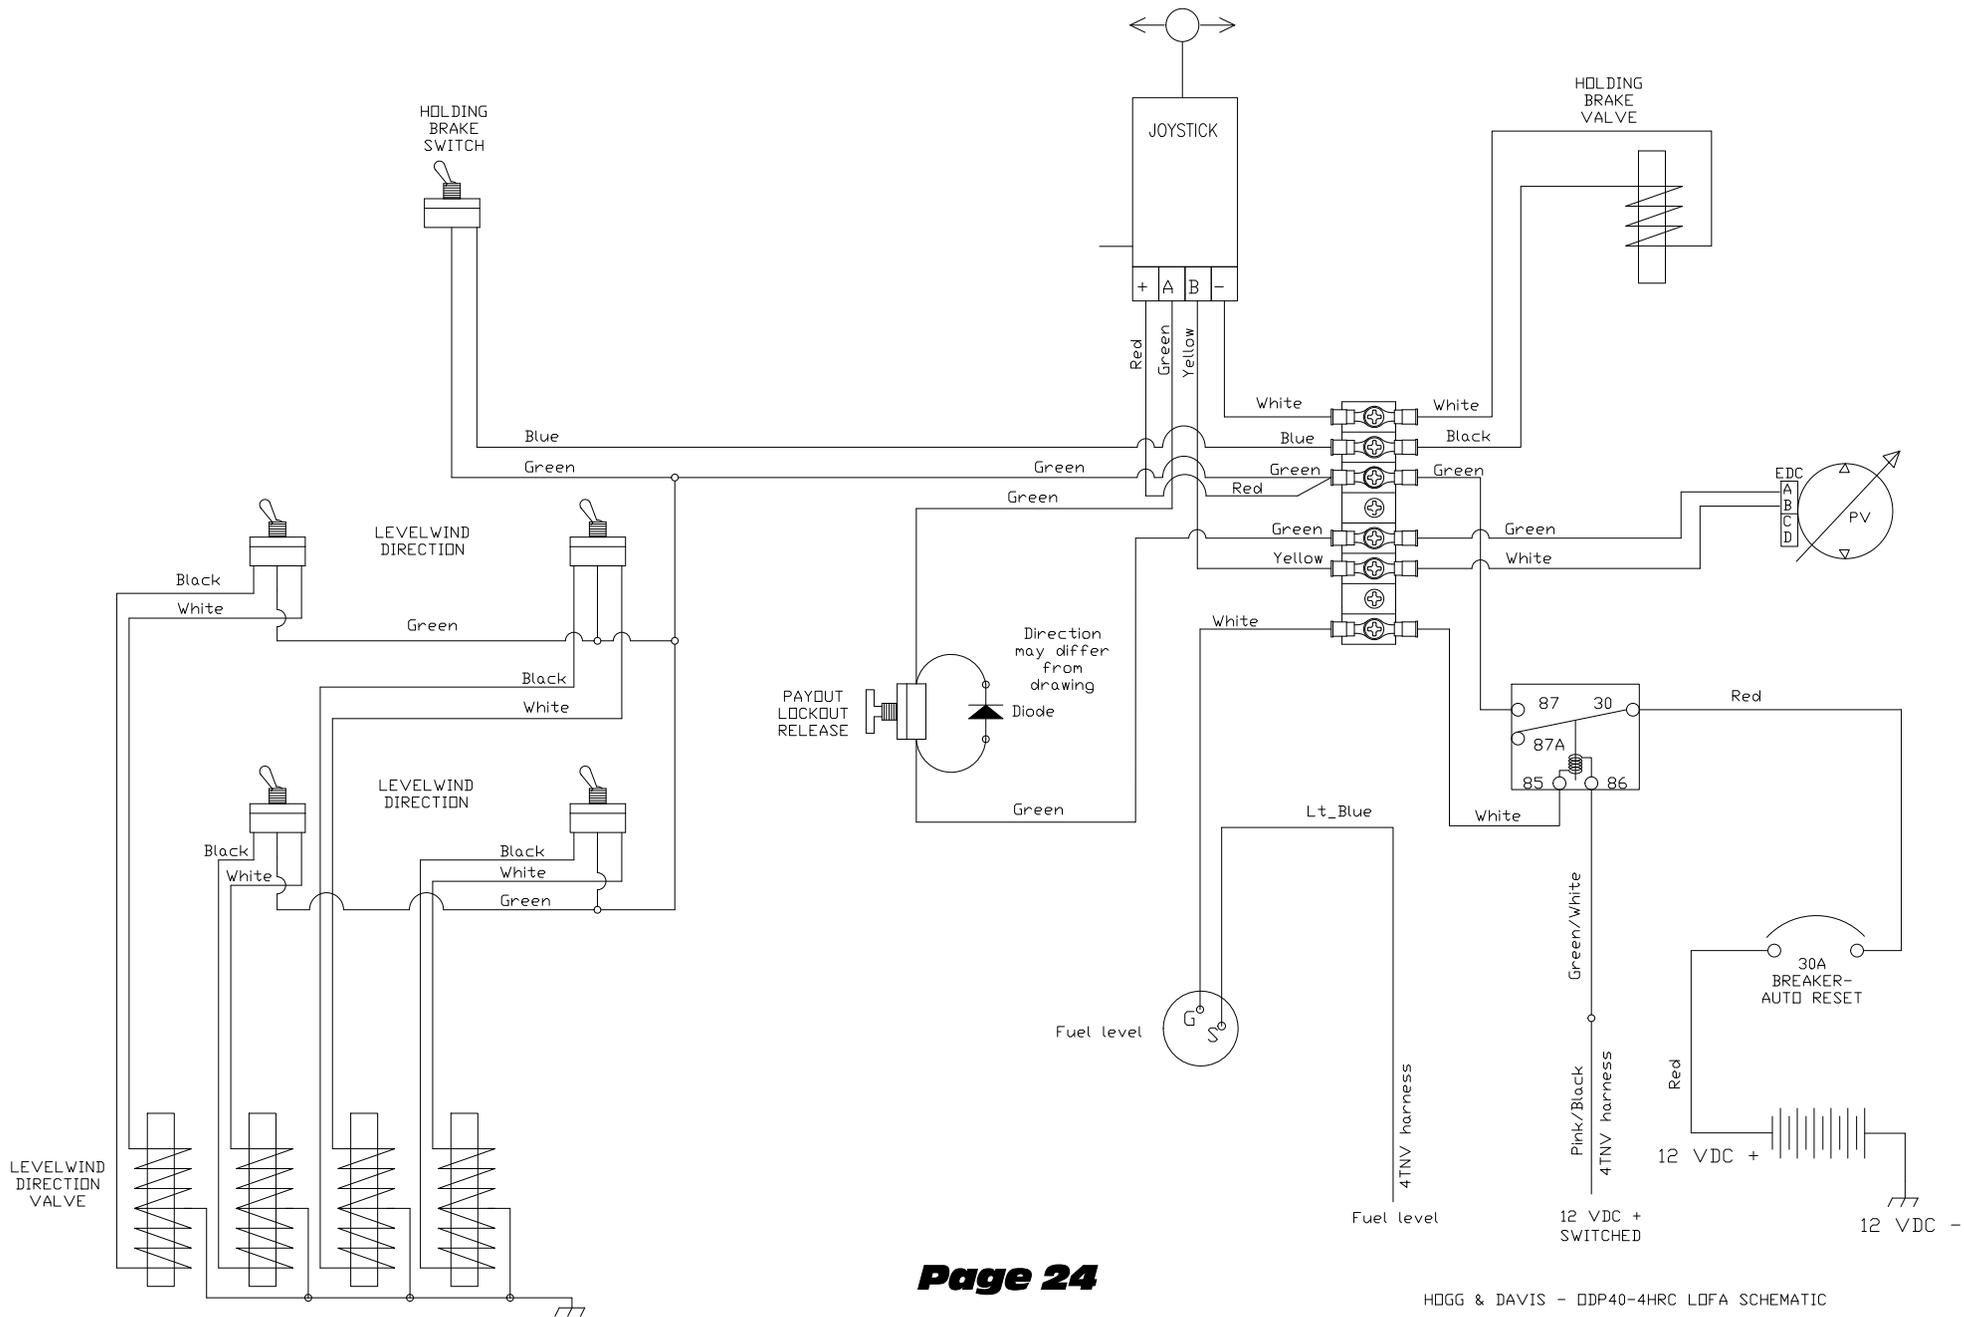

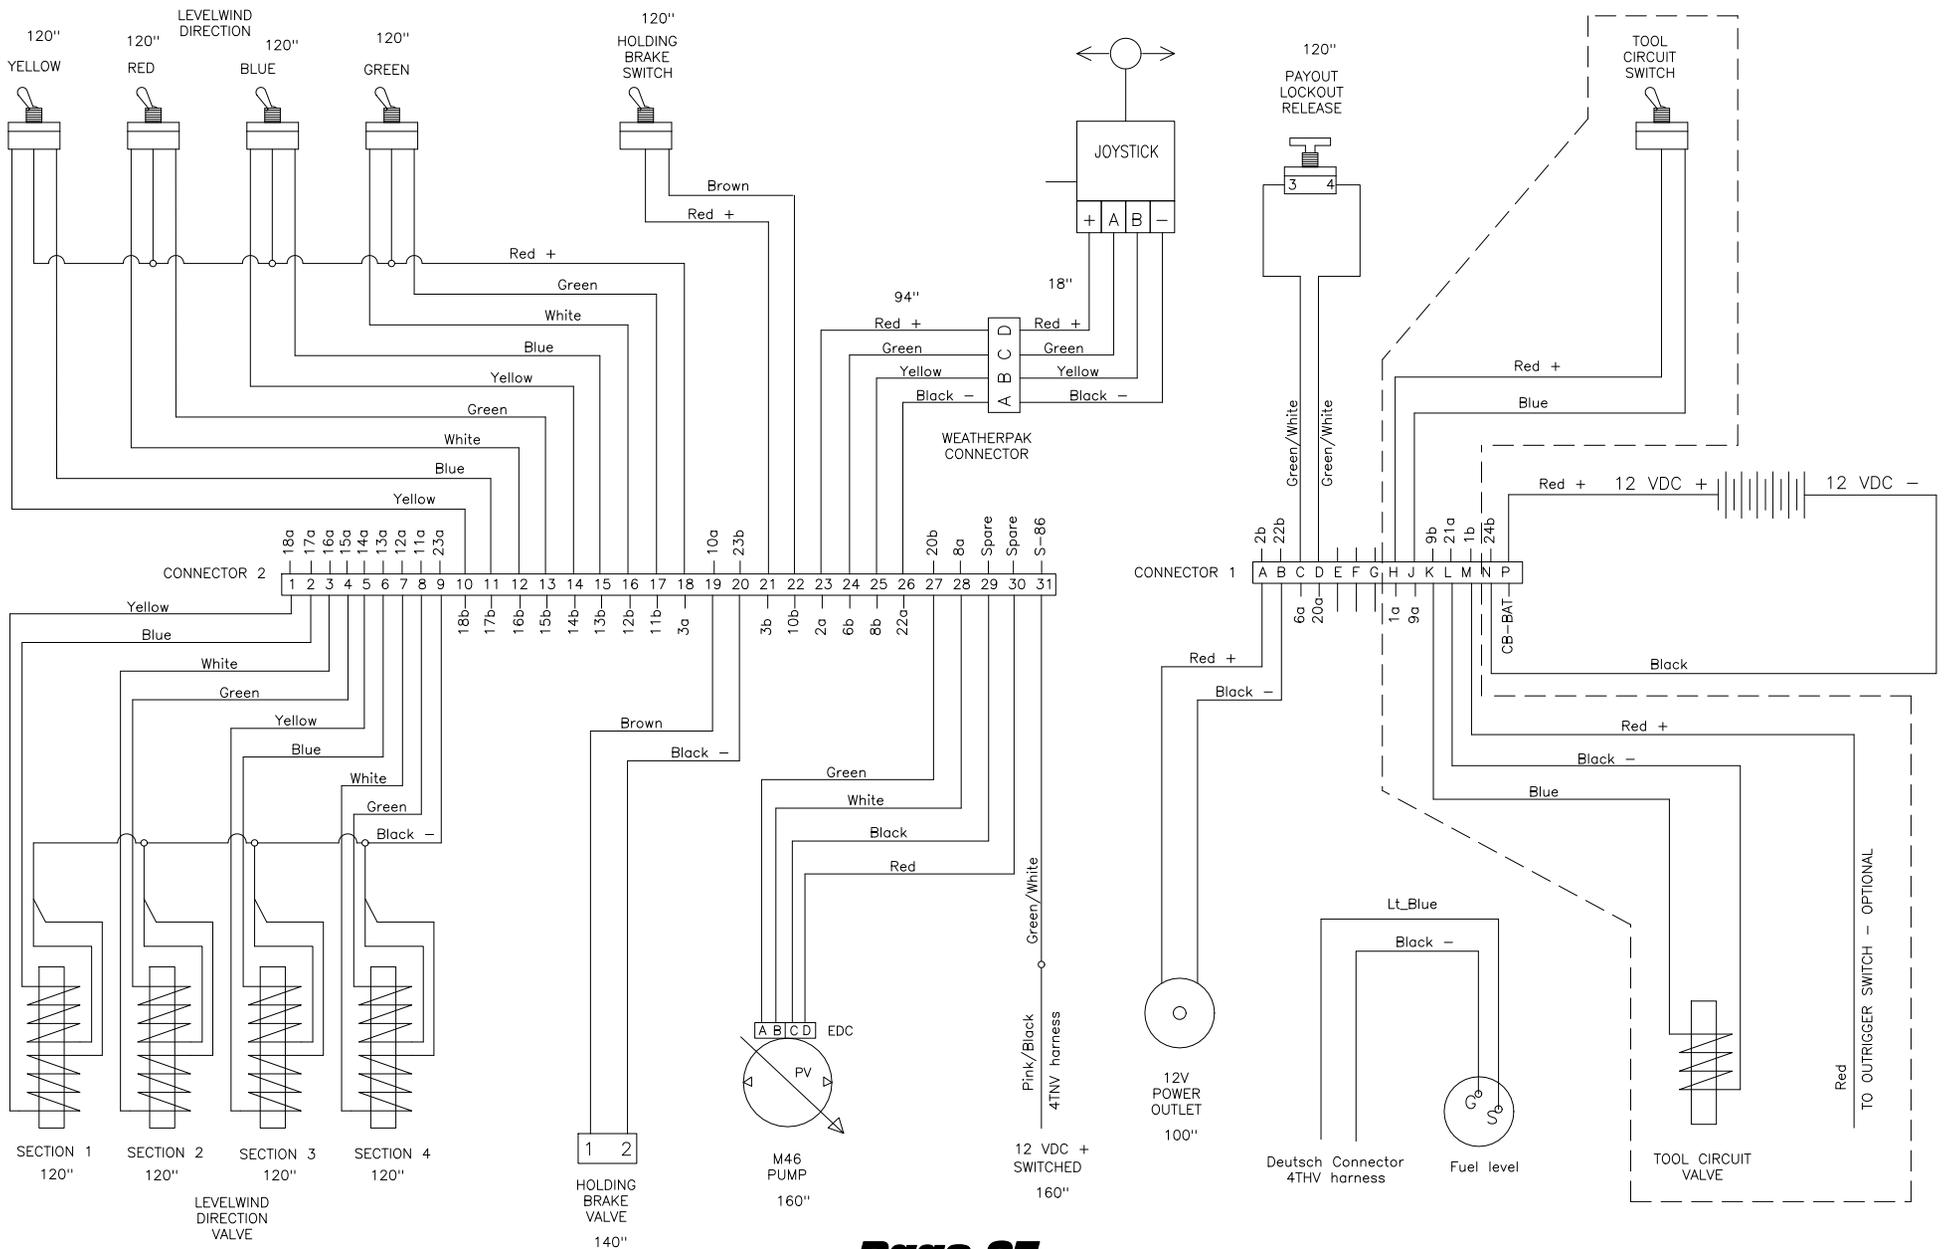

NOTE: all wires 16ga

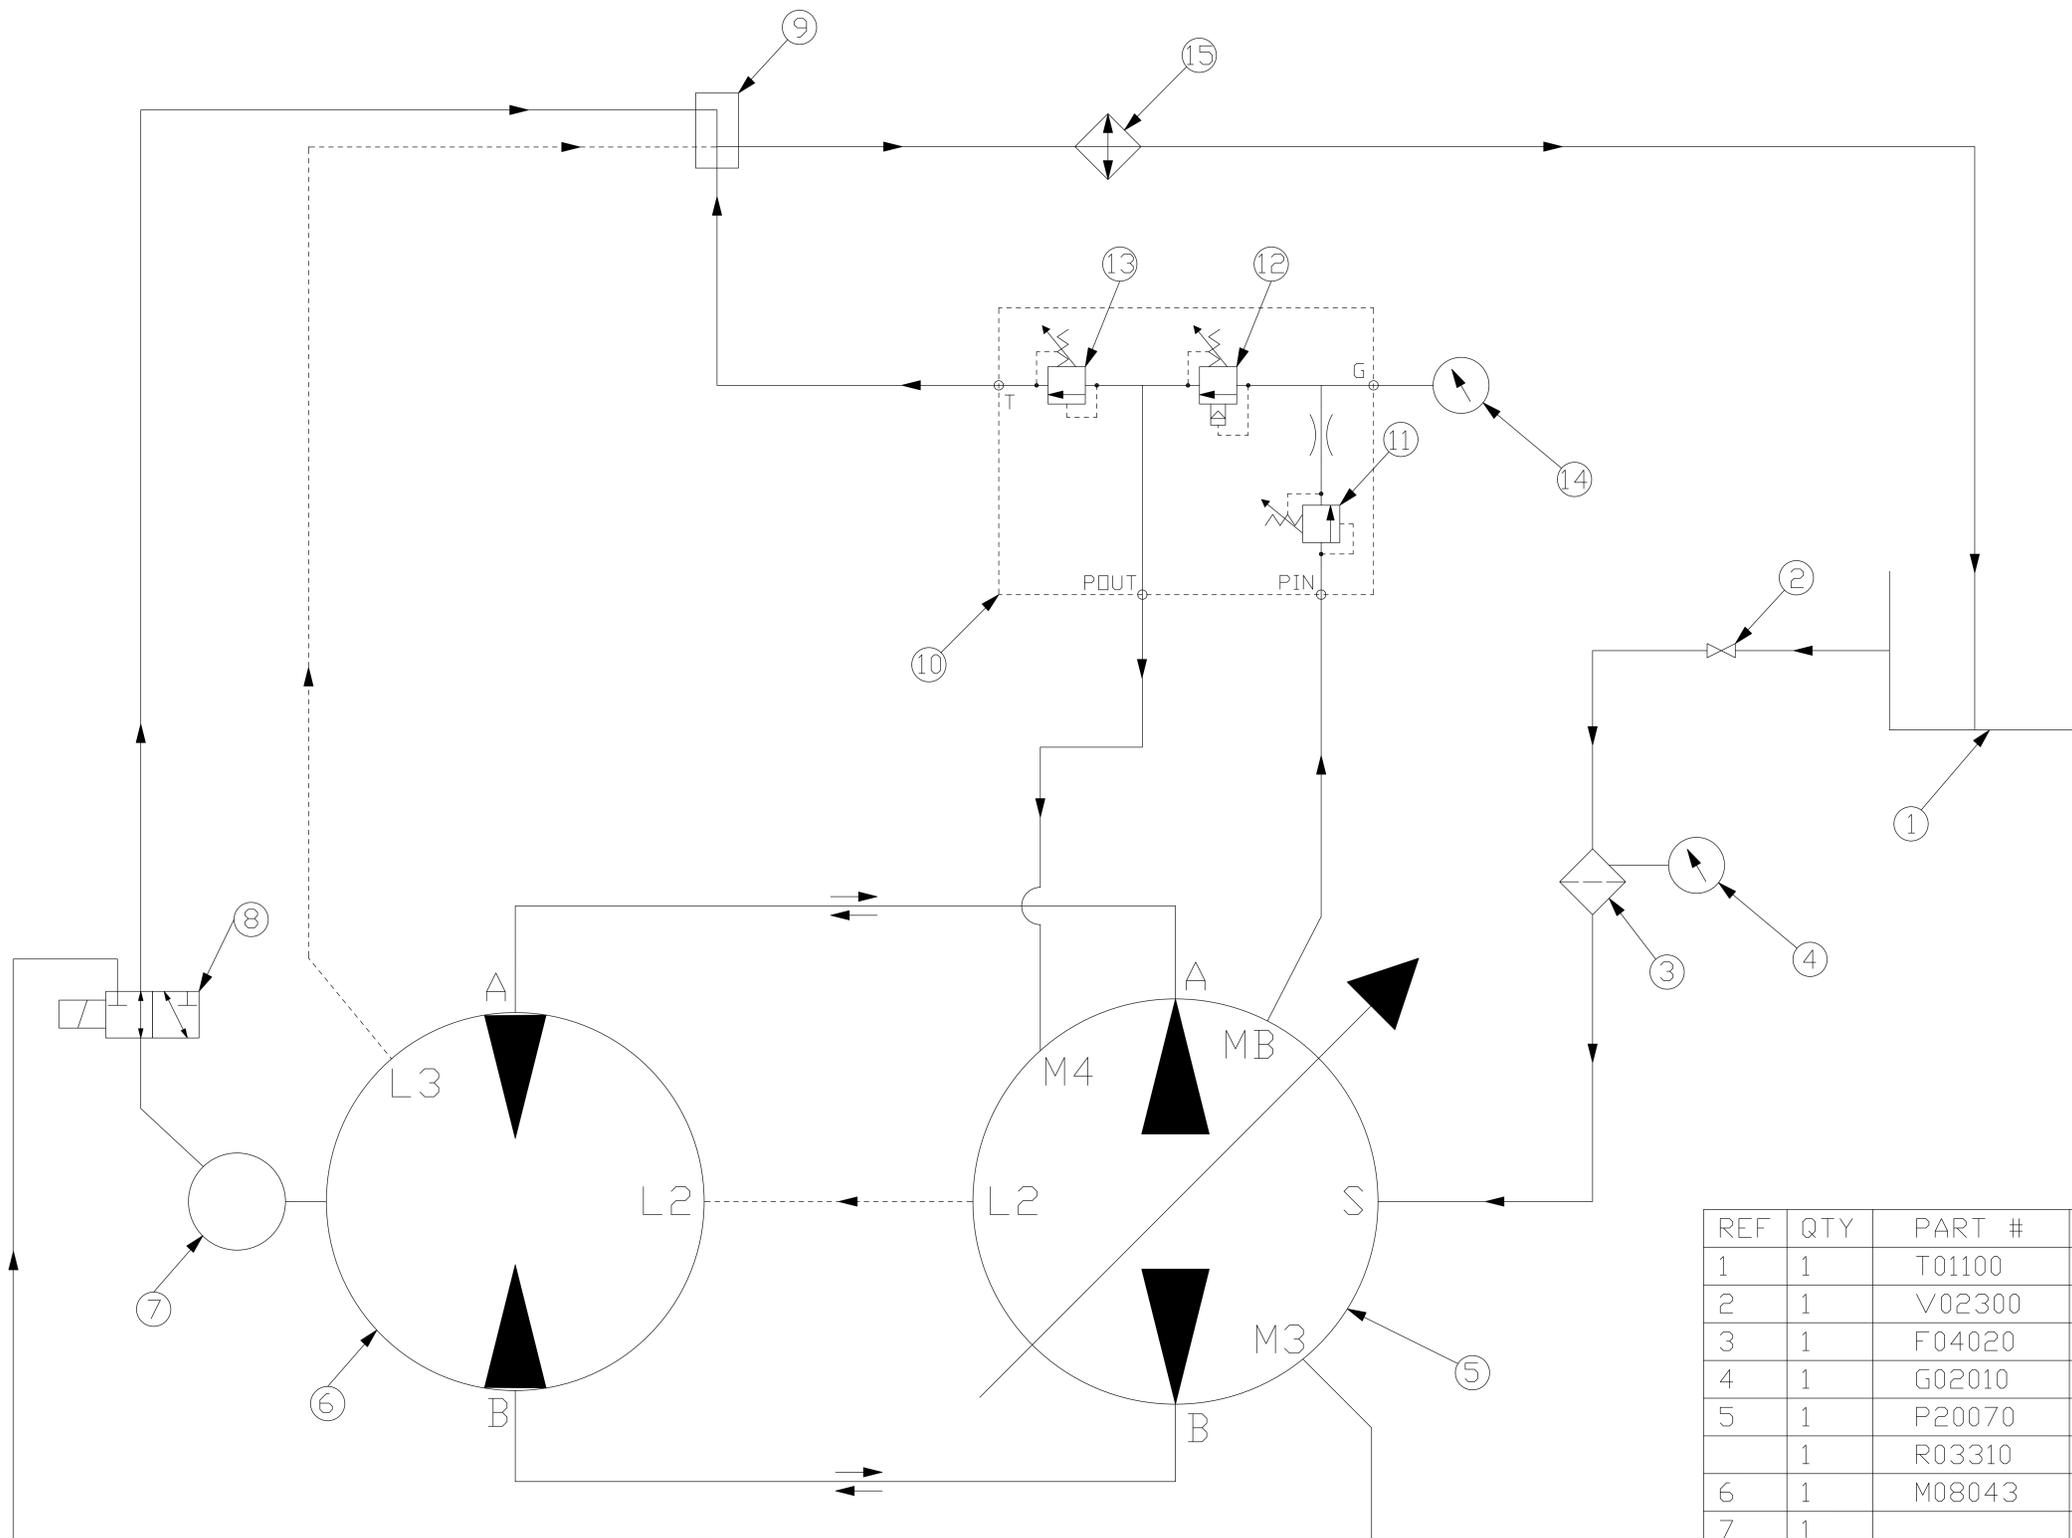

| REF | QTY | PART # | DESCRIPTION |
|-----|-----|--------|-----------------------------|
| 1 | 1 | T01100 | Tank, Hydraulic |
| 2 | 1 | V02300 | Valve, Ball 1-1/4 |
| 3 | 1 | F04020 | Filter, Spin-on 10 Micron |
| 4 | 1 | G02010 | Gauge, Suction |
| 5 | 1 | P20070 | Pump Sundstrand |
| | 1 | R03310 | Relief, 2755 PSI |
| 6 | 1 | M08043 | Motor, Sauer Danfoss |
| 7 | 1 | | Planetary Brake |
| 8 | 1 | V02006 | Valve, Two Posiiton |
| 9 | 1 | M04010 | Return Manifold |
| 10 | 1 | M04061 | Manifold, Pressure Limiting |
| 11 | 1 | | Relief, LOW PSI |
| 12 | 1 | | Relief, TENSION |
| 13 | 1 | | Relief, HIGH PSI |
| 14 | 1 | G02076 | Gauge, 5K PSI |
| 15 | 1 | C35010 | Cooler, Hydrulic Oil |




HOGG & DAVIS
 PO BOX 405, 3800 EAGLE LOOP
 ODELL, OR 97044 (541) 354-1001

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS
 DRAWING IS THE SOLE PROPERTY OF
 HOGG&DAVIS. ANY REPRODUCTION
 IN PART OR AS A WHOLE WITHOUT THE
 WRITTEN PERMISSION OF
 HOGG&DAVIS IS PROHIBITED.

DRAWN
 NAME sm
 DATE 10/21/2011
 SHEET 1 OF 1

TITLE: Hydrostatic Schematic
 Part #: ODP40-4HRC part 1

note: All ODP40-4HRC trailers are equipped with levelwinds, which uses a block off for the power beyond port on the Outlet (item 6). If equipped with outriggers or a tool circuit, an outlet with a power beyond must be used (item 7).

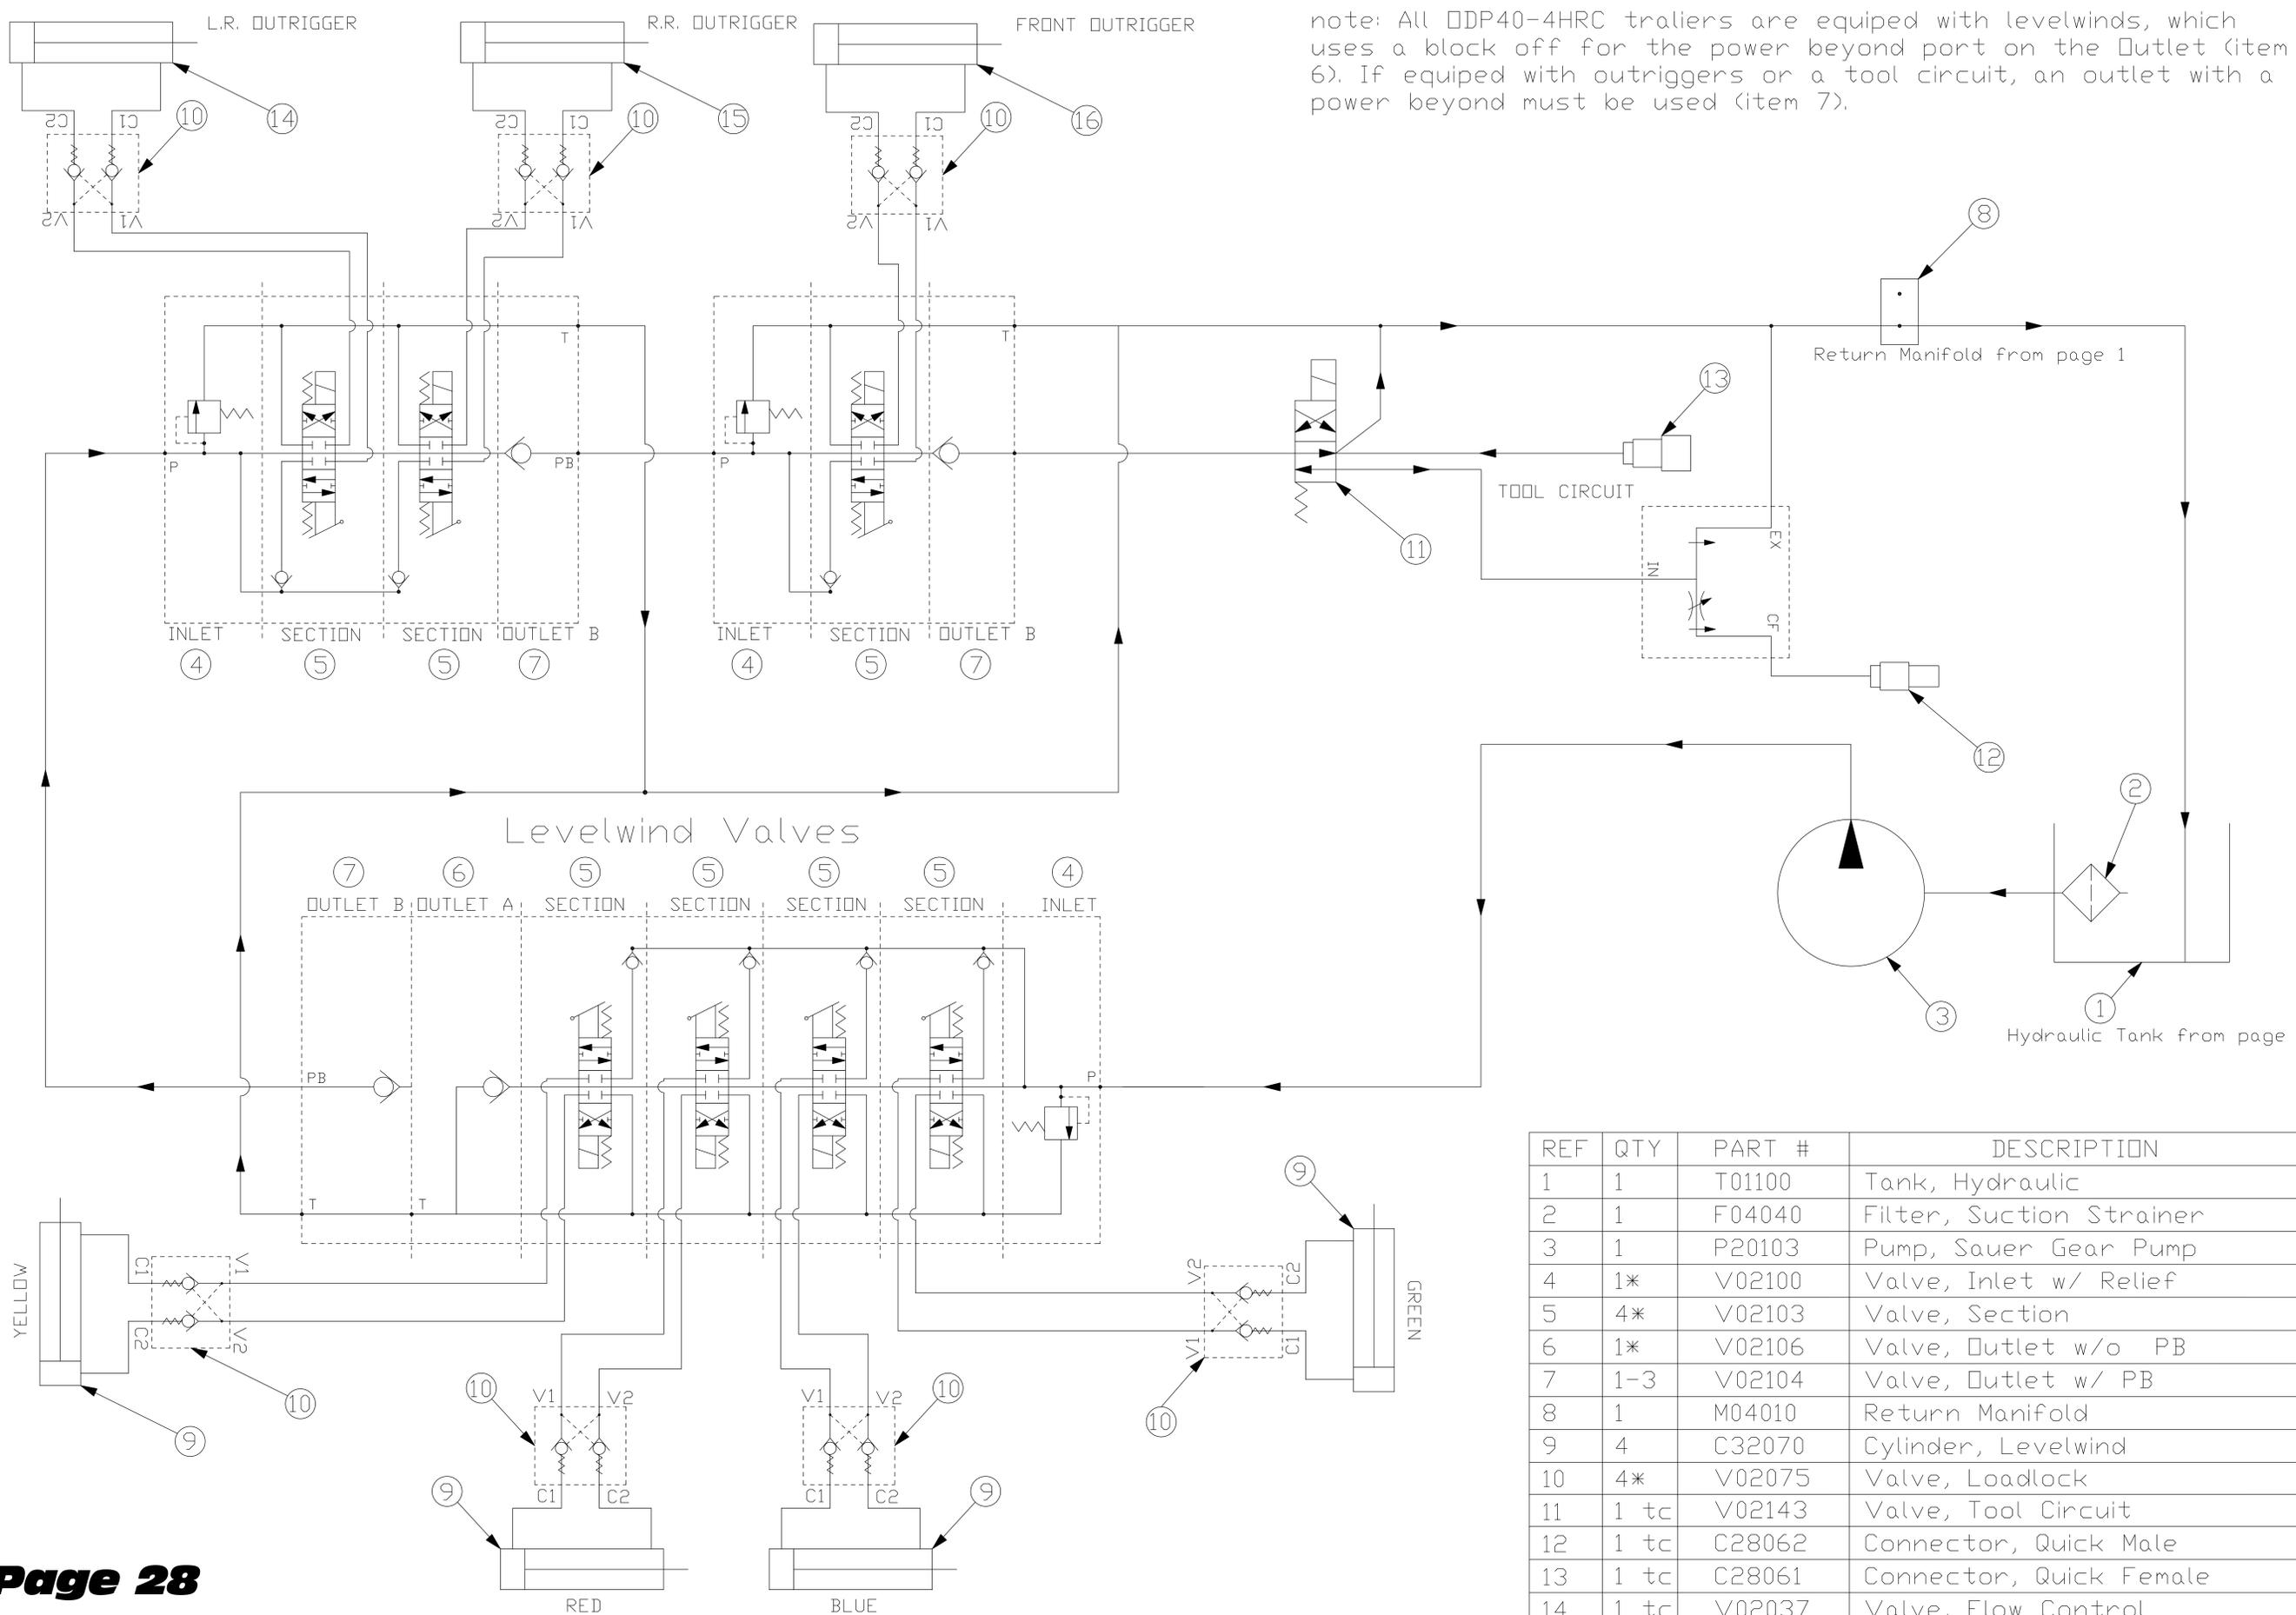

| REF | QTY | PART # | DESCRIPTION |
|-----|------|--------|--------------------------|
| 1 | 1 | T01100 | Tank, Hydraulic |
| 2 | 1 | F04040 | Filter, Suction Strainer |
| 3 | 1 | P20103 | Pump, Sauer Gear Pump |
| 4 | 1* | V02100 | Valve, Inlet w/ Relief |
| 5 | 4* | V02103 | Valve, Section |
| 6 | 1* | V02106 | Valve, Outlet w/o PB |
| 7 | 1-3 | V02104 | Valve, Outlet w/ PB |
| 8 | 1 | M04010 | Return Manifold |
| 9 | 4 | C32070 | Cylinder, Levelwind |
| 10 | 4* | V02075 | Valve, Loadlock |
| 11 | 1 tc | V02143 | Valve, Tool Circuit |
| 12 | 1 tc | C28062 | Connector, Quick Male |
| 13 | 1 tc | C28061 | Connector, Quick Female |
| 14 | 1 tc | V02037 | Valve, Flow Control |



HOGG & DAVIS
 PO BOX 405, 3800 EAGLE LOOP
 ODELL, OR 97044 (541) 354-1001

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS
 DRAWING IS THE SOLE PROPERTY OF
 HOGG&DAVIS. ANY REPRODUCTION
 IN PART OR AS A WHOLE WITHOUT THE
 WRITTEN PERMISSION OF
 HOGG&DAVIS IS PROHIBITED.

DRAWN
 NAME sm
 DATE 10/26/2011
 SHEET 2 OF 2


TITLE: Hydraulic Schematic
 Part #: ODP40-4HRC

Wheel Torque Requirements

Be sure to use only the fasteners matched to the cone angle of your wheel (usually 60° or 90°). The proper procedure for attaching your wheels is as follows:

1. Start all bolts or nuts by hand to prevent cross threading.
2. Tighten bolts or nuts in the sequence shown for wheel torque requirements.
3. The tightening of the fasteners should be done in stages. Following the recommended sequence, tighten fasteners as shown in the chart below.
4. Wheel nuts/bolts should be torqued before first road use and after each wheel removal. Check and re-torque after the first 10 miles, 25 miles and again at 50 miles. Check periodically thereafter.

| Wheel Size | 1st Stage | 2nd Stage | 3rd Stage |
|---|-------------------------|-----------|-----------|
| 12" | 20-25 | 35-40 | 50-75 |
| 13" | 20-25 | 35-40 | 50-75 |
| 14" | 20-25 | 50-60 | 90-120 |
| 15" | 20-25 | 50-60 | 90-120 |
| 16" | 20-25 | 50-60 | 90-120 |
| 16.5" x 6.75" | 20-25 | 50-60 | 90-120 |
| 16.5" x 9.75" | 55-60 | 120-125 | 175-225 |
| 14.5" Demount | Tighten Sequentially to | | 85-95 |
| 17.5" Hub Pilot Clamp Ring & Cone Nuts | 50-60 | 100-120 | 190-210 |
| 17.5" Hub Pilot 5/8" Flange Nuts | 50-60 | 90-200 | 275-325 |

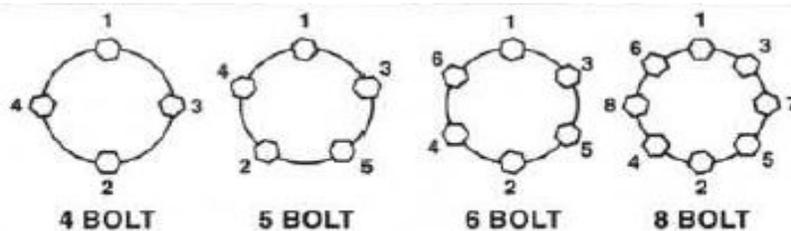

Maximum Wheel Fastener Torque

The wheel mounting studs used on Dexter Axles conforms to the SAE standards for grade 8. The maximum torque level that can be safely applied to these studs is listed in the following chart:

| Stud Size | Max. Torque |
|-----------------------|--------------------|
| 1/2"-20 UNF, class 2A | 120 lb ft. |
| 9/16"-18, class 2A | 170 lb ft. |
| 5/8"-18, class 2A | 325 lb ft. |

CAUTION

Exceeding the above listed torque limits can damage studs and/or nuts and lead to eventual fractures and dangerous wheel separation.

Decal Kit # K40016



D30001
(1)

HOGG & DAVIS, INC.
www.hogadavis.com

D30018
(1)



D30009
(1)



D30010
(3)



D30015
(5)



D30034
(3)




D30042
(10)



D30073
(2)



D30069
(2)

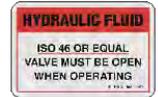

D30033
(1)



D30022
(1)



D30021
(1)



D30028
(6)



D30036
(6)



D30026
(3)



D30062
(1)



D30063
(1)



D30064
(1)



D30065
(1)



D30067
(4)



D30127
(3)




R09043
(4)




R09044
(2)



T19001
(12)

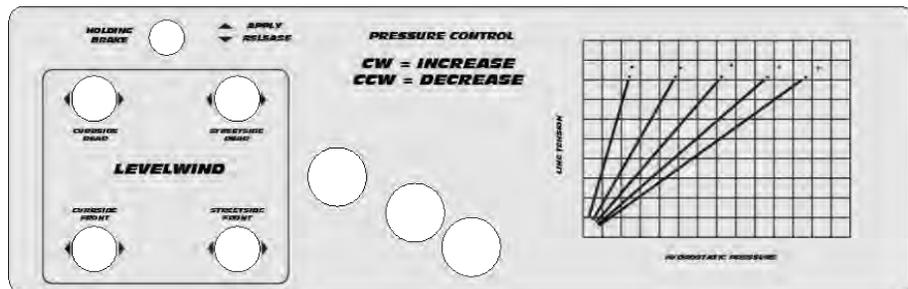

D30074
(1)

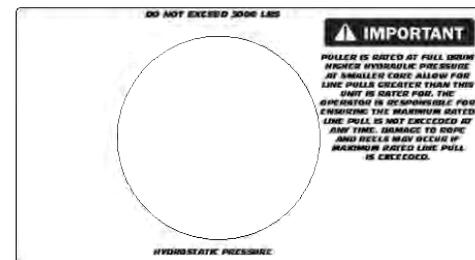

D30075
(1)




D30081
(4)




D30128
(1)





D30076
(1)

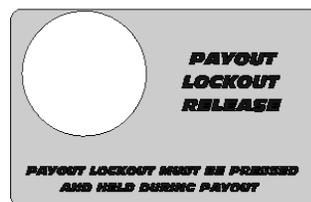

D30068
(1)

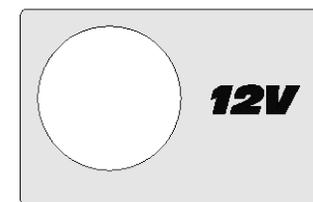


D30083
(1)

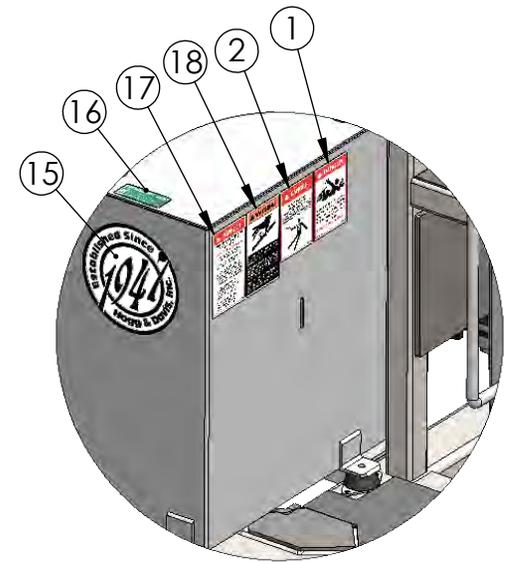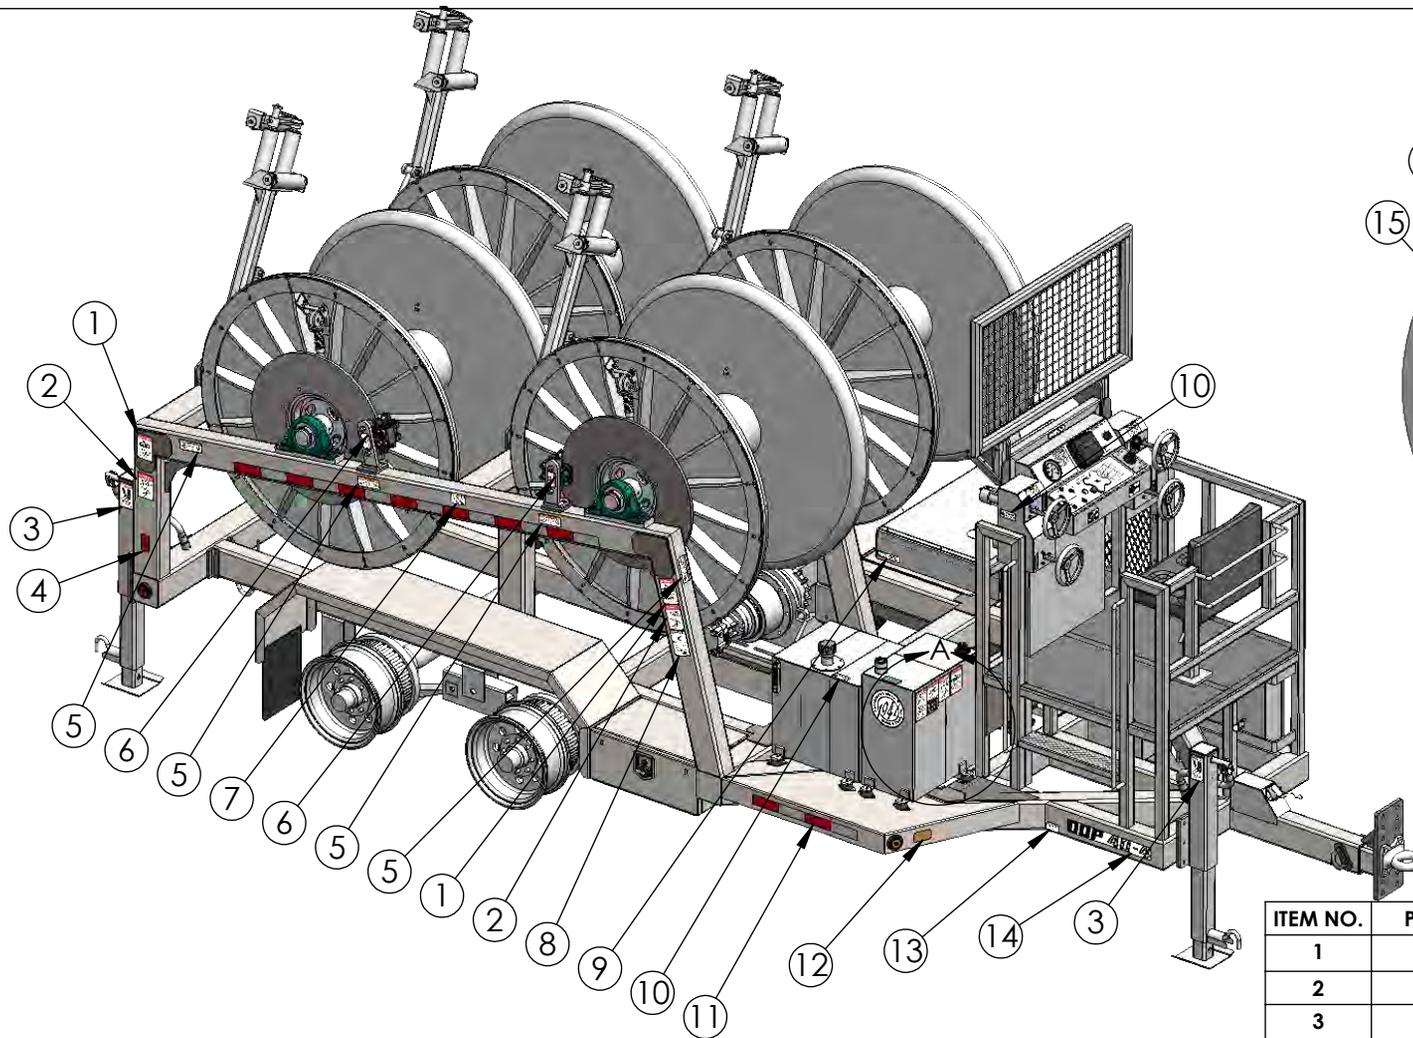


DETAIL A
SCALE 1 : 12


| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|-------------------------------|------|
| 1 | D30028 | Decal, Danger Twisty Man | 6 |
| 2 | D30036 | Decal, Electrocutation Hazard | 6 |
| 3 | D30026 | Decal, Danger Stand Clear | 3 |
| 4 | R09043 | Reflector, Red 2x3-1/2 | 4 |
| 5 | D30042 | Decal, Keep Hands Clear | 10 |
| 6 | D30015 | Decal, Hot Surface | 5 |
| 7 | D30067 | Decal, Release Pressure | 4 |
| 8 | D30127 | Decal, Burn Hazard | 3 |
| 9 | D30069 | Decal, Lubricate Chain Daily | 2 |
| 10 | D30010 | Decal, Hydraulic Fluid Only | 3 |
| 11 | T19001 | Red/White Reflective tape | 18 |
| 12 | R09044 | Reflector, Amber 2x3-1/2 | 2 |
| 13 | D30034 | Decal, Grounding Lug | 3 |
| 14 | D30073 | Decal, 40-4 Tongue | 2 |
| 15 | D30128 | Established 1947 | 1 |
| 16 | D30009 | Decal, Diesel Fuel Only | 1 |
| 17 | D30021 | Decal, Untrained Operator | 1 |
| 18 | D30022 | Decal, Danger Fluid Pressure | 1 |

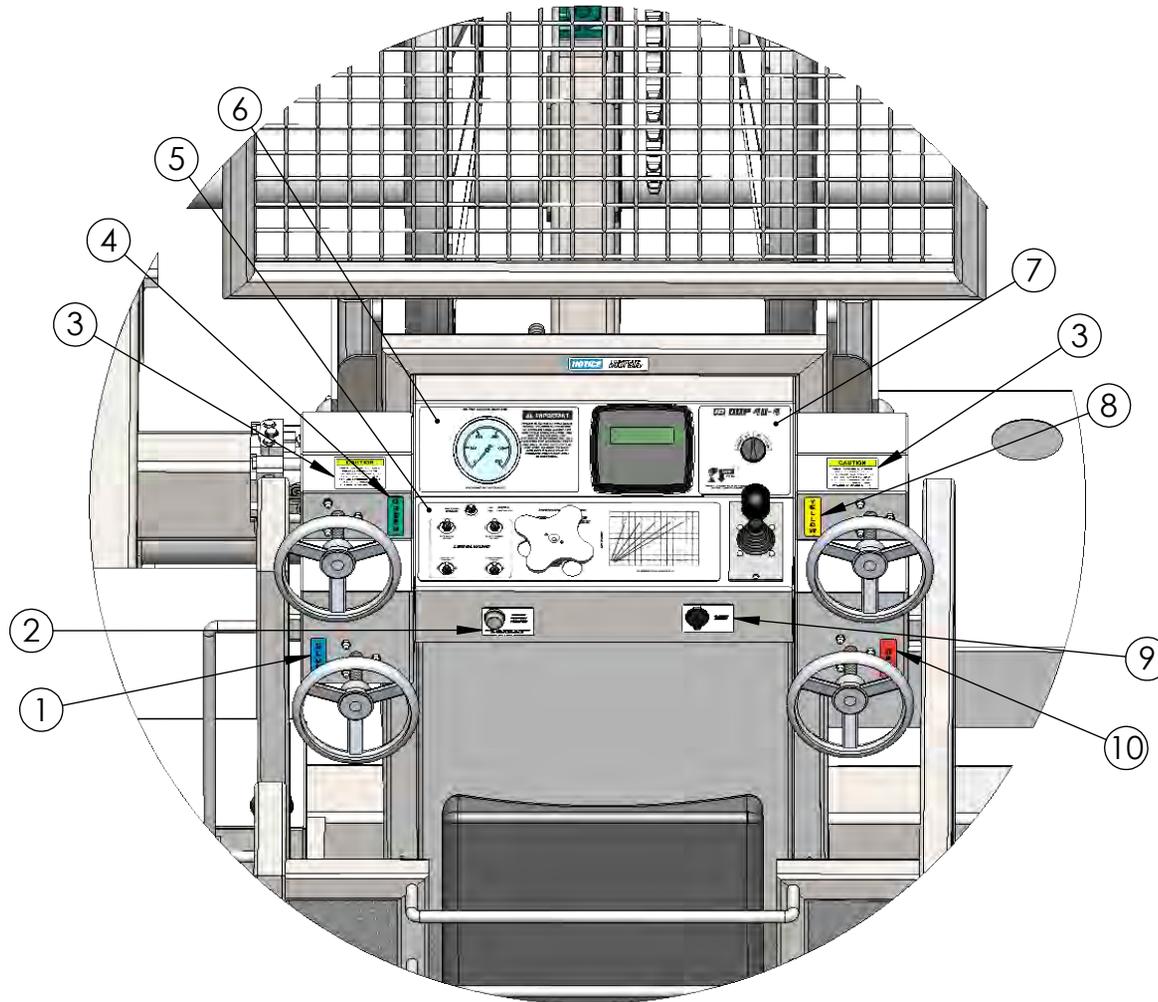

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|-------------------------------|------|
| 1 | D30063 | Decal, Blue Reel | 1 |
| 2 | D30068 | Decal, Payout Lockout Release | 1 |
| 3 | D30067 | Decal, Release Pressure | 4 |
| 4 | D30064 | Decal, Green Reel | 1 |
| 5 | D30074 | Decal, Lower Control | 1 |
| 6 | D30075 | Decal, Upper Pressure | 1 |
| 7 | D30076 | Decal, Upper Keyswitch | 1 |
| 8 | D30065 | Decal, Yellow Reel | 1 |
| 9 | D30083 | Decal, 12v Socket | 1 |
| 10 | D30062 | Decal, Red Reel | 1 |

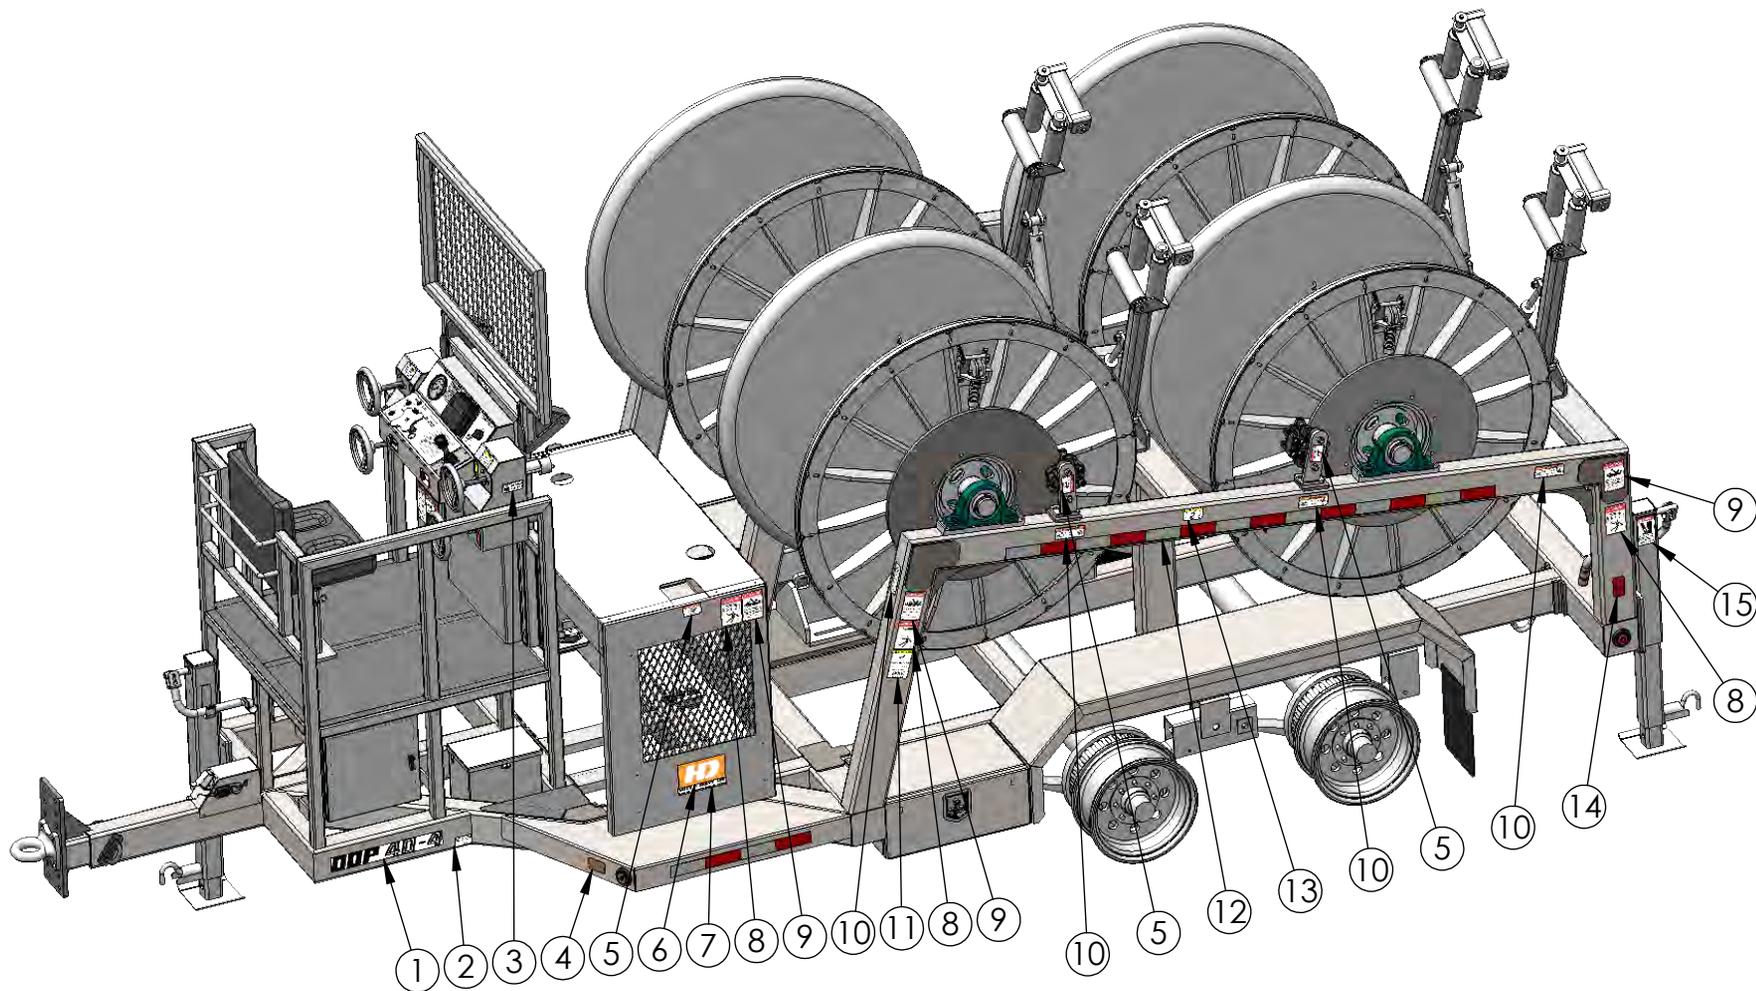

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|-------------|-----------------------------|------|
| 1 | D30073 | Decal, 40-4 Tongue | 2 |
| 2 | D30034 | Decal, Grounding Lug | 3 |
| 4 | R09044 | Reflector, Amber 2x3-1/2 | 2 |
| 5 | D30015 | Decal, Hot Surface | 5 |
| 6 | D30001 | HD Logo 6x9 | 1 |
| 7 | D30018 | Decal, HD 1/2" x 9" | 1 |
| 8 | D30036 | Decal, Electrocution Hazard | 6 |
| 9 | D30028 | Decal, Danger Twisty Man | 6 |
| 10 | D30042 | Decal, Keep Hands Clear | 10 |
| 11 | D30127 | Decal, Burn Hazard | 3 |
| 12 | T19001 | Red/White Reflective tape | 18 |
| 13 | D30067 | Decal, Release Pressure | 4 |
| 14 | R09043 | Reflector, Red 2x3-1/2 | 4 |
| 15 | D30026 | Decal, Danger Stand Clear | 3 |

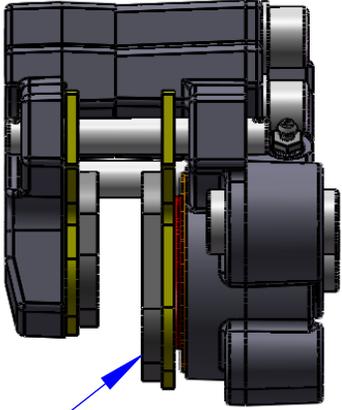


P01052 pad set
new linings are @5/16" thick

C28072 male quick connect fitting

Step 4: pump system up to @ 500psi and look for leaks. When finished, let the pressure in the system reach zero, then disconnect oil supply.

Step 2: attach pressurized hydraulic oil source to connector
ISO46 Hydraulic oil

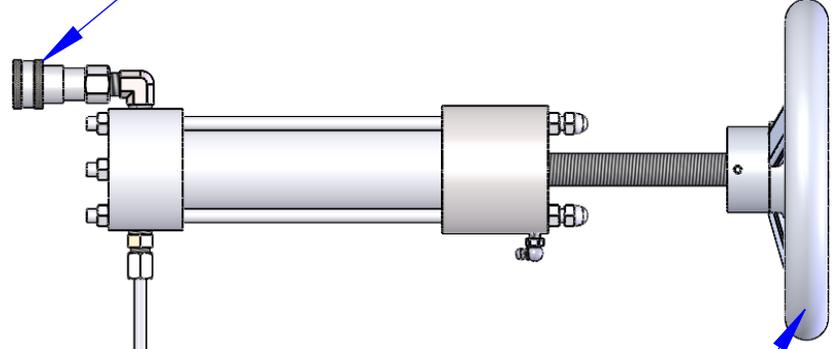

Step 3: crack bleeder and pump oil through system until no more air comes out of the caliper

Step 1: back handle all the way out, turn in 1-1/2 turns.

